

Manuals.plus /

› [Lenovo](#) /

› [Lenovo ThinkVision S24-4e Monitor User Manual](#)

## Lenovo S24-4e

# Lenovo ThinkVision S24-4e Monitor User Manual

Model: S24-4e

Brand: Lenovo

## 1. INTRODUCTION

The Lenovo ThinkVision S24-4e is a 23.8-inch Full HD monitor designed for professional use. It features a 100 Hz refresh rate, which can be manually adjusted to 48 Hz for power saving with less demanding content. The monitor offers a 3-side borderless display and includes TUV HW Low Blue Light certification to help reduce eye strain. Its adjustable tilt stand and VESA mount compatibility provide flexible setup options for various workspaces.

## 2. WHAT'S IN THE BOX

Please check that all items are present:

- ThinkVision S24-4e Widescreen LED Monitor
- HDMI Cable

## 3. SETUP

### 3.1 Monitor Assembly

The ThinkVision S24-4e monitor comes with a simple tilt stand that is easy to assemble. Follow the instructions provided in the quick setup guide included with your monitor to attach the stand base to the monitor panel.

For alternative mounting solutions, the monitor supports VESA mounts (100 x 100 mm). This allows you to attach the monitor to compatible monitor arms or wall mounts, and also supports direct attachment of a Tiny PC to the base.



Side view of the Lenovo ThinkVision S24-4e monitor, illustrating its adjustable tilt stand.

### **3.2 Connecting to a Computer**

To connect your monitor to a computer or other video source:

1. Ensure both the monitor and your computer are powered off.
2. Connect one end of the provided HDMI cable to the HDMI port on the monitor.
3. Connect the other end of the HDMI cable to the HDMI output port on your computer. If your computer uses a VGA port, use a VGA cable (not included) to connect to the monitor's VGA port.
4. Connect the power cable to the monitor's power input and then to a power outlet.
5. Power on your computer, then power on the monitor.



Rear view of the monitor, highlighting the connectivity ports.

## 4. OPERATING INSTRUCTIONS


### 4.1 Power On/Off

Press the power button, typically located on the bottom right bezel of the monitor, to turn the monitor on or off. The power indicator light will illuminate when the monitor is on.

### 4.2 On-Screen Display (OSD) Menu

The OSD menu allows you to adjust various monitor settings. Use the control buttons (usually located on the bottom or rear of the monitor) to navigate the menu. Common adjustments include:

- **Brightness/Contrast:** Adjust the overall luminance and difference between light and dark areas.
- **Color Settings:** Modify color temperature, gamma, and individual RGB levels.
- **Input Source:** Manually select between HDMI and VGA inputs.
- **Refresh Rate:** Adjust the display refresh rate. The monitor supports up to 100 Hz and can be manually set to 48 Hz for power saving.
- **Low Blue Light:** Enable or disable the Low Blue Light feature to reduce eye strain.

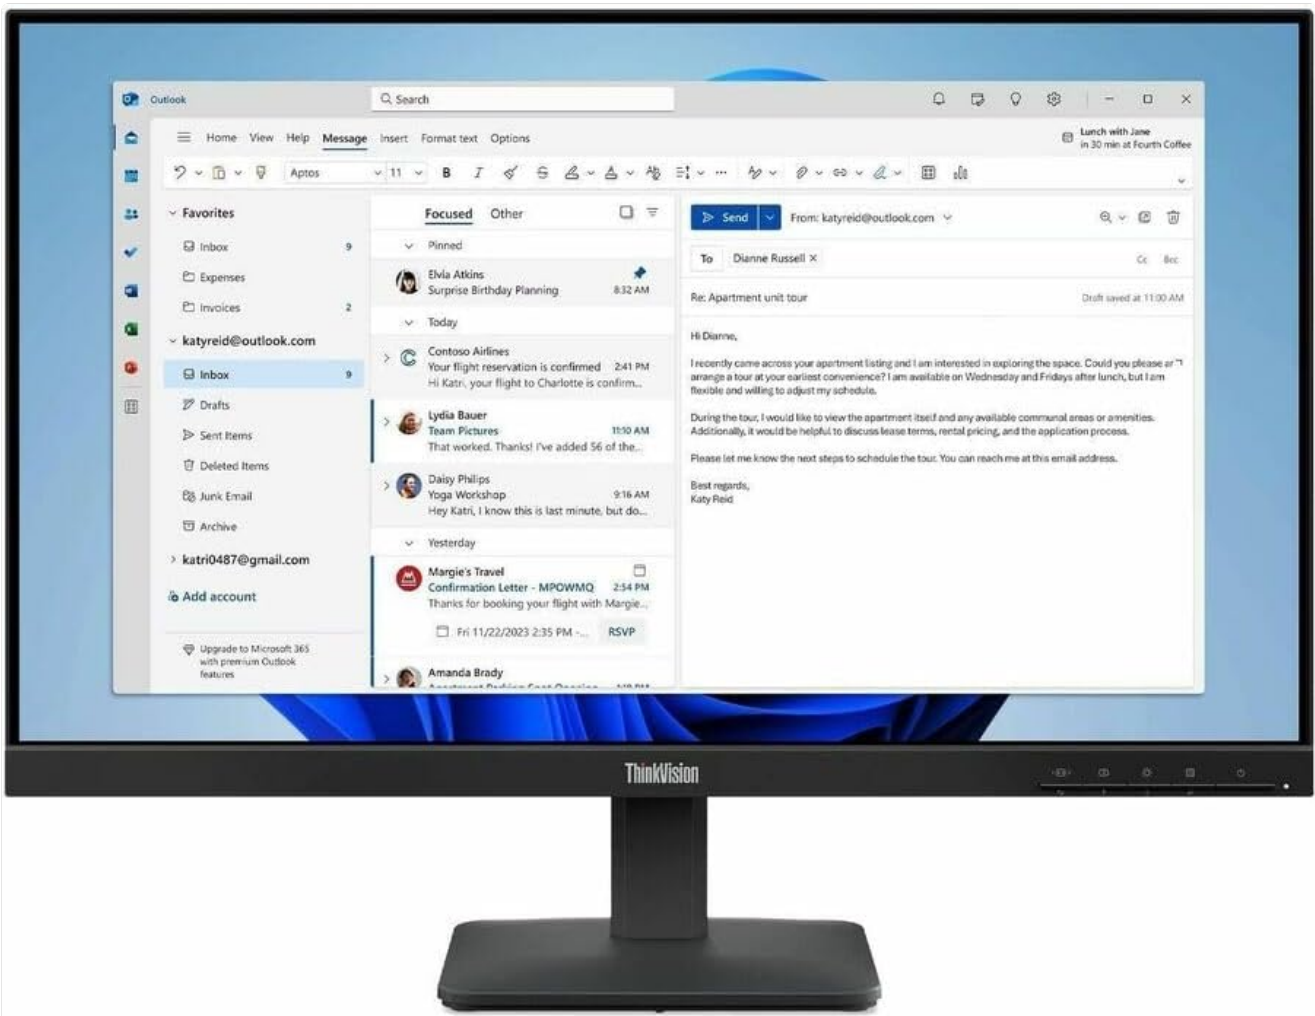

The ThinkVision S24-4e monitor in operation, displaying typical desktop content.

### 4.3 Adjusting Viewing Angle

The monitor stand allows for tilt adjustment. Gently hold the top and bottom edges of the monitor panel and tilt it forwards or backwards to achieve your desired viewing angle. Do not force the panel beyond its designed range of motion.

## 5. MAINTENANCE

### 5.1 Cleaning the Monitor

To ensure the longevity and optimal performance of your monitor, regular cleaning is recommended.

- **Screen:** Gently wipe the screen with a soft, lint-free cloth. For stubborn marks, lightly dampen the cloth with water or a non-abrasive, monitor-safe cleaning solution. **Do not spray liquid directly onto the screen.**
- **Casing:** Use a soft, dry cloth to clean the monitor casing. Avoid harsh chemicals or abrasive cleaners.

Always unplug the monitor from the power outlet before cleaning.

## 6. TROUBLESHOOTING

If you encounter issues with your monitor, refer to the following common troubleshooting steps:

- **No Power:**

- Ensure the power cable is securely connected to both the monitor and a working power outlet.
- Check the power button status on the monitor.

- **No Image/Signal:**

- Verify that the video cable (HDMI or VGA) is correctly connected to both the monitor and your computer.
- Ensure the correct input source is selected in the monitor's OSD menu.
- Restart your computer.

- **Flickering or Distorted Image:**

- Check the video cable for damage or loose connections.
- Adjust the refresh rate or resolution settings on your computer.
- Ensure your graphics drivers are up to date.

- **Image Too Dark/Bright:**

- Adjust brightness and contrast settings through the OSD menu.

## 7. SPECIFICATIONS

<b>Brand</b>	Lenovo
<b>Model Number</b>	S24-4e
<b>Screen Size</b>	23.8 Inches
<b>Resolution</b>	Full HD (1920 x 1080 Pixels)
<b>Refresh Rate</b>	100 Hz
<b>Response Time</b>	4 Milliseconds
<b>Display Type</b>	LED, IPS Technology
<b>Brightness</b>	250 Nit (typical)
<b>Contrast Ratio</b>	1,300:1
<b>Viewing Angle</b>	178 Degrees (H/V)
<b>Connectivity</b>	1x HDMI, 1x VGA
<b>Mounting Type</b>	VESA 100 x 100 mm
<b>Features</b>	Anti-glare, Flicker-Free, Low Blue Light, Tilt Adjustment, sRGB
<b>Item Dimensions (D x W x H)</b>	1.7"D x 21.3"W x 12.8"H (without stand)
<b>Item Weight</b>	10.2 Pounds
<b>Power Consumption</b>	16 Watts (typical)

## **8. WARRANTY INFORMATION**

This Lenovo ThinkVision S24-4e monitor is covered by a 3-year manufacturer's warranty. This warranty typically covers defects in materials and workmanship under normal use. For specific terms, conditions, and limitations, please refer to the warranty documentation included with your product or visit the official Lenovo support website.

## **9. SUPPORT**

For further assistance, technical support, driver downloads, or to access frequently asked questions (FAQs), please visit the official Lenovo support website. You can typically find support resources by searching for your monitor model (S24-4e) on their website.

Visit [Lenovo Support Website](#)