

[Manuals.plus](#) /

> [pofoto](#) /

> pofoto PD16 Portable TV/DVD Player User Manual

pofoto PD16

pofoto PD16 Portable TV/DVD Player User Manual

Model: PD16 | Brand: pofoto

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation of your pofoto PD16 Portable TV/DVD Player. This device features a 15.6-inch HD swivel screen, a built-in ATSC tuner for local TV, FM radio, and supports multiple disc and media formats. It includes HDMI input, USB, Micro SD, and AV output capabilities, powered by a rechargeable battery for portable use.



Figure 1: The pofoto PD16 Portable TV/DVD Player with its 15.6-inch HD screen.

2. SETUP

2.1 Unboxing and Package Contents

Carefully remove all items from the packaging. Verify that all components listed below are present:

- Portable TV/DVD Player Combo
- User's Guide, Quick Start Guide
- TV Antenna, TV connector, Remote Control
- AV Cable, Car Charger, Power Adapter

PACKAGE CONTENT

15.6" Portable DVD/TV Player
Remote Control
TV Antenna
TV Connector
Car Charger
3-in-1 AV Cable
User Manual
Quick Start Guide



Figure 2: Included accessories with the pofoto PD16 player.

2.2 Powering On the Device

To power on the player, ensure it is either charged or connected to a power source. Slide the 'OFF/ON' switch located on the side of the unit to the 'ON' position. The screen will illuminate, displaying the pofoto logo.

Video 1: Demonstrates how to power on the pofoto PD16 and navigate basic functions.

3. OPERATING INSTRUCTIONS

3.1 Selecting Playback Modes

The pofoto PD16 supports various input sources. To switch between modes (ATSC TV, DVD, Card, AV, HDMI, USB, FM Radio), press the 'MODE' button on the player or remote control and select your desired source from the on-screen menu.

Video 2: An overview of the pofoto 15.6" Portable Entertainment system, highlighting DVD, HDMI IN, and AV features.

3.2 DVD Playback

Open the disc cover and carefully place a DVD, DVD±R/±RW, CD-R/RW, VCD, or SVCD disc onto the spindle. Close the cover. The player will automatically detect the disc and begin playback. The device supports region-free playback and features a last-memory function to resume from where you left off.



Figure 3: Inserting a DVD into the player's disc tray.

3.3 TV and FM Radio

Connect the included TV antenna to the antenna port on the side of the player. Select 'ATSC' mode for TV or 'FM Radio' mode for radio. Perform a channel scan to find available local stations. Reception quality may vary based on location and environmental factors.

Watch Free TV Outdoors

Enjoy local TV and radio even in the great outdoors



Figure 4: Enjoying local TV channels outdoors with the portable player.

3.4 HDMI In, USB, Micro SD, and AV Out

The player features multiple connectivity options:

- **HDMI IN:** Connect external devices like a Fire TV Stick, Roku, or gaming console to display content on the player's screen. (Note: Streaming devices and subscriptions are not included; Wi-Fi is required for streaming.)
- **USB/Micro SD:** Insert a USB drive or Micro SD card (up to 512GB) to play local videos, music, photos, and text files.
- **AV OUT:** Use the included AV cable to connect the player to a larger television or monitor for an expanded viewing experience.

HDMI IN for More Ways to Play

Plug in your Fire Stick, Xbox, or mirror—one port, endless fun

HDMI



Firestick



PlayStation



Xbox



Switch



Phone

Figure 5: Using the HDMI IN port to connect a streaming device.

Reliable Power Anywhere

5000mAh battery keeps the fun going for up to 6 hours



Power Adapter



5000mAh Battery



Car Charger



Figure 6: Detailed view of the player's input and output ports.

4. MAINTENANCE

4.1 General Care

To ensure the longevity of your player, keep it clean and free from dust. Use a soft, dry cloth to wipe the screen and exterior. Avoid using harsh chemicals or abrasive cleaners. Handle discs by their edges to prevent scratches.

4.2 Battery Care

The player is equipped with a 5000mAh rechargeable battery. For optimal battery life, avoid fully discharging the battery frequently. If storing the device for an extended period, charge it to approximately 50% and store in a cool, dry place.

5. TROUBLESHOOTING

If you encounter issues with your pofoto PD16, refer to the following common solutions:

- **No Power:** Ensure the power switch is in the 'ON' position and the device is either charged or connected to a working power adapter/car charger.
- **Disc Not Playing:** Check if the disc is clean and free of scratches. Ensure it is a supported format (not Blu-ray or pirated discs). Try a different disc.
- **Poor TV/FM Reception:** Adjust the position of the antenna. Try placing the antenna near a window or in a higher location. Avoid obstacles like large buildings or mountains, and reduce interference from Wi-Fi routers, microwaves, or other high-power appliances. Visit the FCC DTV Maps page for channel availability in your area.
- **No Sound/Picture:** Verify that the correct input source is selected. Check all cable connections (AV, HDMI). Adjust volume settings.

For further assistance, please contact customer support. You can also refer to the video below for tips on improving TV signal reception.

Video 3: Tips for improving TV signal reception on portable devices.

6. SPECIFICATIONS

Brand	pofoto
Model Number	PD16
Screen Size	15.6 Inches
Display Type	LCD
Native Resolution	1366x768
Media Type Support	AVI, VOB, MPEG, XVID, MP4, WMA, FLV, DAT, DVD, CD, SVCD, VCD, DVD \pm R(\pm RW), JPEG, BMP, MP3, WMA (Does not support Blu-ray)
Connectivity Technology	ATSC, AV OUT, HDMI IN, TF (Micro SD), USB
Compatible Devices	Headphone, Projector, Speaker, Television
Item Dimensions (L x W x H)	14.9"L x 10.6"W x 1.9"H
Item Weight	5.5 Pounds

7. WARRANTY AND SUPPORT

7.1 Warranty Information

The pofoto PD16 Portable TV/DVD Player comes with a 24-month warranty. Please retain your proof of purchase for warranty claims.

7.2 Customer Support

For any setup questions, issues with playback, signal reception problems, or discs not playing, our customer care team is available to provide assistance within 24 hours. In cases where troubleshooting is insufficient, an eligible replacement may be provided.

To activate your warranty or for support, please contact: help@pofotovip.com