

Rafow J17

RAFOW Handheld Electric Milk Frother User Manual

Model: J17

INTRODUCTION

Thank you for choosing the RAFOW Handheld Electric Milk Frother. This device is designed to help you create barista-quality foam for your favorite beverages, including lattes, cappuccinos, matcha, and hot chocolate. With its rechargeable design, multiple speed settings, and dual detachable whisks, it offers versatility and convenience for your daily drink preparation.



Image: The RAHOW Handheld Electric Milk Frother in white, demonstrating its ability to create fine milk foam for coffee.


PRODUCT COMPONENTS

The RAHOW Handheld Electric Milk Frother comes with the following components:

- **Frother Main Unit:** The handheld motor unit with control buttons.
- **Spring Whisk:** Ideal for frothing milk and mixing powdered drinks.
- **Balloon Whisk:** Suitable for whisking eggs, cream, and thicker liquids.
- **Stainless Steel Stand:** For convenient storage of the frother and whisks.
- **USB-C Charging Cable:** For recharging the internal battery.
- **User Manual:** This document.

Dual Detachable Whisks

Mix things up with versatile options

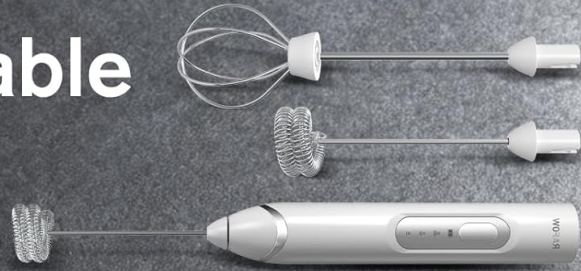

SPRING WHISK



Milk Froth



Coffee



Protein Shakes



Eggs



Cream



Chocolate



BALLOON WHISK

Image: The RAFOW frother unit shown with its two detachable whisk attachments: a spring whisk and a balloon whisk.

INITIAL SETUP

Charging the Frother

Before first use, fully charge the frother. Connect the provided USB-C cable to the charging port on the frother and plug the other end into a compatible USB power adapter (not included). The charging indicator light will illuminate during charging and change once fully charged.

Rechargeable Design

For eco-friendly, portable power



USB-C Port



Charging Indicator



Low Battery Indicator

Days
80



Image: The RAFOW frother unit connected to a USB-C charging cable, illustrating its rechargeable design.

Attaching the Whisks

To attach a whisk, align the whisk shaft with the connector on the frother unit and push firmly until it clicks into place. To detach, pull the whisk gently away from the unit. Ensure the whisk is securely attached before operation.

OPERATING INSTRUCTIONS

Power On/Off and Speed Selection

To turn on the frother, press and hold the power button for approximately 3 seconds. The frother will start at the lowest speed. Press the power button again to cycle through the three available speeds (Low, Medium, High). To turn off the frother, press and hold the power button for 3 seconds at any speed setting.

Three-Speed Precision Control

Easily get the foam or mixing you want



Image: The RAFOW frother highlighting its three-speed precision control for different frothing needs.

Frothing Technique

1. **Prepare your liquid:** For best results with milk, use whole milk and heat it to approximately 50°C (122°F) for a denser, silkier foam. Fill your container less than halfway to prevent spills.
2. **Immerse the whisk:** Submerge the whisk head approximately 1/3 deep into the liquid.
3. **Start frothing:** Turn on the frother and select your desired speed. Keep the whisk fully submerged while adjusting its height as foam develops.
4. **Achieve desired consistency:** Continue frothing for about 15-20 seconds for smooth foam. For richer texture, froth for approximately 1 minute.
5. **Stop:** Once the desired consistency is reached, press and hold the power button for 3 seconds to stop the frother.



Image: A visual guide detailing container selection, milk preparation, and frothing technique for optimal results.

Official Product Video: Operation and Features

Your browser does not support the video tag.

Video: This official product video demonstrates the RAFOW Handheld Electric Milk Frother in use, showcasing its one-touch frothing, three-speed versatility, dual detachable whisks, and USB-C charging. It provides a visual guide to operating the device and achieving various frothing results.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your frother.

Cleaning the Whisks

The detachable whisks are dishwasher safe. Alternatively, for quick cleaning, immerse the whisk head in a glass of warm, soapy water and briefly activate the frother to spin clean. Rinse thoroughly with clean water afterward.

Cleaning the Main Unit

Important: Do not immerse the main frother unit in water. Wipe the main unit with a damp cloth. Ensure it is completely dry before storage or next use.



Image: A visual guide demonstrating two cleaning methods: spinning the whisk in water and placing detachable whisks in a dishwasher.

Storage

Use the provided stainless steel stand to store the frother and its whisks neatly and conveniently when not in use.

TROUBLESHOOTING

If you encounter any issues with your RAFOW Handheld Electric Milk Frother, please refer to the following table:

Problem	Possible Cause	Solution
Frother does not turn on.	Low battery or incorrect power-on procedure.	Ensure the frother is fully charged. Press and hold the power button for 3 seconds to turn it on.
Weak frothing or inconsistent foam.	Low battery, incorrect speed setting, or improper technique.	Recharge the frother. Select a higher speed setting. Ensure the whisk is submerged correctly and moved gently. Use whole milk for best results.
Whisk detaches during use.	Whisk not securely attached.	Ensure the whisk is pushed firmly into the frother unit until it clicks into place.

PRODUCT SPECIFICATIONS

Brand: Rafow

Model Name: milk frother (J17)

Color: White

Material: Acrylonitrile Butadiene Styrene (ABS), Stainless Steel

Product Dimensions: 1"W x 10"H

Item Weight: 8.3 ounces

Power Source: Battery Powered (Rechargeable via USB-C)

Wattage: 4 watts

Number of Speed Settings: 3

Included Components: Power Cable, Stand, User Manual

Product Care Instructions: Hand Wash Only (main unit), Dishwasher Safe (whisks)

WARRANTY AND CUSTOMER SUPPORT

For warranty information or customer support, please refer to the product packaging or contact your retailer. Keep your purchase receipt as proof of purchase for any warranty claims.