

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Cecotec](#) /

› [Cecotec ReadyWarm 2077 Max Force Smart Fan Heater User Manual](#)

Cecotec ReadyWarm 2077 Max Force Smart

Cecotec ReadyWarm 2077 Max Force Smart Fan Heater User Manual

Model: ReadyWarm 2077 Max Force Smart (A01_EU01_116947)

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec ReadyWarm 2077 Max Force Smart fan heater. Please read these instructions carefully before use and retain them for future reference.

SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic safety precautions:

- Always ensure the heater is placed on a stable, flat surface.
- Do not cover the heater. Covering can lead to overheating and fire.
- Keep the heater away from water and other liquids. Do not operate in damp environments.
- Do not insert objects into the heater's openings.
- Unplug the heater from the power outlet when not in use or before cleaning.
- Keep children and pets away from the heater.
- Do not use the heater near flammable materials.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons to avoid a hazard.
- This appliance is equipped with an automatic safety shutdown system in case of tipping or overheating.

PRODUCT COMPONENTS

The Cecotec ReadyWarm 2077 Max Force Smart fan heater includes the main unit and a remote control.

Main Unit



This image shows the front of the fan heater, highlighting the air outlet grille and the Cecotec logo. The compact design allows for easy placement in various rooms.



This image displays the top control panel with touch buttons and the LED screen, used for adjusting settings directly on the unit.

Remote Control



The remote control allows for convenient adjustment of the heater's functions from a distance. Ensure line of sight to the heater's sensor for optimal operation.

SETUP

Unpacking

Carefully remove the fan heater from its packaging. Retain the packaging for storage or transport if needed.

Placement

Place the heater on a firm, level surface. Ensure there is adequate space around the heater for proper air circulation (at least 30 cm from walls and furniture). Do not place it directly under a power outlet.

Power Connection

Plug the power cord into a suitable electrical outlet (240V). Ensure the outlet is easily accessible.

OPERATING INSTRUCTIONS

Power On/Off

Press the power button on the control panel or remote control to turn the heater on or off.

Mode Selection

The heater features 3 operating modes:

- **Cool:** Fan-only mode for air circulation without heat.
- **Warm:** Low heat setting.
- **Hot:** High heat setting (up to 2000W).

Select the desired mode using the mode button on the control panel or remote control.

Adjusting Power Levels and Thermostat

The heater offers 2 power levels. Use the thermostat control to set your desired room temperature. The heater will automatically adjust its operation to maintain the set temperature.

Using the Remote Control

The remote control provides full functionality to operate the heater from a distance. Point the remote control directly at the heater's sensor.

LED Display

The LED display on the unit shows the current settings, including the selected mode and temperature.

MAINTENANCE

Cleaning

Before cleaning, always unplug the heater and allow it to cool down completely.

- Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Use a vacuum cleaner with a brush attachment to gently remove dust from the air inlet and outlet grilles.
- Do not immerse the heater in water or any other liquid.

Storage

If storing the heater for an extended period, unplug it, clean it thoroughly, and store it in its original packaging in a dry, cool place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not turn on.	Not plugged in; power outlet malfunction; power button not pressed; safety switch activated.	Ensure the power cord is securely plugged in. Check the power outlet with another appliance. Press the power button. Check if the heater has tipped over or overheated.
No heat output.	"Cool" mode selected; thermostat set too low.	Select "Warm" or "Hot" mode. Increase the thermostat setting.
Heater turns off unexpectedly.	Overheat protection activated; tip-over switch activated.	Unplug the heater, allow it to cool down for 30 minutes, and ensure air inlets/outlets are not blocked. Ensure the heater is on a stable, upright surface.

Problem	Possible Cause	Solution
Remote control not working.	Batteries depleted; obstruction between remote and heater.	Replace remote control batteries. Ensure there is a clear line of sight to the heater's sensor.

SPECIFICATIONS

Specification	Detail
Brand	Cecotec
Model Number	A01_EU01_116947
Color	White
Dimensions (L x W x H)	15 x 21.5 x 27.5 cm
Power	2000 Watts
Voltage	240 Volts
Operating Modes	3 (Cool, Warm, Hot)
Special Feature	Portable
Item Weight	1.12 Kilograms
Power Source	Electric Cord
Heating Method	Forced Air
Usage	Indoor

WARRANTY AND SUPPORT

Warranty Information

This product is covered by a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions. Keep your proof of purchase for warranty claims.

Customer Support

For technical assistance, troubleshooting beyond this manual, or warranty inquiries, please contact Cecotec customer support. Contact details can typically be found on the official Cecotec website or on your product packaging.