

Cecotec A01_EU01_116948

Cecotec ReadyWarm 5310 PowerBox Ceramic Wall-Mounted Heater User Manual

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Cecotec ReadyWarm 5310 PowerBox Ceramic Wall-Mounted Heater. Please read these instructions carefully before use and retain them for future reference. This ceramic heater offers 2000W of power, an LED display, remote control, three operating modes, a 24-hour timer, oscillation function, and IP23 protection, making it suitable for various indoor environments, including bathrooms.

2. SAFETY INSTRUCTIONS

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury.

- Read all instructions before using the heater.
- Do not cover the heater to prevent overheating.
- Keep flammable materials at least 1 meter (3 feet) away from the heater.
- Do not use the heater in areas where gasoline, paint, or flammable liquids are stored.
- Ensure the power supply voltage matches the rating label on the heater.
- Unplug the heater from the power outlet when not in use or before cleaning.
- Do not operate the heater with a damaged cord or plug, or if the heater malfunctions or has been dropped or damaged in any manner.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The IP23 rating indicates protection against water spray, making it suitable for bathrooms, but it should not be submerged in water.
- Ensure proper wall mounting as per installation instructions to prevent the heater from falling.

3. PACKAGE CONTENTS

Verify that all components are present and in good condition upon unpacking.

- 1 x Cecotec ReadyWarm 5310 PowerBox Ceramic Wall-Mounted Heater

- 1 x Remote Control
- 1 x Wall Mounting Kit (screws, anchors)
- 1 x User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the main parts of your heater.



Figure 4.1: Front view of the Cecotec ReadyWarm 5310 PowerBox Ceramic heater, highlighting its sleek design and the integrated LED display.



Figure 4.2: A detailed view of the heater's LED display, indicating the current temperature (31 degrees) and time (10:00), along with mode icons.



Figure 4.3: This image displays the remote control for the Cecotec ReadyWarm 5310 heater, featuring buttons for power, mode selection, timer, oscillation, and temperature adjustment.

5. SETUP AND INSTALLATION

The Cecotec ReadyWarm 5310 is designed for wall mounting. Follow these steps for secure installation.

5.1 Choosing a Location

- Select a wall location that is clear of obstructions and at least 1 meter (3 feet) from any flammable materials.
- Ensure there is a suitable power outlet nearby.
- For bathroom installation, ensure the location complies with local electrical safety regulations and the IP23 rating.

5.2 Wall Mounting Procedure

1. Mark the desired mounting points on the wall using the heater's mounting bracket as a template.
2. Drill holes at the marked points.
3. Insert the provided wall anchors into the drilled holes.
4. Secure the mounting bracket to the wall using the provided screws.
5. Carefully hang the heater onto the mounting bracket, ensuring it is securely seated.

5.3 Electrical Connection

Plug the heater's power cord into a grounded electrical outlet. Ensure the outlet is easily accessible for disconnecting power when needed.



Figure 5.1: The Cecotec ReadyWarm 5310 heater is shown mounted on a wall above a sofa, demonstrating its integration into a living space.

6. OPERATING INSTRUCTIONS

The heater can be operated using the control panel on the unit or the included remote control.

6.1 Power On/Off

- Press the **Power** button (*symbol: circle with vertical line*) on the unit or remote control to turn the heater on or off.

6.2 Mode Selection

The heater features three operating modes:

- **Eco Mode (1000W):** Provides efficient heating at a lower power consumption.
- **Turbo Mode (2000W):** Delivers maximum heating power for rapid warming.
- **Fan Mode:** Circulates air without heating, useful for ventilation.

Press the **Mode** button (*symbol: three horizontal lines*) on the remote control to cycle through the modes.

6.3 Temperature Adjustment

Use the **Up** (*symbol: triangle pointing up*) and **Down** (*symbol: triangle pointing down*) buttons on the remote control to set your desired temperature. The LED display will show the set temperature.

6.4 Timer Function

The 24-hour timer allows you to program the heater to turn off automatically after a set period.

- Press the **Timer** button (*symbol: clock*) on the remote control.
- Use the **Up** and **Down** buttons to adjust the desired operating duration (from 1 to 24 hours).
- The heater will automatically switch off once the set time expires.

6.5 Oscillation Function

Activate the oscillation function to distribute heat more evenly across the room.

- Press the **Oscillation** button (*symbol: circular arrows*) on the remote control to turn oscillation on or off.

6.6 Child Lock

The child lock function prevents accidental changes to settings.

- Press and hold the **Child Lock** button (*symbol: padlock*) on the remote control for a few seconds to activate or deactivate it.

7. MAINTENANCE

Regular cleaning and maintenance will ensure optimal performance and longevity of your heater.

7.1 Cleaning

1. Always unplug the heater and allow it to cool completely before cleaning.
2. Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.
3. Do not allow water to drip into the interior of the heater.
4. Clean the air inlet and outlet grilles with a vacuum cleaner or a soft brush to remove dust and debris.

7.2 Storage

If storing the heater for an extended period, ensure it is clean and dry. Store it in a cool, dry place, preferably in its original packaging, away from direct sunlight and moisture.

8. TROUBLESHOOTING

If you encounter issues with your heater, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Heater does not turn on.	No power supply; Power button not pressed; Overheating protection activated.	Check power cord connection and outlet; Press the Power button; Unplug, let cool for 30 minutes, then restart.
No heat output.	Fan mode selected; Temperature setting too low.	Switch to Eco or Turbo mode; Increase the temperature setting.

Problem	Possible Cause	Solution
Remote control not working.	Batteries depleted; Obstruction between remote and heater; Remote not aimed correctly.	Replace batteries; Remove obstructions; Aim remote directly at the heater's receiver.
Unusual noise.	Dust accumulation; Loose parts.	Clean the heater; If noise persists, contact customer support.

9. SPECIFICATIONS

Technical details of the Cecotec ReadyWarm 5310 PowerBox Ceramic Wall-Mounted Heater.

Brand: Cecotec

Model: A01_EU01_116948

Power: 2000 W

Voltage: 240 V

Dimensions (L x W x H): 54 x 13 x 18 cm

Weight: 2 kg

Protection Rating: IP23

Coverage Area: Up to 20 m²

Special Features: LED Display, Remote Control, 3 Operating Modes (Eco, Turbo, Fan), 24-hour Timer, Oscillation Function, Child Lock, Wall Mounting Kit.

10. WARRANTY AND SUPPORT

This product comes with a standard manufacturer's warranty. For warranty claims, technical support, or service inquiries, please contact Cecotec customer service through their official website or your point of purchase. Keep your proof of purchase for warranty validation.

For further assistance, please visit the official Cecotec website: www.cecotec.com