

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Electrolux](#) /

› [Electrolux EES68525L Fully Integrated Dishwasher User Manual](#)

## Electrolux EES68525L

# Electrolux EES68525L Fully Integrated Dishwasher User Manual

Model: EES68525L

## 1. INTRODUCTION AND OVERVIEW

Thank you for choosing an Electrolux appliance. This user manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Electrolux EES68525L fully integrated dishwasher. Please read these instructions carefully before using the appliance and keep them for future reference.

The Electrolux EES68525L is a 60 cm fully integrated dishwasher designed to blend seamlessly into your kitchen cabinetry. It offers a capacity of 14 place settings and features an intuitive touch control panel with an LED display. Key features include the AirDry drying system, Aquastop safety, and a range of wash programs to suit various needs.

## 2. SAFETY INFORMATION

Before installation and use, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damages resulting from incorrect installation or use. Always keep the instructions in a safe and accessible location for future reference.

### General Safety

- This appliance is intended for domestic use only.
- Do not allow children to play with the appliance.
- Keep all packaging materials away from children.
- Ensure the appliance is properly earthed.
- Do not open the door during operation, especially during the hot wash cycle.
- Always use dishwasher-safe detergents and rinse aids.

## 3. INSTALLATION

The Electrolux EES68525L is a fully integrated dishwasher, meaning it is designed to be installed within your kitchen cabinetry, concealed behind a furniture door. Professional installation is recommended to ensure proper

fitting and connection to water and electrical supplies.

## Dimensions and Placement

Ensure the installation space meets the following requirements:

- **Appliance Width:** 596 mm
- **Appliance Depth:** 560 mm
- **Appliance Height:** 818 mm
- **Compartment Width:** 60 cm
- **Compartment Depth:** 56 cm
- **Compartment Height:** 81.8 cm

The appliance features a sliding door hinge and a self-balancing hinge for easy integration with your kitchen furniture panel.

## Water and Electrical Connections

The dishwasher is equipped with an Aquastop safety system to prevent water leaks. Connect the water inlet hose to a cold water tap and ensure the drain hose is properly installed into a suitable drain. The appliance requires a standard electrical connection. Refer to the electrical diagram in the full technical manual for detailed wiring instructions.

## 4. OPERATING INSTRUCTIONS

---

Your Electrolux EES68525L dishwasher is designed for ease of use with its touch control panel and LED display.

### Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to your dishes. The dishwasher can accommodate up to 14 place settings.



**Image:** Interior view of the Electrolux EES68525L dishwasher, showing the upper and lower racks designed to hold various dishes, glasses, and cutlery. The spray arms are visible in the center.

Arrange dishes so that water can reach all surfaces. Avoid overcrowding and ensure that items do not block the spray arms. Place larger items in the lower basket and delicate items like glasses in the upper basket.

## Adding Detergent and Rinse Aid

Fill the detergent dispenser with the appropriate amount of dishwasher detergent according to the program selected and the soil level of your dishes. Add rinse aid to the dedicated dispenser to ensure streak-free drying and improved shine.


## Selecting a Program

The dishwasher offers 8 wash programs, including:

- 30min 60°C
- 60min

- 120min
- AutoSense
- Eco
- Pre-rinse
- Rapid

Use the touch control panel to select your desired program. The LED display will show the selected program and estimated cycle time.

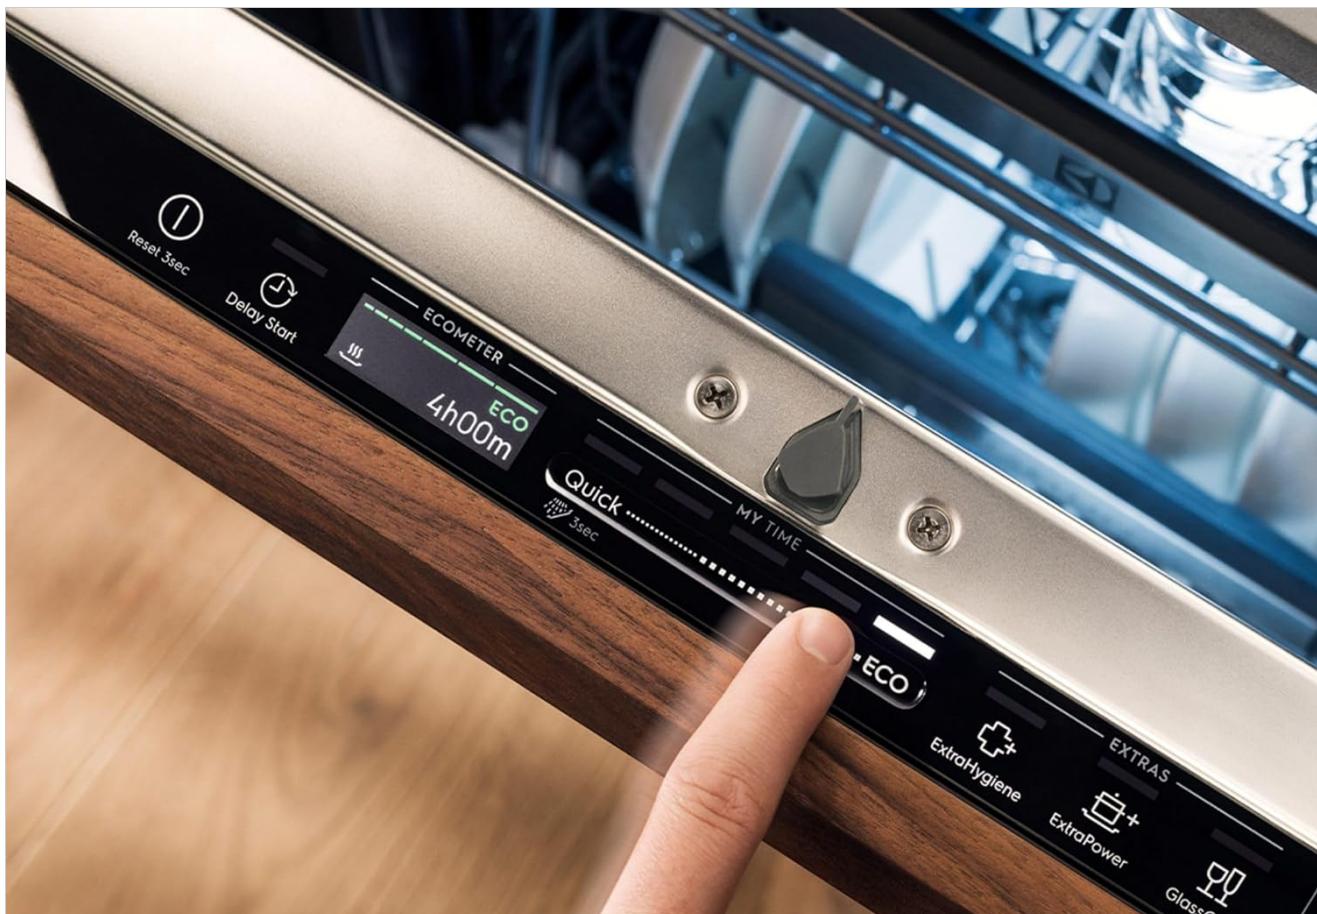

## Risparmia energia

L'ecometro ti guida visivamente nella scelta del programma più efficiente dal punto di vista idrico ed energetico

**Image:** A close-up of the Electrolux EES68525L dishwasher's black touch control panel, showing various program options like 'ECO', 'Quick', 'My Time', 'ExtraHygiene', 'ExtraPower', and 'GlassCare'. A finger is shown selecting the 'ECO' program.

You can also use the 'My Time' function to adjust the cycle duration. The 'ExtraPower' option can be selected for heavily soiled items.

### Official Product Video: Electrolux QuickSelect Dishwasher

Your browser does not support the video tag.


This video demonstrates the QuickSelect feature of Electrolux dishwashers, allowing users to easily select and customize wash cycles with a simple touch, ensuring optimal settings for every load.

## Starting a Cycle and Delay Start

Press the Start button to begin the wash cycle. The dishwasher also features a delay start function, allowing you to postpone the start of the cycle from 1 to 24 hours.

## AirDry Drying System

The AirDry technology automatically opens the dishwasher door by 10 cm at the end of the drying cycle. This allows natural air to circulate, improving drying performance and reducing energy consumption.

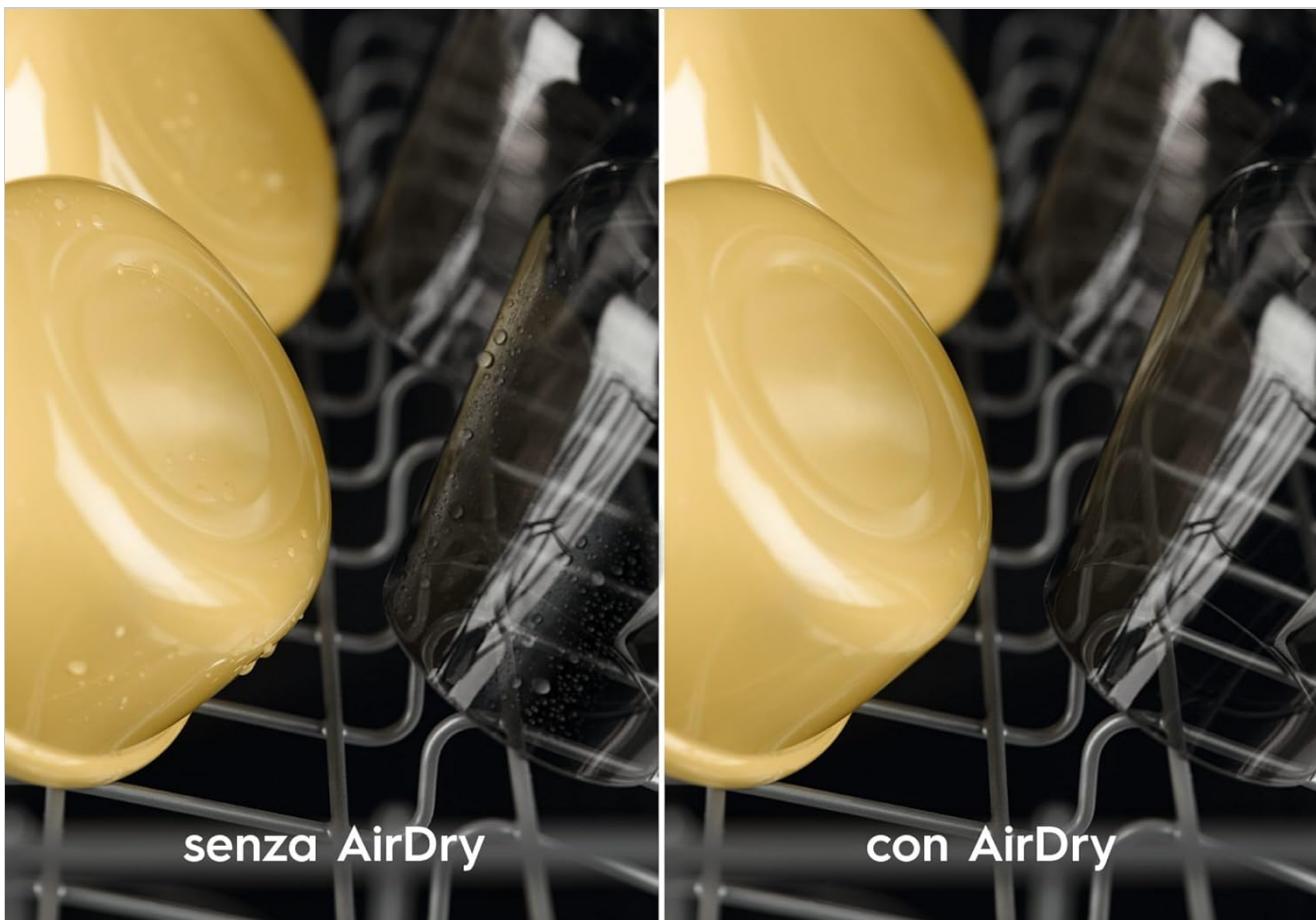

### Piatti perfettamente asciutti

La tecnologia AirDry asciuga le stoviglie utilizzando l'aria naturale: ottimi risultati e meno energia

**Image:** A visual comparison illustrating the effectiveness of AirDry technology. The left side shows glasses with visible water droplets after a wash cycle without AirDry, while the right side shows the same glasses perfectly dry and sparkling after using AirDry.

### Official Product Video: AEG AirDry - Natural Drying

Your browser does not support the video tag.

This video explains how AEG's AirDry technology works, showing the automatic door opening at the end of the cycle to allow natural airflow for optimized drying results and reduced energy consumption.

## 5. MAINTENANCE AND CARE

Regular maintenance ensures the longevity and optimal performance of your dishwasher.

### Cleaning Filters

Periodically check and clean the filters located at the bottom of the dishwasher tub. Remove any food particles or debris to prevent blockages and ensure efficient washing.

### Cleaning Spray Arms

The dishwasher is equipped with powerful spray arms to ensure thorough cleaning. Occasionally check the spray arm nozzles for any blockages and clean them if necessary.



### Piatti sempre impeccabili

Copertura del getto fino a 3 volte migliore senza usare acqua in più

**Image:** A detailed view of the lower section of the Electrolux EES68525L dishwasher, highlighting the rotating spray arm and the filter system at the base of the tub. This area is crucial for effective water distribution and debris collection.

## External Cleaning

Wipe the exterior of the dishwasher, including the control panel, with a soft, damp cloth. Avoid abrasive cleaners or solvents that could damage the surface.

## 6. TROUBLESHOOTING

If you encounter any issues with your dishwasher, refer to the following common troubleshooting tips before contacting customer service.

### Common Issues and Solutions

- Dishwasher not starting:** Check if the door is fully closed, the power cord is connected, and the circuit breaker has not tripped.
- Dishes not clean:** Ensure spray arms are not blocked, filters are clean, and detergent dispenser is filled correctly. Check water pressure.
- Water remaining in the tub:** Clean the filters and check the drain hose for kinks or blockages.
- Unusual noises:** Check for foreign objects in the pump area or spray arms. Ensure dishes are loaded correctly and not touching each other.

For more complex issues, consult the full technical manual or contact Electrolux customer support.

## 7. TECHNICAL SPECIFICATIONS

Feature	Specification
Model Number	EES68525L
Appliance Placement	Fully Integrated
Size	Full size (60 cm)
Place Settings	14 place settings
Number of Programs	8
Noise Emission Class	B
Noise Level	42 dB
Drying System	AirDry
Aquastop System	Yes
Energy Efficiency Class	B (Scale A to G)
Water Consumption per Cycle	9.9 L
Energy Consumption per 100 Cycles	64 kWh
Dimensions (W x D x H)	596 mm x 560 mm x 818 mm
Weight	37.3 kg



**Image:** The energy efficiency label for the dishwasher, clearly indicating an energy class B rating on a scale from A (most efficient) to G (least efficient).

### Official Product Video: AEG Ecoline Dishwasher

Your browser does not support the video tag.

This video highlights the energy efficiency of AEG Ecoline dishwashers, showcasing how they save energy while delivering excellent cleaning results.

## 8. WARRANTY AND SUPPORT

Your Electrolux EES68525L dishwasher comes with a standard manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions, including the duration and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Electrolux customer support. You can find contact information on the Electrolux website or in the documentation provided with your appliance.

**Customer Support:** Specialized Customer Support is available.

**Returns:** Returnable within 14 days of receipt.