

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Blaupunkt](#) /

› [Blaupunkt Smart TV 32WGC5500S User Manual](#)

Blaupunkt 32WGC5500S

Blaupunkt Smart TV 32WGC5500S User Manual

Model: 32WGC5500S

1. INTRODUCTION

Thank you for purchasing the Blaupunkt 32WGC5500S 32-inch HD Ready LED Smart TV. This manual provides essential information for setting up, operating, and maintaining your new television. Please read these instructions carefully before using the product and retain them for future reference.



Figure 1: Front view of the Blaupunkt 32WGC5500S Smart TV with its stand.

2. IMPORTANT SAFETY INFORMATION

To ensure safe operation and prevent damage, observe the following safety precautions:

- **Power Supply:** Connect the TV only to an AC power outlet with the correct voltage as indicated on the product label. Ensure the power cord is not damaged or pinched.
- **Ventilation:** Do not block ventilation openings. Allow adequate space around the TV for proper airflow to prevent overheating.
- **Water and Moisture:** Do not expose the TV to rain, moisture, or place objects filled with liquids (e.g., vases) on or near the TV.
- **Cleaning:** Unplug the TV before cleaning. Use a soft, dry cloth. Do not use liquid or aerosol cleaners.
- **Placement:** Place the TV on a stable, level surface. Avoid placing it in direct sunlight or near heat sources. Keep it away from strong magnetic fields.
- **Servicing:** Do not attempt to service the TV yourself. Refer all servicing to qualified service personnel.
- **Children:** Supervise children to ensure they do not climb on the TV or furniture it is placed on.

3. WHAT'S IN THE Box

Upon unpacking, verify that all the following items are included:

- Blaupunkt 32WGC5500S Smart TV
- Power Cable
- Remote Control
- User Manual (this document)
- TV Stand (2 pieces)

4. SETUP

4.1. Attaching the Stand

Carefully place the TV face down on a soft, clean surface to prevent screen damage. Align the stand pieces with the corresponding slots on the bottom of the TV and secure them with the provided screws.



Figure 2: Blaupunkt 32WGC5500S Smart TV with stand attached, ready for use.

4.2. Connecting External Devices

The TV features various ports for connecting external devices. Refer to the image below for port locations.



Figure 3: Side view displaying available connectivity ports including HDMI, USB, and audio outputs.

- **HDMI:** Connect Blu-ray players, game consoles, or other HDMI-enabled devices. The TV has 2 HDMI ports.
- **USB:** Connect USB storage devices for media playback. The TV has 2 USB ports.
- **Antenna/Cable:** Connect an antenna or cable TV source for broadcast channels.
- **Ethernet:** For a wired internet connection.
- **AV Input:** For older devices using composite video and stereo audio.

- **Headphone Output:** Connect headphones for private listening.

4.3. Powering On for the First Time

After connecting all necessary cables, plug the power cord into an electrical outlet. Press the power button on the remote control or on the TV itself. The TV will guide you through the initial setup process, including language selection, network connection, and Google TV account setup.



Figure 4: Power connection icon, indicating where to plug in the TV.

5. OPERATING THE TV

5.1. Remote Control Functions

The included remote control allows you to navigate the TV's features. Familiarize yourself with the buttons for power, volume, channel selection, input source, and Google Assistant.

5.2. Google TV Interface

Your Blaupunkt Smart TV runs on Google TV, providing a personalized experience with access to a wide range of streaming services and apps. The home screen displays recommended content, your installed apps, and various settings.



Figure 5: Example of the Google TV home screen interface.

- **Navigation:** Use the directional pad on your remote to move through menus and select items.
- **Apps:** Access pre-installed apps like Netflix, YouTube, and Google Play, or download new ones from the Google Play Store.
- **Inputs:** Switch between HDMI inputs, USB media, or broadcast TV sources.



Figure 6: Icon symbolizing access to various applications.

5.3. Voice Control with Google Assistant

Your TV supports voice control via Google Assistant. Press the Google Assistant button on your remote and speak into the microphone to search for content, control playback, get information, and manage smart home devices.



Figure 7: Icon indicating voice control functionality.

5.4. Bluetooth and Wi-Fi Connectivity

The TV includes built-in Wi-Fi for wireless internet access and Bluetooth for connecting compatible audio devices like headphones or soundbars.

- **Wi-Fi:** Navigate to Settings > Network & Internet to connect to your home Wi-Fi network.
- **Bluetooth:** Go to Settings > Remotes & Accessories > Pair accessory to connect Bluetooth devices.

6. MAINTENANCE

6.1. Cleaning the TV

Always unplug the TV from the power outlet before cleaning. Use a soft, dry, lint-free cloth to gently wipe the screen and cabinet. Do not use abrasive cleaners, waxes, or solvents as they can damage the finish.

6.2. Software Updates

Your Google TV may receive automatic software updates. Ensure your TV is connected to the internet to receive these updates, which can improve performance and add new features. You can also manually check for updates in the Settings menu.

7. TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common problems and solutions:

- **No Power:**

- Check if the power cord is securely plugged into both the TV and the wall outlet.
- Verify the wall outlet is functioning by plugging in another device.
- Try pressing the power button on the TV itself, not just the remote.

- **No Picture, But Sound is Present:**

- Ensure the correct input source is selected (e.g., HDMI 1, TV).
- Check all video cable connections.
- Try restarting the TV.

- **No Sound, But Picture is Present:**

- Check the volume level and ensure the TV is not muted.
- If using external audio devices, ensure they are properly connected and powered on.
- Check audio output settings in the TV menu.

- **Remote Control Not Working:**

- Replace the batteries in the remote control.
- Ensure there are no obstructions between the remote and the TV's IR sensor.
- Re-pair the remote if it's a Bluetooth remote (refer to Google TV settings).

- **Network Connection Issues:**

- Restart your Wi-Fi router.
- Check Wi-Fi password and network settings on the TV.
- If using a wired connection, ensure the Ethernet cable is securely connected.

If problems persist, consult the support section or contact customer service.

8. SPECIFICATIONS

Key technical specifications for the Blaupunkt 32WGC5500S Smart TV:



Figure 8: Dimensions of the Blaupunkt 32WGC5500S Smart TV.

Feature	Specification
---------	---------------

Feature	Specification
Model	32WGC5500S
Screen Size	32 Inches
Display Technology	LED
Resolution	1366 x 768 (HD Ready)
Refresh Rate	60 Hz
Operating System	Google TV
Audio Output	2 x 6W (12W total) with Dolby Digital Plus, Stereo, Surround
Connectivity	Wi-Fi, Bluetooth, 2x HDMI, 2x USB, Ethernet, AV Input, Headphone Output
VESA Compatibility	200x200 mm
Power Consumption (Operating)	26 Watts
Power Consumption (Standby)	0.5 Watts
Dimensions (with stand)	72 cm (width) x 47.9 cm (height) x 19.8 cm (depth)
Weight	4.1 kg
Included Components	Power Cable, Remote Control, User Manual, Stand

9. WARRANTY AND SUPPORT

Blaupunkt products are manufactured to high standards and are designed for reliable performance. For information regarding warranty terms and conditions, please refer to the warranty card included with your product or visit the official Blaupunkt website. For technical support, troubleshooting assistance beyond this manual, or service inquiries, please contact Blaupunkt customer support. Keep your purchase receipt and product model number (32WGC5500S) handy when contacting support. You can also visit the official Blaupunkt store on Amazon for more product information and support resources: [Blaupunkt Amazon Store](#)