

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ZipString](#) /

› [ZipString Aracna Glow-in-The-Dark Webshooter Instruction Manual](#)

ZipString Aracna

ZipString Aracna Glow-in-The-Dark Webshooter Instruction Manual

Model: Aracna | Brand: ZipString

INTRODUCTION

The ZipString Aracna is an innovative glow-in-the-dark webshooter designed for interactive play. It launches and retracts string loops at high speeds, offering a unique experience for users. This manual provides essential information for safe and effective use of your ZipString Aracna.

Key features include:

- **Superhero Web-Shooting Action:** Shoots and retracts string loops at over 35 mph.
- **Endless Tricks & Stunts:** Master various creative tricks with its patented design.
- **Durable Construction:** Engineered with aerospace-grade materials for longevity.
- **Fun for All Ages:** Suitable for kids, teens, and adults.
- **Glow-in-the-Dark:** Features glow-in-the-dark strings for nighttime play.

SAFETY INFORMATION

Please read all safety instructions before using the ZipString Aracna. Failure to follow these instructions may result in injury or damage to the product.

- **Recommended Age:** This product is recommended for ages 8-18 years. Adult supervision is advised for younger users.
- **Eye Protection:** Always use caution and avoid aiming the string directly at eyes or face.
- **String Entanglement:** Keep strings away from moving parts, hair, and other objects that could cause entanglement.
- **Choking Hazard:** Small parts may be a choking hazard. Not suitable for children under 3 years.
- **Battery Safety:** The device contains a nonstandard rechargeable battery. Do not attempt to replace the battery. Use only the provided USB-C charging cable.
- **Heat Warning:** If the device becomes warm during use or charging, discontinue use immediately.

SETUP

1. Charging the Device

The ZipString Aracna comes with a rechargeable battery. Before first use, fully charge the device.

1. Locate the USB-C charging port on the device.
2. Connect the provided USB-C cable to the device and a compatible USB power source (not included).
3. A red light indicates the device is charging. The light will turn green when fully charged.



Image: The ZipString Aracna device highlighting the USB-C charging port and the red/green indicator lights for charging status.

2. Loading a String

The ZipString Aracna includes 5 strings of different lengths (2.5ft, 5.5ft, 7.5ft) and colors, including glow strings. Choose a string and follow these steps:

1. Hook the loop of the string around the floss assist hook.
2. Keep both ends of the string taut.
3. Align one string with the top of the floss gap.
4. While holding both ends taut, use one finger to press the string through the floss gap.

LOADING A STRING



Image: A step-by-step diagram illustrating the process of loading a string into the ZipString Aracna device, showing how to hook the loop and thread it through the floss gap.

Your browser does not support the video tag.

Video: Official ZipString Luma - How To Use tutorial, demonstrating the string loading process and basic operation.

OPERATING INSTRUCTIONS


1. Launching the String

Once the string is loaded and untangled, you are ready to launch.

- Press the launch button to propel the string.
- Experiment with different hand movements and angles to create various effects.



STRING UNTANGLES UPON LAUNCH

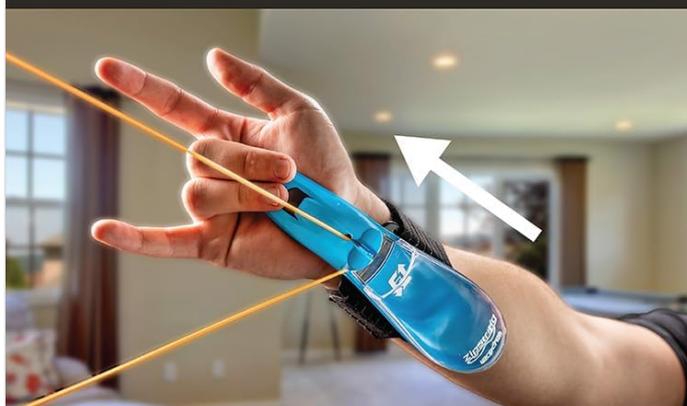

LAUNCH



RETRACTED

Image: The ZipString Aracna in use, demonstrating how the string untangles upon launch and retracts back into the device.

2. Retracting the String

To retract the string, simply release the launch button. The device will automatically pull the string back into its container.

3. Performing Tricks

The ZipString Aracna allows for a variety of tricks and stunts. Practice to master them:

- **Web Splat:** A basic launch and retraction.
- **Bow & Arrow:** Hold the string taut and release for a straight shot.
- **Silly String:** Create flowing, wavy patterns.
- **Lasso:** Loop the string around objects.
- **Corkscrew:** Generate spiral movements.

GLOWS IN THE DARK



LED INSIDE –
POWERS THE GLOW



INCLUDES WHITE
GLOW STRINGS



Image: The ZipString Aracna in a dark environment, showcasing its glow-in-the-dark feature with bright green strings and internal LED illumination.

WHATS INCLUDED

5 STRINGS
OF DIFFERENT
LENGTHS



ARACNA
ORANGE STRING PRELOADED



SMALL
2.5FT
(1 NEON PINK &
1 GLOW STRING)



MEDIUM
5.5FT
(1 NEON ORANGE
& 1 GLOW STRING)



LARGE
7.5FT
(1 NEON BLUE
& YELLOW
STRING)

WHITE STRINGS
GLOW WHEN GLOW
MODE IS ACTIVATED

USB CHARGER



Image: A visual guide demonstrating five different tricks: Bow & Arrow, Silly String, Web Splat, Corkscrew, and Lasso, achievable with the ZipString Aracna.

Your browser does not support the video tag.

Video: A short demonstration of the ZipString Aracna in action, showcasing its rapid string launch and retraction.

MAINTENANCE

Untangling Strings

Occasionally, the string may become tangled during use. To untangle:

- Turn off the device.
- Gently pull the string out of the device until the tangled portion is accessible.
- Carefully untangle any knots or twists in the string.
- Ensure the string is smooth before re-inserting it into the device.
- If the string is severely frayed or damaged, replace it with a new one.

TROUBLESHOOTING

Problem	Possible Cause	Solution
String gets tangled frequently.	Incorrect usage, string touching itself during operation, or frayed string.	Ensure the string is free of twists before launching. Avoid letting the top and bottom parts of the string touch. If the string is frayed, replace it. Refer to the "Maintenance" section for untangling.
Device makes a loud clicking sound.	Internal mechanism issue, possibly due to string jamming.	Stop use immediately. Check for any visible string jams or obstructions. If the issue persists, contact customer support.
Device gets warm on the wrist.	Overuse or internal component overheating.	Discontinue use and allow the device to cool down. If overheating is frequent, contact customer support.
String fails to return or retract.	String entanglement, obstruction, or low battery.	Check for tangles or obstructions in the string path. Ensure the device is fully charged.

SPECIFICATIONS

- **Package Dimensions:** 9.13 x 3.62 x 2.52 inches
- **Item Weight:** 9.1 ounces
- **Recommended Age:** 8 - 18 years
- **Batteries:** 1 Nonstandard Battery (included, rechargeable)
- **Charging:** USB-C (cable included)
- **Manufacturer:** ZipString

WARRANTY INFORMATION

ZipString offers a 1-year warranty on the Aracna Glow-in-The-Dark Webshooter against manufacturing defects. Please retain your proof of purchase for warranty claims. For more details, refer to the official ZipString website or contact customer support.

CUSTOMER SUPPORT

For further assistance, questions, or troubleshooting not covered in this manual, please visit the [ZipString Store on Amazon](#) or contact ZipString customer service directly.