

ZOLAMENTE 5K Digital Camera

# ZOLAMENTE 5K Digital Camera User Manual

Model: 5K Digital Camera

## 1. INTRODUCTION

Thank you for purchasing the ZOLAMENTE 5K Digital Camera. This compact and versatile camera is designed to capture high-quality photos and videos, offering a range of features for both beginners and enthusiasts. Please read this manual carefully to ensure proper use and to maximize your camera's potential.



Image: ZOLAMENTE 5K Digital Camera highlighting its key features.

## 2. PACKAGE CONTENTS

Ensure all items are present in your package:

- 1 × ZOLAMENTE 5K Digital Camera
- 1 × 64GB MicroSD Card
- 1 × USB Cable
- 1 × Rechargeable Battery (1200mAh)
- 1 × Camera Bag
- 1 × Strap
- 1 × Japanese Instruction Manual (English version provided here)



Image: All included accessories for the ZOLAMENTE 5K Digital Camera.

## Unboxing Video

Video: A short unboxing demonstration of a similar digital camera, showing the contents.

## 3. PRODUCT OVERVIEW

The ZOLAMENTE 5K Digital Camera features a compact design with intuitive controls and dual screens for versatile shooting.

## Physical Features

- **Front Screen:** 1.5-inch high-vision display for selfies.
- **Rear Screen:** 2.8-inch IPS LCD monitor for clear viewing.
- **Lens:** F/3.2, focal length 7.36mm.
- **Sensor:** 13 Megapixel CMOS sensor.
- **Buttons:** Shutter, Power, Menu, OK, Navigation (Up/Down/Left/Right), Zoom (W/T), DISP.
- **Ports:** USB charging port, MicroSD card slot, tripod mount.
- **Indicators:** LED light, flash.



Image: Front and rear views of the ZOLAMENTE 5K Digital Camera, showing its compact design and dual screens.

## Product Rotation View

*Video: A 360-degree view of the S95PRO digital camera, showcasing its design and ports.*

## 4. SETUP

---

### 4.1. Battery Installation

1. Open the battery compartment cover located at the bottom of the camera.
2. Insert the provided 1200mAh rechargeable battery, ensuring correct polarity.
3. Close the battery compartment cover securely.

### 4.2. MicroSD Card Installation

The camera supports MicroSD cards up to 256GB. A 64GB MicroSD card is included.

1. Locate the MicroSD card slot on the side of the camera.
2. Insert the MicroSD card with the gold contacts facing down until it clicks into place.
3. To remove, gently push the card inward until it pops out.

### 4.3. Initial Settings (Language, Date/Time)

Upon first use or after a factory reset, you may need to set the language and date/time.

1. Power on the camera by pressing the Power button.
2. Press the **MENU** button to access the settings.
3. Navigate using the Up/Down buttons to find 'Language' or 'Date/Time' settings.
4. Press **OK** to select, then use the navigation buttons to adjust the settings.
5. Press **MENU** again to save and exit.

### Setup Demonstration Video

---

*Video: A demonstration of inserting the MicroSD card, powering on, and navigating basic settings like language and date/time.*

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Power On/Off

Press the **Power** button to turn the camera on or off.

### 5.2. Switching Between Photo and Video Modes

Press the **MENU** button to access the mode selection screen. Use the navigation buttons to select between photo mode, video mode, or time-lapse mode, then press **OK**.

### 5.3. Photo Mode



The camera supports up to 80 Megapixel (MP) photo resolution. You can adjust the pixel settings in the menu.

1. Ensure the camera is in photo mode.
2. Frame your shot using the screen.
3. Press the **Shutter** button halfway to focus, then fully press to take a photo.

### Pixel Settings

You can select various pixel settings for your photos, up to 80MP, to suit your needs.

### Flash Settings

Press the **Up** button to cycle through flash modes (Auto, On, Off).

### Special Photo Features

- **Beauty Filter:** Enhance facial features.
- **Face Detection:** Automatically detects and focuses on faces.
- **Self-Timer:** Set a delay (e.g., 3s, 5s, 10s, 20s) before taking a photo.
- **Continuous Shooting:** Capture multiple photos in quick succession.



Image: Visual representation of various photo modes including beauty filter, face detection, self-timer, and continuous shooting.





Images: Detailed views of face detection, continuous shooting, and self-timer features.

## 5.4. Video Mode

Record stunning videos in 5K resolution. You can adjust video resolution settings in the menu.

1. Ensure the camera is in video mode.
2. Press the **Shutter** button to start recording.
3. Press the **Shutter** button again to stop recording.

### Video Resolution Settings

The camera supports various video resolutions, including 5K. Select your preferred resolution from the menu.

5Kビデオ録画&8000万画素

80MP

56MP

30MP

20MP

Image: Demonstrating 5K video recording and various photo resolutions (80MP, 56MP, 30MP, 20MP).

## Special Video Features

- **Slow Motion:** Capture dynamic scenes in slow motion.
- **Time-Lapse:** Condense long events into short, engaging videos.
- **Record While Charging:** Allows for extended recording sessions.



Image: Illustrating autofocus, slow-motion, video loop, and time-lapse recording capabilities.

## 5.5. Digital Zoom

The camera features an 18x digital zoom. Use the **W** (Wide) and **T** (Telephoto) buttons to zoom in and out, allowing you to capture distant subjects clearly without moving the lens.



## 18X デジタルズーム



## 前後スクリーン画面



Image: Demonstrating the 18x digital zoom capability and the front and rear screens.

### 5.6. Focus Modes

Choose from three focus modes to ensure sharp images:

- **Autofocus (AF):** Automatically adjusts focus for clear images.
- **Manual Focus (MF):** Allows you to manually adjust focus by half-pressing the shutter button.
- **Fixed Focus:** Maintains a fixed focus distance.





Image: Illustrating autofocus, image stabilization, pause function, and recording while charging.

## 5.7. Dual Screens

The camera features a 1.5-inch front screen and a 2.8-inch rear IPS screen. Long-press the **Down** button to switch between the front and rear screens, which is convenient for selfies and vlogging.

## 5.8. Color Filters

The camera offers 19 types of color filters to add creative effects to your photos and videos.



Image: The ZOLAMENTE 5K Digital Camera displaying different filter options.

## 5.9. WiFi Transfer Function

Easily transfer captured images and videos to your smartphone via WiFi. This eliminates the need for card readers or computers for quick sharing on social media.

1. Enable WiFi on your camera through the settings menu.
2. Download the dedicated app (e.g., 'HelloCam') on your smartphone (available on App Store and Google Play).
3. Connect your smartphone to the camera's WiFi network (SSID and password displayed on the camera screen).
4. Open the app to view and transfer files.





Image: Demonstrating WiFi transfer of images from the camera to a laptop and the camera being used as a webcam.

## WiFi Connection Video

Video: Instructions on how to connect the camera to a smartphone via WiFi using the dedicated app.

### 5.10. Webcam Function

The camera can be used as a webcam for high-quality video calls and live streaming.

1. Connect the camera to your computer using the provided USB cable.
2. Select 'Webcam Mode' on the camera if prompted.
3. Your computer should recognize the camera as a webcam.



Image: The camera connected to a laptop and functioning as a webcam.

## 6. MAINTENANCE

- Keep the camera clean by wiping it with a soft, dry cloth.
- Avoid exposing the camera to extreme temperatures, dust, or moisture.
- Store the camera in its protective bag when not in use.
- Regularly back up your photos and videos to prevent data loss.

## 7. TROUBLESHOOTING

### Common Issues and Solutions

Issue	Possible Cause	Solution
Camera does not power on	Low battery; Battery incorrectly inserted	Charge the battery; Reinsert battery correctly
Cannot take photos/videos	MicroSD card full; MicroSD card not inserted; Incorrect mode selected	Delete files or replace card; Insert MicroSD card; Switch to photo/video mode
Blurry images	Incorrect focus mode; Camera shake	Adjust focus mode; Use image stabilization or a tripod
WiFi connection fails	Incorrect password; App not installed	Verify WiFi password; Install the correct app




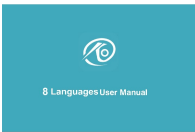

## 8. SPECIFICATIONS



Feature	Detail
Brand	ZOLAMENTE
Model	5K Digital Camera
Color	Pink (with 64GB SD Card)
Video Resolution	Up to 5K
Photo Resolution	Up to 80 Megapixels
Digital Zoom	18X
Front Screen	1.5 inches
Rear Screen	2.8 inches IPS
Sensor	13 Million CMOS Sensor
Lens Aperture	F/3.2
Focal Length	7.36mm
Storage	Supports MicroSD up to 256GB (64GB included)
Battery	1200mAh Rechargeable Battery
Weight	Approx. 114g (including battery)
Dimensions	11.4 x 8.5 x 7.7 cm
ASIN	B0FQMLD2BV

## 9. WARRANTY AND SUPPORT

This product, when purchased as a domestic genuine product (new), comes with a 5-year manufacturer's warranty. Please note that parallel imported or overseas retail products do not come with a manufacturer's warranty. For support, please contact your seller.

<p>Digital Camera User Manual</p>  <p>RoHS PC CE</p>	<p><a href="#">5K Digital Camera User Manual</a></p> <p>Comprehensive user manual for the 5K Digital Camera, covering setup, operation, features, troubleshooting, and specifications. Includes instructions on installation, shooting modes, connectivity, and maintenance.</p>
<p>DIGITAL CAMERA User Manual</p>  <p>SHENZHEN HAIJIXING TECHNOLOGY CO., LTD</p>	<p><a href="#">S150PRO Digital Camera User Manual - SHENZHEN HAIJIXING TECHNOLOGY CO., LTD</a></p> <p>User manual for the SHENZHEN HAIJIXING TECHNOLOGY CO., LTD S150PRO digital camera, providing instructions on setup, operation, features, maintenance, and troubleshooting. Learn how to use your 5K Ultra HD, 80MP camera with 18x zoom.</p>
<p>对镜头+5.0x11x14.5mm 5.0x11x14.5mm 5.0x11x14.5mm 1.4MP/1080p, 4K/2160p 摄像头(带夜视功能) 说明书</p> <p>VIVITAR® DIGITAL CAMCORDER Easy Guide</p>  <p>DVR 4K (v3)</p>	<p><a href="#">Vivitar DVR 4K (v3) Digital Camcorder Easy Guide</a></p> <p>This easy guide provides comprehensive instructions for the Vivitar DVR 4K (v3) Digital Camcorder, covering initial setup, battery charging, system requirements, detailed controls, operation modes, memory card management, connecting to a computer, using the iDV-PRO app, and troubleshooting common issues. Optimize your 4K video recording and photography experience with this essential manual.</p>
 <p>8 Languages User Manual</p>	<p><a href="#">HEIYOUCAM and WorldGolbal Wireless Outdoor Security Cameras: User Manual and Product Details</a></p> <p>Explore the range of HEIYOUCAM and WorldGolbal wireless outdoor security cameras. This document provides details on models including IP66, BW4, QW5, 3MP, A20/A20QQ, and the Four Lens Four Screen camera. Features cover resolutions from 2K to 10K, advanced night vision, AI motion detection, two-way audio, IP66 waterproofing, and solar power options.</p>
<p>FAQ</p> <p>What's inside the package? Please check the contents of the package with an inventory list. A missing content, a damaged product, or a defective product will be replaced within 30 days of purchase. Please contact us for more information. Please contact us for more information. Please contact us for more information.</p> <p>Warranty Information Please refer to the warranty card for more information. Please refer to the warranty card for more information. Please refer to the warranty card for more information.</p>	<p><a href="#">Surfola Action Camera FAQ: Package Contents, SD Cards, WiFi, and Warranty Information</a></p> <p>Find answers to frequently asked questions about Surfola action cameras, including package contents, supported Micro SD cards, WiFi app connection, camera temperature, recommended accessories, and warranty details.</p>
 <p>IRIS130 Rugged Night Vision Pan Tilt Zoom Camera</p> <p>USER GUIDE</p>	<p><a href="#">IRIS130 Rugged Night Vision Pan Tilt Zoom Camera User Guide</a></p> <p>Comprehensive user guide for the IRIS130 Rugged Night Vision Pan Tilt Zoom Camera, covering installation, operation, features, technical specifications, and troubleshooting.</p>



