

[Manuals.plus](#) /

> [Rollei](#) /

> Rollei Mini Digital Camera (Model 12066) User Manual

Rollei 12066

Rollei Mini Digital Camera User Manual

Model: 12066

INTRODUCTION

The Rollei Mini Digital Camera is a compact and lightweight device designed for capturing photos and videos. This manual provides essential information on how to set up, operate, maintain, and troubleshoot your camera. Please read these instructions carefully before using the product.



Image: The Rollei Mini Digital Camera, showcasing its compact dimensions (5.4 x 3.1 x 2 cm) and light weight (18g), alongside its 0.96-inch LCD display.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Rollei Mini Digital Camera
- USB-C Cable
- USB-C Adapter
- Carrying Strap

- Wrist Strap
- Key Ring
- Instruction Manual



Image: A visual representation of the items included in the product package: the mini camera, USB-C cable & adapter, keychain, user manual, hand strap, and neck strap.

SETUP

1. Charging the Battery

Before first use, fully charge the camera's internal 200 mAh Lithium-Ion battery. Connect the camera to a USB power source using the provided USB-C cable. The charging indicator will show the charging status.

2. Inserting a MicroSD Card

The camera requires a microSD card (not included) to store photos and videos. Locate the microSD card slot on the camera and insert the card with the contacts facing down until it clicks into place.

3. Powering On/Off

Press and hold the Power button to turn the camera on or off. The 0.96-inch color screen will illuminate upon startup.

OPERATING THE CAMERA

1. Taking Photos

In photo mode, press the Shutter button to capture a 2 MP image. The camera features automatic exposure control and white balance for ease of use.

2. Recording Videos

Switch to video mode and press the Record button to start recording 1080p Full HD video at 30 frames per second. Press the button again to stop recording.



Image: Demonstrates the camera's capability to capture 2 MP photos and 1080P Full HD videos, showing clear and vibrant results.

3. Using the Integrated LED Flash

The camera includes a built-in LED flash. In low-light conditions, the flash can be activated to illuminate the scene and improve image quality. Refer to the camera's on-screen menu for flash settings.

4. Applying Color Filters

Enhance your photos with six integrated color filters: Original, Green, Pink, Blue, Black/White, and Sepia. Select your desired filter through the camera's menu before taking a photo.

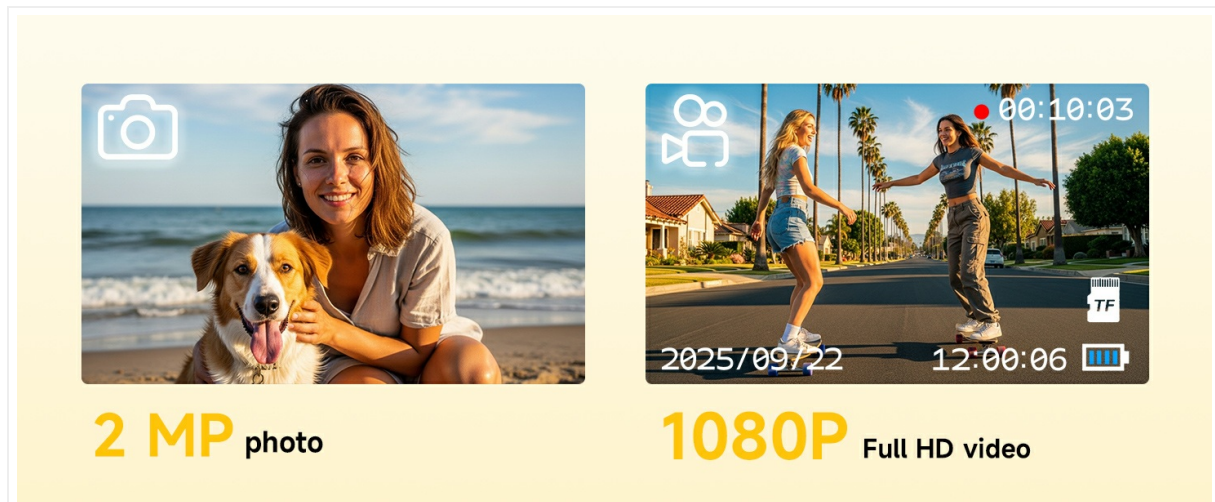 


Image: Illustrates the various color filters (Original, Green, Pink, Blue, Black/White, Sepia) that can be applied to photos for creative effects.

5. Audio Recording Function

The camera supports audio recording. Activate this function through the camera's menu to capture voice notes or ambient sounds.

6. Webcam Function

Connect the camera to a computer via the USB-C cable to use it as a webcam for video conferences. Ensure your computer recognizes the camera as a webcam device.

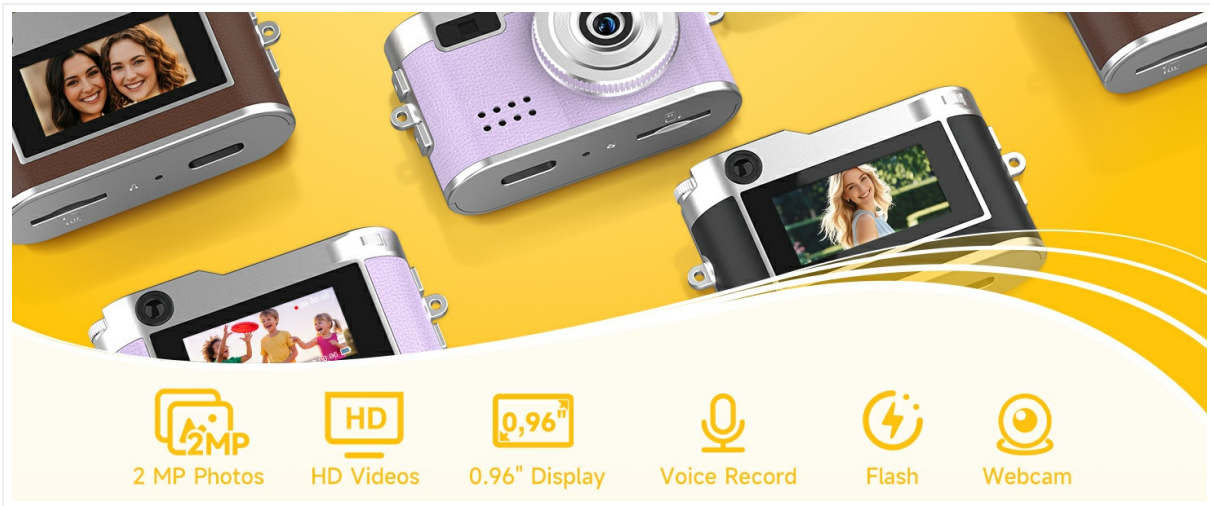 


Image: Highlights the camera's additional features including the integrated LED flash, audio recording capability, webcam functionality, and the 0.96-inch LCD display for real-time preview.

7. Viewing Photos and Videos

Use the 0.96-inch color screen to preview captured photos and videos directly on the camera. Navigate through your media using the camera's control buttons.

DATA TRANSFER

There are two primary methods for transferring your media files from the camera:

1. Transfer to Computer (PC/Mac)

Connect the camera to your computer using the provided USB-C cable. The camera will appear as a removable storage device, allowing you to drag and drop files to your computer.

2. Transfer to Android Smartphone (OTG Adapter)

For Android smartphones, use the included OTG adapter to connect the camera directly. This allows for direct transfer of photos and videos without requiring a computer or Wi-Fi connection.

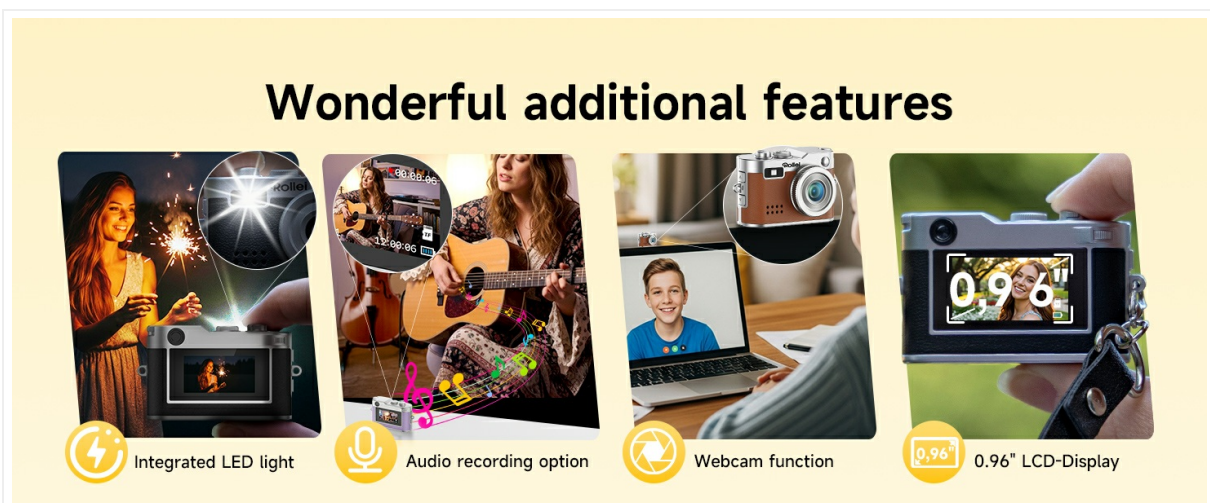 


Image: Illustrates the two transfer methods: direct connection to an Android smartphone via an OTG adapter, and connection to a PC/Mac via a USB-C cable.

MAINTENANCE

Cleaning

Use a soft, dry cloth to clean the camera body. For the lens and screen, use a specialized lens cleaning cloth. Avoid using liquid cleaners or abrasive materials.

Storage

When not in use, store the camera in a cool, dry place away from direct sunlight and extreme temperatures. Remove the microSD card if storing for extended periods.

TROUBLESHOOTING

If you encounter issues with your Rollei Mini Digital Camera, consider the following common solutions:

- **Camera not turning on:** Ensure the battery is fully charged.
- **Cannot take photos/videos:** Check if a microSD card is inserted and has sufficient free space.
- **Poor image quality:** Ensure the lens is clean and try using the flash in low-light conditions.
- **Cannot transfer files:** Verify that the USB-C cable is securely connected to both the camera and the computer/smartphone. For Android, ensure the OTG adapter is correctly used.
- **Screen not displaying:** Check battery level. If the issue persists, try resetting the camera (if a reset option is available in the menu or via a small pinhole button).

For further assistance, please contact Rollei customer support.

SPECIFICATIONS

Feature	Detail
Model Name	Mini Digitalkamera brown
Model Number	12066
Photo Sensor Resolution	2 MP
Video Resolution	1080p (Full HD)
Continuous Shooting	30 FPS
Screen Size	0.96 Inches (Color LCD)
Image Stabilization	Yes
Camera Flash	Built-In LED
Special Features	Webcam function, Audio recording function
Supported File Format	JPEG, MP4
Compatible Flash Memory Type	microSD
Connectivity Technology	USB (USB-C)
Battery Cell Type	Lithium Ion (200 mAh)
Item Weight	0.08 Kilograms (18 grams)

Feature	Detail
Dimensions	5.4 x 3.1 x 2 cm (approx.)
Lens Type	Wide Angle
Minimum Focal Length	18 Millimeters
Real Angle Of View	72 Degrees
Exposure Control	Automatic
White Balance Settings	Auto

WARRANTY AND SUPPORT

Warranty Information

This Rollei Mini Digital Camera comes with a **2-Year Warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects under normal use conditions.

Customer Support

For technical support, troubleshooting assistance, or warranty inquiries, please visit the official Rollei website or contact their customer service department. Contact information can typically be found on the Rollei website or in the product packaging.