

[Manuals.plus](#) /

› [UGREEN](#) /

› UGREEN Studio Plus HP207 Wireless Over-Ear Headphones User Manual

## UGREEN HP207

# UGREEN Studio Plus HP207 Wireless Over-Ear Headphones User Manual

Model: HP207

## INTRODUCTION

This manual provides detailed instructions for the UGREEN Studio Plus HP207 Wireless Over-Ear Headphones. Please read this manual thoroughly before using the product to ensure proper operation and to maximize your listening experience. Keep this manual for future reference.

## PRODUCT OVERVIEW



An image showing the UGREEN Studio Plus HP207 wireless over-ear headphones. The headphones feature a silver frame with brown earcups and a brown padded headband. The UGREEN logo is visible on the right earcup arm.

The UGREEN Studio Plus HP207 are wireless over-ear headphones designed for comfortable listening. They feature a sleek design with a brown and silver color scheme, offering a premium audio experience.

## SETUP

---

### 1. Charging the Headphones

Before first use, fully charge your UGREEN Studio Plus HP207 headphones. Connect the provided charging cable to the charging port on the headphones and to a USB power source. The indicator light will show the charging status and turn off or change color when fully charged.

### 2. Powering On/Off

- **Power On:** Press and hold the Power button for approximately 3 seconds until the indicator light illuminates.
- **Power Off:** Press and hold the Power button for approximately 5 seconds until the indicator light turns off.

### 3. Bluetooth Pairing

1. Ensure the headphones are powered off.
2. Press and hold the Power button for approximately 5-7 seconds until the indicator light flashes rapidly (usually blue and red), indicating pairing mode.
3. On your device (smartphone, tablet, computer), enable Bluetooth and search for available devices.
4. Select "UGREEN Studio Plus HP207" from the list of found devices.
5. Once connected, the indicator light on the headphones will stop flashing and may turn solid blue or off, depending on the model.
6. If prompted for a password, enter "0000".

## OPERATING INSTRUCTIONS

---

### Basic Controls

- **Play/Pause:** Press the Multi-function button (often the Power button or a dedicated play/pause button) once.
- **Volume Up:** Press the Volume + button.
- **Volume Down:** Press the Volume - button.
- **Next Track:** Press and hold the Volume + button (or double-press the Multi-function button, depending on model).
- **Previous Track:** Press and hold the Volume - button (or triple-press the Multi-function button, depending on model).

### Call Management

- **Answer/End Call:** Press the Multi-function button once.
- **Reject Call:** Press and hold the Multi-function button for 2 seconds.
- **Voice Assistant:** Double-press the Multi-function button (or a dedicated button) to activate your device's voice assistant (Siri, Google Assistant, etc.).

## MAINTENANCE

---

- **Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use harsh chemicals or abrasive materials.
- **Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme

temperatures.

- **Avoid Water:** These headphones are not waterproof. Avoid exposure to water or excessive moisture.
- **Cable Care:** Handle charging cables gently to prevent damage.

TROUBLESHOOTING

| Problem                     | Solution                                                                                                                                                                                                                                                                                                                   |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Headphones do not power on. | Ensure the headphones are fully charged. Connect them to a power source and try again.                                                                                                                                                                                                                                     |
| Cannot pair with a device.  | <ul style="list-style-type: none"><li>◦ Ensure the headphones are in pairing mode (flashing indicator light).</li><li>◦ Make sure Bluetooth is enabled on your device.</li><li>◦ Move the headphones closer to your device.</li><li>◦ Forget the device from your device's Bluetooth list and try pairing again.</li></ul> |
| No sound or low volume.     | <ul style="list-style-type: none"><li>◦ Check the volume levels on both the headphones and your connected device.</li><li>◦ Ensure the headphones are properly connected via Bluetooth.</li><li>◦ Try restarting both the headphones and your device.</li></ul>                                                            |
| Intermittent connection.    | <ul style="list-style-type: none"><li>◦ Ensure there are no obstructions between the headphones and your device.</li><li>◦ Move away from sources of strong electromagnetic interference (e.g., Wi-Fi routers, microwaves).</li><li>◦ Try reconnecting the Bluetooth connection.</li></ul>                                 |

SPECIFICATIONS

**Model:** HP207  
**Brand:** UGREEN  
**Type:** Wireless Over-Ear Headphones  
**Connection Technology:** Wireless (Bluetooth)  
**Color:** Brown  
**Dimensions (Package):** 23.2 x 22 x 4.7 cm  
**Weight (Package):** 310 g  
**Manufacturer:** Ugreen Group Limited  
**Included Components:** Instruction Manual (this document)

WARRANTY AND SUPPORT

UGREEN products are designed to meet high quality standards. For warranty information, technical support, or customer service inquiries, please refer to the official UGREEN website or contact your local distributor. Please retain your proof of purchase for warranty claims.  
For further assistance, visit: [www.ugreen.com](http://www.ugreen.com)

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question