

[Manuals.plus](#) /

› [SAROSORA](#) /

› SAROSORA Cat Wet Food Automatic Feeder with Cooling (Model EZ_BOW1) Instruction Manual

SAROSORA EZ_BOW1

SAROSORA Cat Wet Food Automatic Feeder with Cooling

Model: EZ_BOW1

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your SAROSORA Automatic Cat Feeder with Cooling. This device is designed to provide fresh wet and dry food for your cat, featuring semiconductor refrigeration to maintain food freshness for extended periods. It includes a timer function for scheduled meals and five individual food compartments.

Please read this manual thoroughly before operating the feeder and retain it for future reference.

PRODUCT OVERVIEW

The SAROSORA Automatic Cat Feeder is equipped with advanced features to ensure your pet receives fresh meals on schedule. Key features include:

- **Semiconductor Refrigeration:** Maintains food temperature between 13°C and 23°C to keep wet food fresh for 1-4 days.
- **5 Food Compartments:** Each compartment holds approximately 330g of pet food, allowing for up to 5 meals.
- **Programmable Timer:** Set up to 4 fixed-time meals per day, in addition to an immediate meal.
- **Food-Grade Materials:** Plates are made from non-toxic, environmentally friendly PP material.
- **Removable and Washable Design:** Easy to disassemble for cleaning, with dishwasher-safe lid and bowls.

THOUGHTFUL DESIGN



Refrigeration
Technology



Wet / Dry Food



Food Grade Plates



5 Meal
330g*5



Image: Overview of the SAROSORA Automatic Cat Feeder highlighting its thoughtful design and key features.

MEET THE NUTRITIONAL NEEDS OF ONE DAY



Image: The feeder can accommodate a variety of food types including wet food, dry food, medicine, milk, and freeze-dried food to meet diverse nutritional needs.

SETUP

1. **Unpack the Feeder:** Carefully remove all components from the packaging. Ensure all parts are present: main unit, food plate, and cover.
2. **Assemble the Feeder:** Place the food plate into the main unit, ensuring it sits securely. Then, place the cover on top, aligning it properly.
3. **Initial Cleaning:** Before first use, wash the food plate and cover with warm soapy water. Rinse thoroughly and dry completely. The main unit with refrigeration parts should only be wiped clean with a damp cloth.
4. **Placement:** Position the feeder on a flat, stable surface away from direct sunlight or heat sources. Ensure it is within reach of a power outlet.

5. **Connect Power:** Plug the power adapter into the feeder and then into a wall outlet. The display should illuminate.

REMOVABLE AND WASHABLE



Image: Exploded view illustrating the removable and washable components of the feeder for easy assembly and cleaning.

OPERATING INSTRUCTIONS

Powering On/Off

To turn on the device, long press the "snow button" (usually indicated by a snowflake icon) for 3 seconds. Repeat this action to turn off the device.

HOW TO TURN ON



Long press the "snow button" for 3 seconds to turn on the device



Image: Instructions on how to power on the feeder by long-pressing the snowflake button.

Setting Meal Times

The feeder allows for up to 5 meals per day: one immediate meal and four fixed-time meals. You can program the feeder to dispense 1, 2, 3, or 4 meals daily, lasting for 1 to 4 consecutive days depending on the number of meals set.

- **1 Meal Time:** The feeder will run once a day for 4 days.
- **2 Meal Times:** The feeder will run twice a day for 2 days.
- **3 Meal Times:** The feeder will run three times a day for 1 day.
- **4 Meal Times:** The feeder will run four times a day for 1 day.

To set specific meal times, refer to the feeder's display and control buttons. Typically, there are buttons for setting the current time and then individual meal times (e.g., Meal 1, Meal 2, etc.). Follow the on-screen prompts to adjust the hours and minutes for each desired feeding.

Example for Overnight Feeding: If you want the first meal at 8 p.m. and the second meal at 6 a.m., you must set these times between 6 a.m. and 8 p.m. of the natural day. You only need to set the first two meal times; the feeder will cycle

through these. For instance, it will dispense at 8 p.m., then 6 a.m., then 8 p.m. again, and so on. The on-screen time display will continue to show natural chronological order, but the feeding schedule will follow your programmed intervals.

FEEDING ACCORDING TO THE SCHEDULE

Make Your Pet's Diet More Regular And Healthier

- The number of meals can be adjusted according to the cat's needs in a day.
- For example, by setting only one meal time, it will run once a day for 4 days. By setting 2 meal times, it will run twice a day for 2 days.
- Tips: It is best not to keep opened wet food for more than 48 hours.



Image: The feeder's display showing programmed meal times and the rotating food plate, ensuring scheduled feeding.

 
FEED REGULAR

Set The Number Of Meals According To Your Cat's Daily Feeding Needs

🕒 1 - 4 Timing Settings



By setting only one meal time, it works once a day for 4 days.
TIPS: It is best not to store opened wet food for more than 48 hours

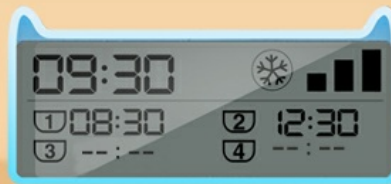

By setting 2 meal times, it will run twice a day for 2 days



By setting 3 meal times, it works 3 times a day for 1 day.



By setting 4 meal times, it runs 4 times a day for 1 day.

Image: Visual guide for setting 1 to 4 timing schedules, demonstrating how the number of meals affects the feeder's duration.

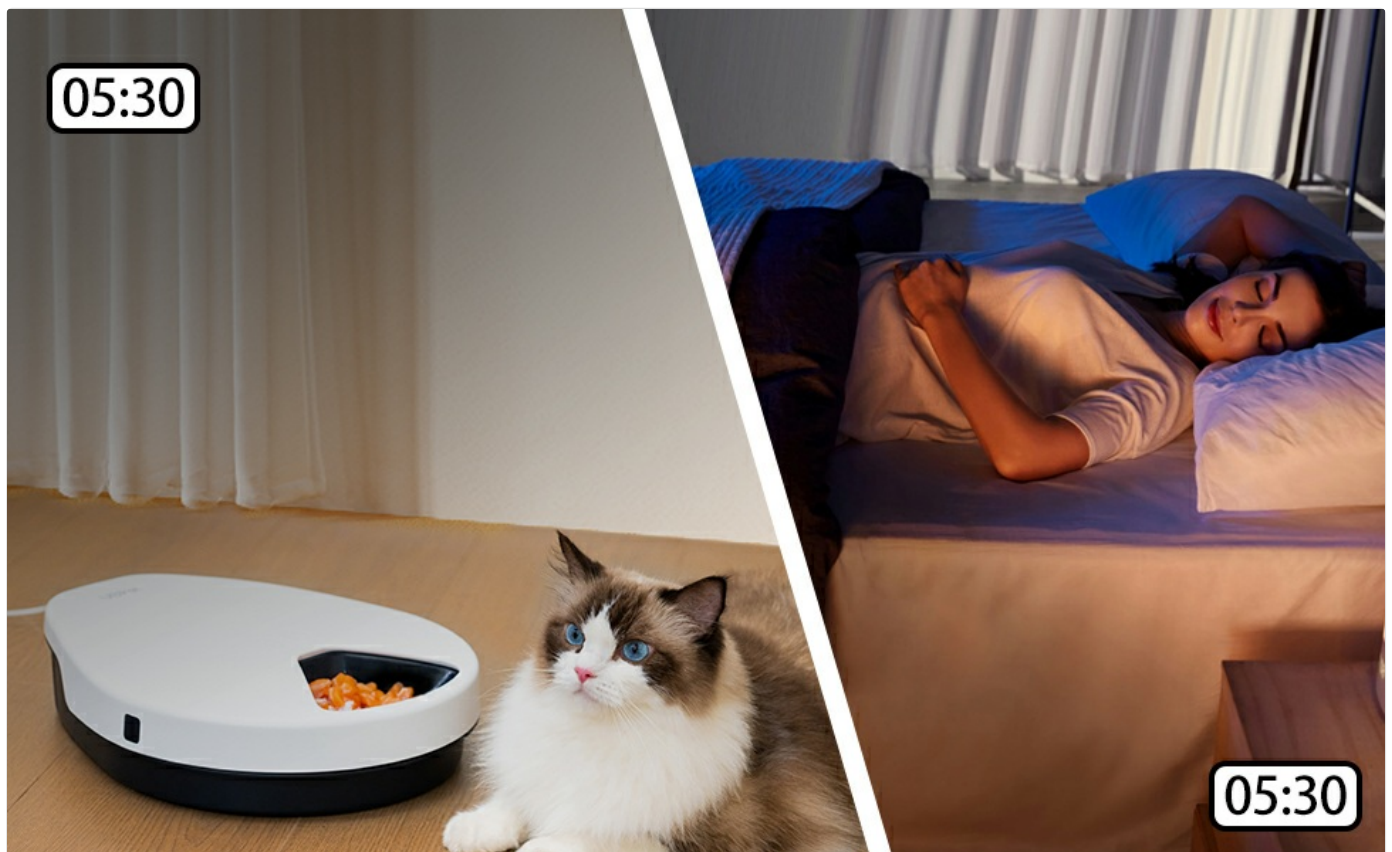 


Image: The feeder ensures your pet is fed on time, even when you are asleep, promoting regular eating habits.

Using the Cooling Function

The feeder utilizes semiconductor refrigeration to keep food fresh. It offers three levels of temperature settings to maintain food temperature between 13°C and 23°C, based on an ambient room temperature of 25°C.

- **Level 1:** Approximately 23°C
- **Level 2:** Approximately 17°C
- **Level 3:** Approximately 13°C

To activate or adjust the cooling function, use the dedicated cooling button (often the same snowflake button used for power). Short presses may cycle through temperature levels or turn the cooling on/off. Refer to the display for the current cooling status and temperature setting.

The cooling function helps keep wet food fresh for 1-4 days, cooked meat for 1-2 days, and raw meat for 1 day.

SEMICONDUCTOR TECHNOLOGY



Keep food fresh all day long without worrying about it spoiling



3 levels of refrigeration, adjustable temperature
The temperature of the food is maintained between 13 and 23°C



Cooling function can be turned on/off



Image: Illustration of the semiconductor cooling technology, ensuring food freshness with adjustable temperature settings.

3 Levels Of Cooling Mode

Depending on the season, different levels can be selected

 23°C

 17°C

 13°C

All temperature settings are relative temperatures measured at room temperature 25°C as the base temperatures.

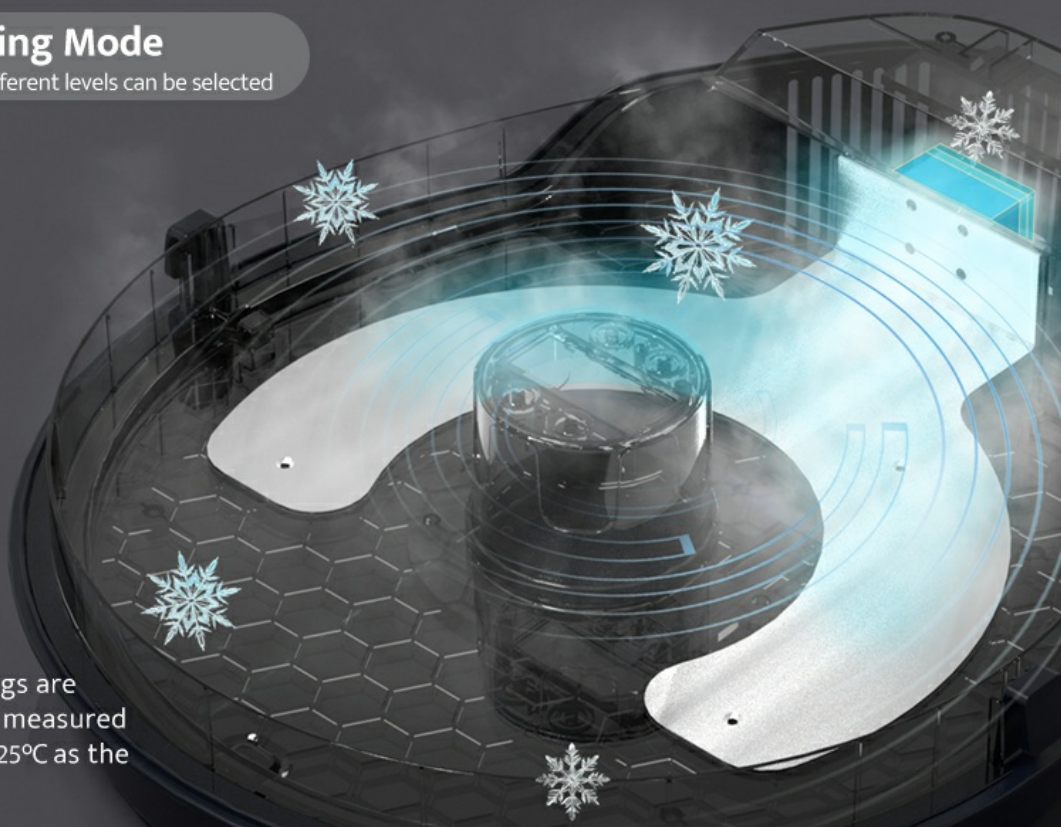 


Image: Explanation of the three cooling levels available, allowing you to select the appropriate temperature based on the season and food type.

MAINTENANCE

Regular cleaning is essential to ensure hygiene and prolong the life of your feeder.

1. **Disassembly:** Unplug the feeder from the power outlet. Remove the top cover and then lift out the food plate.
2. **Cleaning the Food Plate and Cover:** The food plate and cover are made of food-grade PP material and are dishwasher safe. Alternatively, wash them by hand with warm water and a mild dish soap. Rinse thoroughly to remove all soap residue and dry completely before reassembly.
3. **Cleaning the Main Unit:** The main unit, which contains the electronic and refrigeration components, should **not** be submerged in water. Wipe the exterior and the refrigeration parts with a soft, damp cloth. For stubborn stains, use a slightly moistened cloth with mild soap, then wipe with a clean, damp cloth, and dry immediately.
4. **Reassembly:** Once all parts are clean and dry, reassemble the feeder by placing the food plate back into the main unit and securing the cover.

Note: It is best not to keep opened wet food in the feeder for more than 48 hours, even with cooling, to ensure optimal freshness and safety.



Image: The food plate is fully washable, ensuring hygienic feeding for your pet.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Feeder does not turn on.	No power connection.	Ensure the power adapter is securely plugged into the feeder and a working wall outlet.
Food is not staying cool.	Cooling function not activated or set to low level; high ambient temperature.	Verify the cooling function is turned on and set to an appropriate level. Ensure the feeder is not in direct sunlight or a very warm room.
Meals are not dispensing at scheduled times.	Incorrect time settings; food blockage; feeder not powered on.	Check programmed meal times and current time settings. Ensure the feeder is powered on. Clear any food debris that might obstruct the rotation mechanism.
Display is not working.	Power issue; internal malfunction.	Check power connection. If power is confirmed, contact customer support.

SPECIFICATIONS

- **Model Number:** EZ_BOW1
- **Product Dimensions (L x W x H):** 13.8" x 12.2" x 4"
- **Item Weight:** 1.81 Kilograms (approximately 3.99 Pounds)
- **Material:** Polypropylene (PP)
- **Target Species:** Cat
- **Food Compartments:** 5
- **Capacity per Compartment:** Approximately 330g
- **Cooling Technology:** Semiconductor Refrigeration
- **Temperature Range:** 13°C to 23°C (relative to 25°C ambient)
- **Operation Mode:** Automatic

- **Power Source:** AC Adapter (Batteries not required or included)

WARRANTY AND SUPPORT

This product is covered by a warranty provided by EZSKUUP. For specific warranty details, including duration and coverage, please refer to the warranty information included with your purchase or contact the seller directly.

If you encounter any issues or have questions regarding your SAROSORA Automatic Cat Feeder, please do not hesitate to contact our customer service. Your satisfaction is our top priority, and we are here to help sincerely.

Customer Service Contact: Please refer to your purchase documentation or the seller's contact information on the platform where you purchased the product.

© 2026 SAROSORA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FQMXT2V1>

More documents and user manuals: <https://manuals.plus/>

