

[Manuals.plus](#) /

› [Soohow](#) /

› Soohow Mid-Century Modern Dining Chairs Set of 2 Instruction Manual

## Soohow Mid-Century Modern Dining Chairs Set of 2

# Soohow Mid-Century Modern Dining Chairs Set of 2 Instruction Manual

Model: Mid-Century Modern Dining Chairs Set of 2 | Brand: Soohow

## 1. INTRODUCTION

Thank you for choosing the Soohow Mid-Century Modern Dining Chairs. This manual provides essential information for the safe assembly, operation, and maintenance of your new chairs. Please read these instructions carefully before assembly and retain them for future reference.



## 2. SAFETY INFORMATION

---

- Ensure all parts are present and undamaged before beginning assembly. Do not use if any parts are missing or damaged.
- Assemble the chairs on a soft, clean surface to prevent scratches.
- Tighten all screws firmly, but do not overtighten to avoid stripping threads.
- Regularly check and retighten all fasteners to ensure stability.
- Do not stand on the chairs or use them as a step stool.
- Maximum weight capacity per chair is 300 lbs. Do not exceed this limit.
- Keep small parts and packaging materials away from children.

## 3. PACKAGE CONTENTS

---

Please verify that all components listed below are included in your package:

- Chair Backrest with Rattan (2)
- Seat Cushion (2)
- Front Legs (4)
- Back Legs (4)
- Hardware Pack (Screws, Washers, Allen Key) (1)

## 4. ASSEMBLY INSTRUCTIONS (SETUP)

---

Assembly is designed to be straightforward and typically takes about 10 minutes per chair. All necessary tools are included.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a soft, flat surface to prevent damage.
2. **Attach Backrest to Seat:** Align the chair backrest with the pre-drilled holes on the seat cushion frame. Secure using the provided screws and washers. Do not fully tighten yet.
3. **Attach Legs:** Identify the front and back legs. Attach each leg to the corresponding corner of the seat frame using the provided screws and washers. Ensure the adjustable foot pads are facing downwards.
4. **Final Tightening:** Once all components are loosely assembled, place the chair upright on a level surface. Apply gentle pressure to ensure it sits evenly, then progressively tighten all screws until secure. Do not overtighten.
5. **Adjust Foot Pads:** If the chair is wobbly, adjust the foot pads on the bottom of the legs until the chair is stable.



Image 4.1: Side view of an assembled chair, illustrating leg and backrest attachment points.

## 5. CARE AND MAINTENANCE

---

Proper care will extend the life and appearance of your chairs.

- **Boucle Fabric:** For routine cleaning, vacuum the fabric with a soft brush attachment. For spills, blot immediately with a clean, dry cloth. For stubborn stains, use a mild fabric cleaner following the product instructions, testing on an inconspicuous area first.
- **Rattan Backrest:** Wipe with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners. Keep away from direct sunlight and excessive moisture to prevent drying or warping.
- **Metal Frame:** Wipe clean with a soft, damp cloth. Dry immediately to prevent rust. Avoid abrasive cleaners or scouring pads.

- **General:** Periodically check and tighten all screws to maintain structural integrity. Avoid placing hot items directly on the seat or backrest.



Premium Boucle Fabric



High Quality Metal



Adjustable Feet

Image 5.1: Details of the chair's materials: Boucle fabric, metal frame, and adjustable foot pads.

## 6. TROUBLESHOOTING

| Problem                            | Possible Cause                                                    | Solution                                                                                                                      |
|------------------------------------|-------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| Chair is wobbly                    | Screws are loose; uneven floor; foot pads not adjusted.           | Tighten all assembly screws. Ensure the chair is on a level surface. Adjust the leveling foot pads on the bottom of the legs. |
| Parts do not align during assembly | Incorrect orientation of parts; screws overtightened prematurely. | Loosen all screws, re-align parts, and then tighten progressively. Refer to assembly steps for correct part orientation.      |
| Fabric appears dirty or stained    | Dust accumulation; liquid spill.                                  | Vacuum regularly. Blot spills immediately with a clean, dry cloth. Use a mild fabric cleaner for stains, testing first.       |

## 7. SPECIFICATIONS

| Feature                      | Detail                                    |
|------------------------------|-------------------------------------------|
| Brand                        | Soohow                                    |
| Model                        | Mid-Century Modern Dining Chairs Set of 2 |
| Color                        | Khaki                                     |
| Product Dimensions (Overall) | 21.3"D x 19.3"W x 31.1"H                  |
| Seat Depth                   | 21.3 inches                               |
| Back Style                   | Solid Back with Rattan                    |
| Frame Material               | Metal                                     |
| Upholstery Material          | Boucle Fabric                             |
| Weight Capacity              | 300 lbs per chair                         |

# Product Information



Image 7.1: Product Dimensions Diagram

## 8. WARRANTY AND SUPPORT

Soohow is committed to providing quality products and customer satisfaction. While specific warranty details are not provided in this manual, our dedicated support team is available to assist you with any questions or concerns regarding your product. Should you encounter any issues or require assistance, please contact our customer support. Our team aims to reply within 24 hours to address your inquiries.

For support, please refer to the contact information provided with your purchase or visit the official Soohow website.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

**Name**

Anonymous

**Email**

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

**Question**

Example: How do I reset this device or fix this error?

**Details**

Model number, symptoms, what you tried, or the section of the manual you are using.

**Submit question**