

## OMOTON WK209

# OMOTON WK209 Wireless Keyboard and Mouse Set User Manual

Model: WK209

## 1. INTRODUCTION

Thank you for choosing the OMOTON WK209 Wireless Keyboard and Mouse Set. This manual provides detailed instructions for setting up, operating, and maintaining your new wireless peripheral set. Please read this manual carefully before use to ensure optimal performance and longevity of your product.

## 2. PACKAGE CONTENTS

The OMOTON WK209 Wireless Keyboard and Mouse Set package includes the following items:

- 1 x OMOTON WK209 Wireless Keyboard
- 1 x OMOTON Wireless Mouse
- 1 x USB 2.4 GHz Receiver

**Note: AAA batteries are required for operation but are not included in the package.**


## 3. SETUP GUIDE

### 3.1. Installing Batteries

Before using the keyboard and mouse, you need to install batteries.

1. Locate the battery compartment on the underside of the keyboard and mouse.
2. Open the battery covers.
3. Insert two AAA batteries into the keyboard and one AAA battery into the mouse, ensuring correct polarity (+/-).

4. Close the battery covers securely.

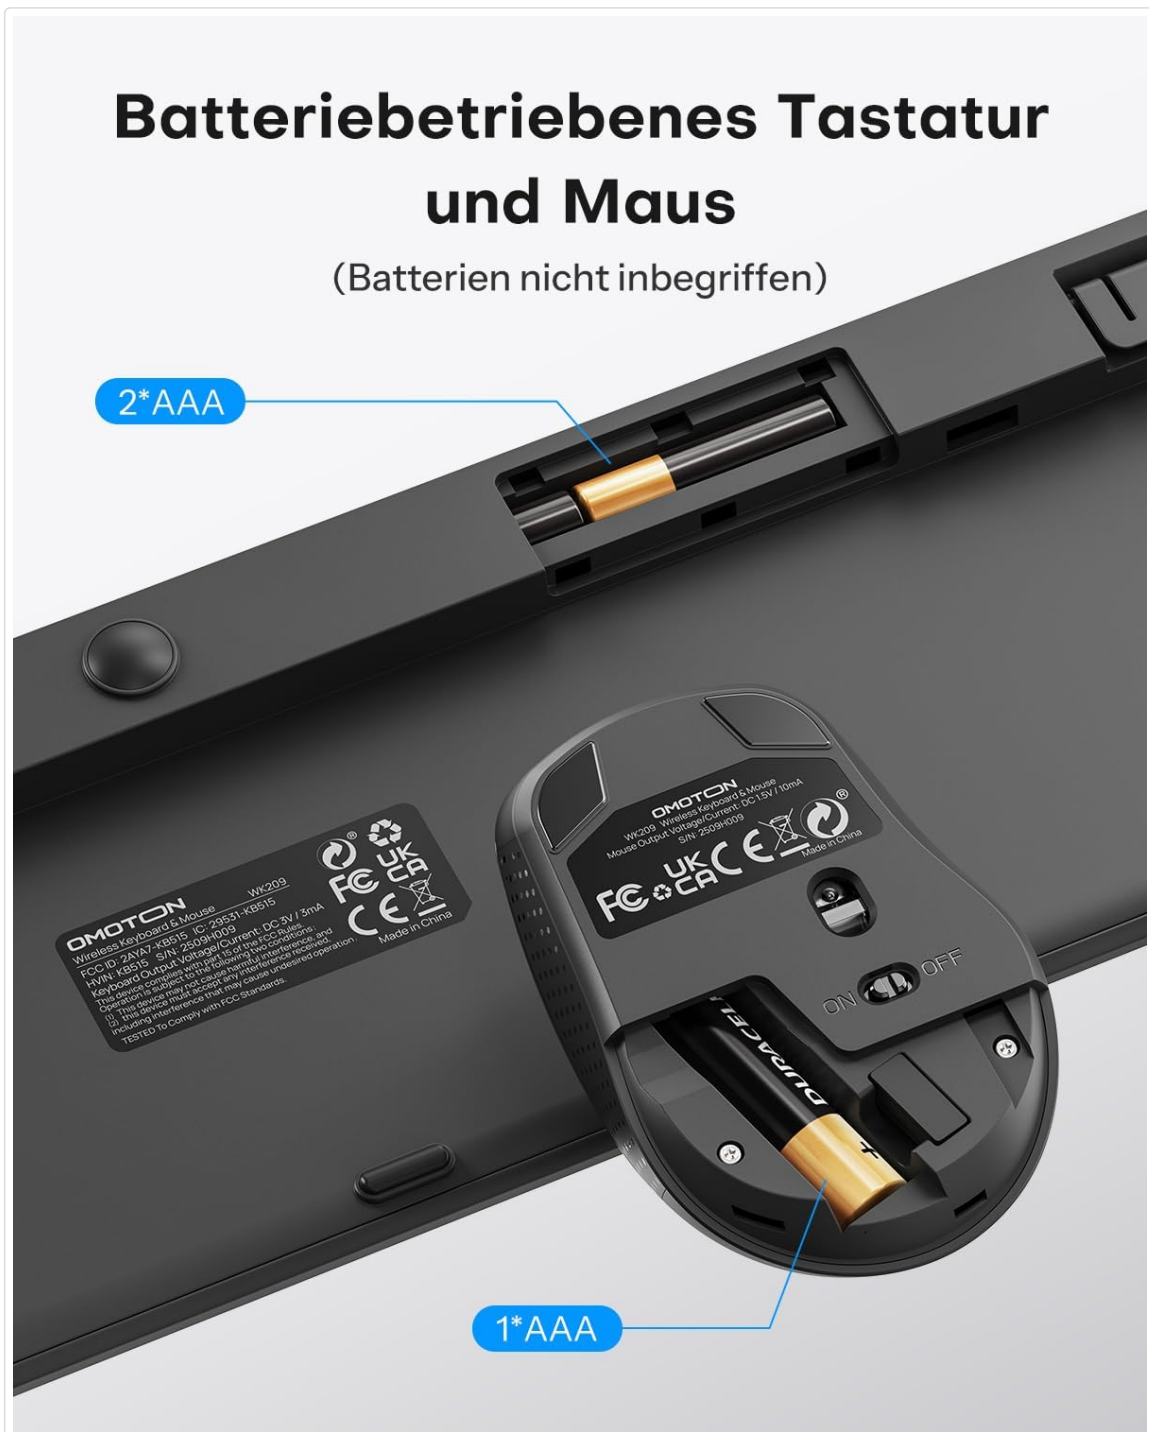

This image displays the battery compartments for the OMOTON WK209 keyboard and mouse. The keyboard requires two AAA batteries, and the mouse requires one AAA battery. Please note that batteries are not included with the product.

### 3.2. Connecting the USB Receiver

The OMOTON WK209 set uses a single USB receiver for both the keyboard and mouse.

1. Locate the USB 2.4 GHz receiver, usually stored in the mouse's battery compartment or packaging.
2. Plug the USB receiver into an available USB port on your computer (laptop or desktop PC).
3. The system will automatically detect and install the necessary drivers. This is a Plug & Play process and typically requires no manual installation.
4. Turn on the mouse using the ON/OFF switch located on its underside. The keyboard does not

have a separate power switch; it activates when keys are pressed.

## 2,4-GHz-Kabellose Verbindung



Plug & Play



2.4G Stabile  
Verbindung



10m/33ft  
Funkreichweite




This image illustrates the 2.4 GHz wireless connection of the OMOTON WK209 keyboard and mouse set. It highlights features such as Plug & Play functionality, a stable 2.4G connection, and a wireless range of up to 10 meters (33 feet).

### 3.3. Compatibility

The OMOTON WK209 set is compatible with a wide range of Windows operating systems.

- **Operating Systems:** Windows 11, Windows 10, Windows 8, Windows 7, Windows XP.
- **Devices:** Laptop, Desktop PC.

# Kompatibel mit Windows 7/8/10/11 u.s.w.

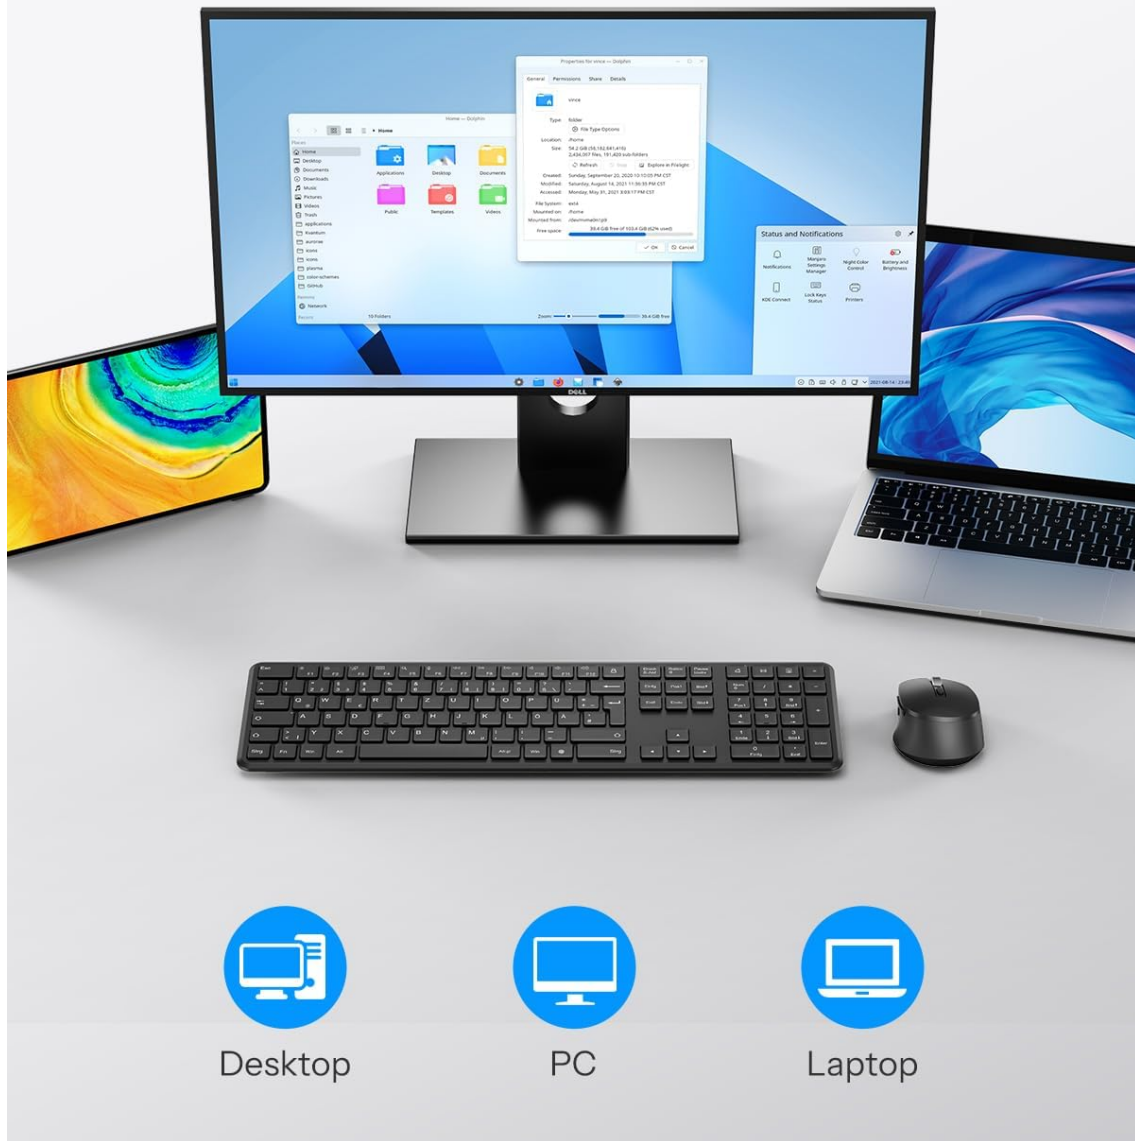

This image demonstrates the broad compatibility of the OMOTON WK209 set with different Windows operating systems, including Windows 7, 8, 10, and 11, across desktop PCs and laptops.

## 4. OPERATING INSTRUCTIONS

### 4.1. Keyboard Usage

The WK209 keyboard features a full-size QWERTZ layout with multimedia keys for enhanced productivity. Simply begin typing after successful connection.

- **Multimedia Keys:** Access functions like volume control, play/pause, and more directly from the keyboard.
- **QWERTZ Layout:** Standard German keyboard layout for familiar typing experience.

- **8° Tilt:** The keyboard is designed with a natural 8-degree tilt for ergonomic comfort during extended use.

## DE Layout in Voller Größe

8° Kippung Natürliche Kippung



This image provides the physical dimensions of the OMOTON WK209 full-size QWERTZ keyboard (43.8 cm x 12.4 cm) and mouse (10.3 cm x 6.6 cm x 3.6 cm). It also notes the keyboard's natural 8-degree tilt for comfortable typing.

### 4.2. Mouse Usage

The WK209 mouse offers precise control and several functional buttons.

- **Left Click:** Standard selection and activation.
- **Right Click:** Accesses context menus.
- **Scroll Wheel:** For vertical scrolling and middle-click functionality.
- **Back Button:** Navigates back in web browsers or file explorers.
- **Forward Button:** Navigates forward in web browsers or file explorers.

- **Desktop Show/Hide Button:** Quickly minimizes all open windows to show the desktop, and restores them with another press.



This image highlights the features of the OMOTON WK209 wireless mouse, including the scroll wheel, left-click button, right-click button, back button, forward button, and a button for showing/hiding the desktop. It also emphasizes its ergonomic design and quiet click functionality.

## 5. FEATURES

- **2.4 GHz Wireless Connection:** Provides a stable and reliable connection with a range of up to 10 meters (33 feet).
- **Plug & Play:** Easy setup without the need for additional software or drivers.
- **Full-size QWERTZ Layout:** Comfortable and familiar typing experience.


- **Multimedia Keys:** Convenient access to media controls.
- **Ergonomic Design:** The mouse is shaped for comfortable use, and the keyboard features a natural 8-degree tilt.
- **Quiet Operation:** Both the keyboard and mouse are designed for silent clicks and keystrokes, ideal for quiet environments.
- **Low Battery Indicator:** The keyboard features an indicator light to alert you when batteries are running low.

## Lautlose Tasten und Geräuschlose Maus



This image illustrates the quiet operation of the OMOTON WK209 keyboard and mouse, highlighting its silent keys and noiseless mouse clicks, suitable for quiet environments.

# Anzeige für Niedrigen Batteriestand

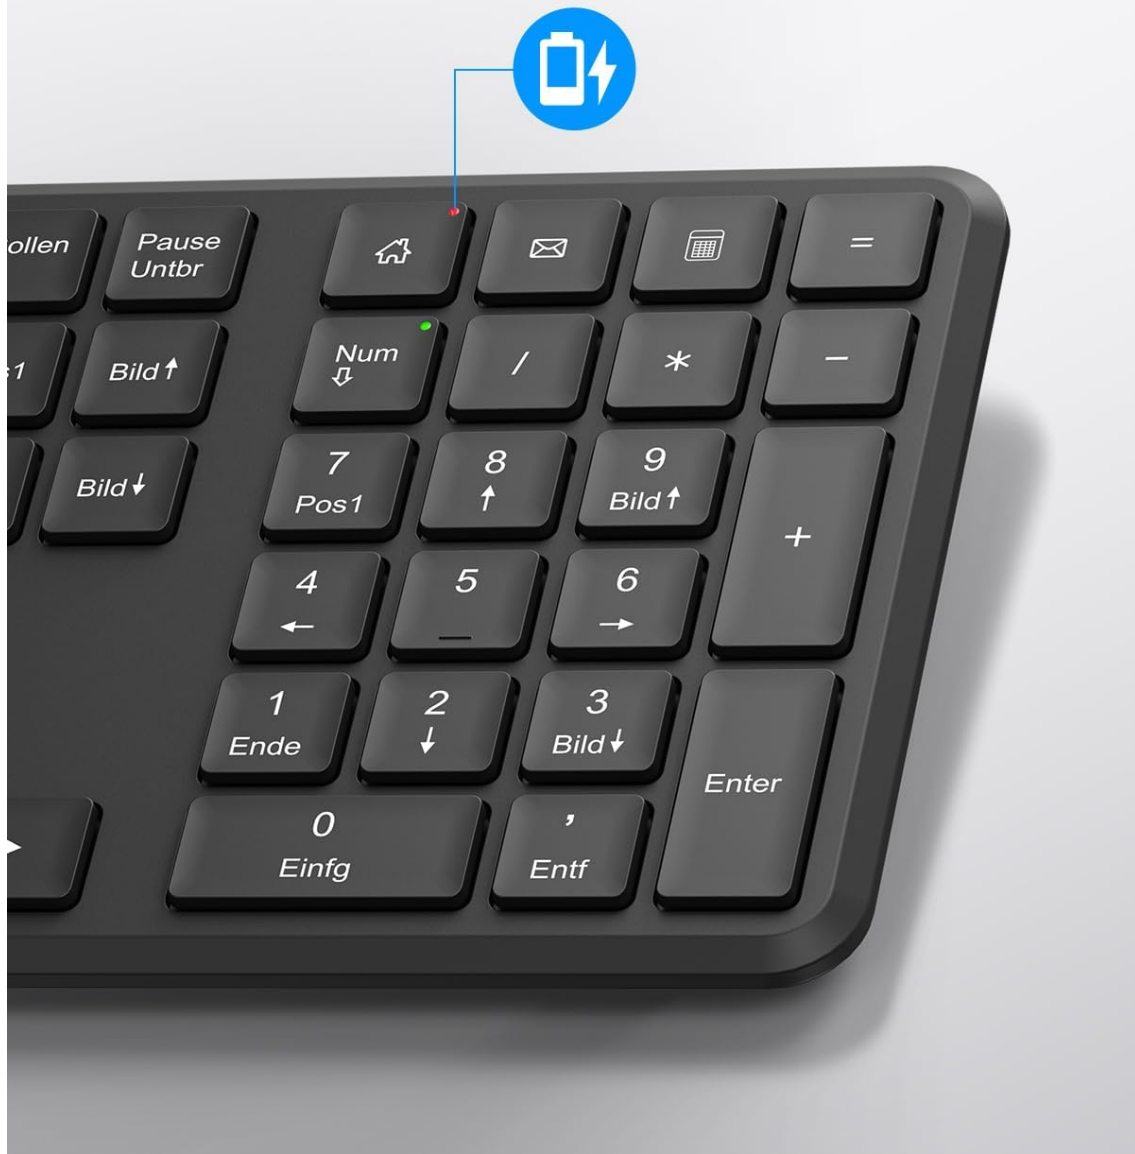

This image points out the low battery indicator on the OMOTON WK209 keyboard, which illuminates to alert the user when batteries need to be replaced.

## 6. MAINTENANCE

To ensure the longevity and optimal performance of your OMOTON WK209 set, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the surfaces of the keyboard and mouse. For stubborn dirt, a slightly damp cloth can be used, but ensure no moisture enters the devices.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears or when performance degrades. Always use fresh, high-quality AAA batteries.
- **Storage:** When not in use for extended periods, remove the batteries to prevent leakage. Store

the devices in a cool, dry place.

- **Avoid Liquids:** Keep the keyboard and mouse away from liquids to prevent damage.

## 7. TROUBLESHOOTING

If you encounter issues with your OMOTON WK209 set, try the following troubleshooting steps:

- **No Response from Keyboard/Mouse:**

- Ensure batteries are correctly installed and not depleted. Replace them if necessary.
- Make sure the mouse's ON/OFF switch is in the 'ON' position.
- Verify the USB receiver is securely plugged into a working USB port on your computer. Try a different USB port.
- Restart your computer.

- **Lag or Intermittent Connection:**

- Move the keyboard and mouse closer to the USB receiver.
- Ensure there are no large metal objects or other wireless devices (e.g., Wi-Fi routers, cordless phones) interfering with the 2.4 GHz signal.
- Try plugging the USB receiver into a front USB port or using a USB extension cable to bring it closer to the devices.

- **Keys Not Working Correctly:**

- Check for any debris under the keys.
- Ensure the keyboard layout setting on your computer matches the QWERTZ layout.

- **Mouse Cursor Jumps or is Inaccurate:**

- Clean the optical sensor on the underside of the mouse.
- Use the mouse on a clean, non-reflective surface or a mouse pad.

## 8. SPECIFICATIONS

Feature	Detail
Brand	OMOTON
Model	WK209
Color	Black
Connectivity Technology	2.4 GHz Wireless
Keyboard Layout	Full-size QWERTZ (German Layout)
Special Features	2.4 GHz, Full-size, QWERTZ-layout, Battery-operated, Multimedia keys
Compatible Devices	Laptop, PC

Compatible Operating Systems	Windows 11/10/8/7/XP
Power Source	Battery-Powered (2x AAA for keyboard, 1x AAA for mouse - not included)
Item Weight (approx.)	514 Grams (total set, including packaging)
Package Dimensions	44.79 x 13.9 x 5.3 cm
ASIN	B0FQNS3FFB

## 9. WARRANTY AND SUPPORT

OMOTON products are designed for reliability and performance. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official OMOTON website. If you experience any issues that cannot be resolved using the troubleshooting guide, please contact OMOTON customer service for assistance.