

Fredorch MHC-FR2

FREDORCH FR2 Machine Instruction Manual

Model: MHC-FR2

1. INTRODUCTION

This manual provides detailed instructions for the safe and effective use of your FREDORCH FR2 machine. Please read this manual thoroughly before operating the device and retain it for future reference.

2. SAFETY INFORMATION

Warning: This product is intended for adult use only.

Always read and understand all instructions before use. Failure to do so may result in injury or damage to the product. Keep the device away from water and extreme temperatures. Disconnect from power when not in use or during cleaning. Inspect the device and all attachments for any damage before each use. Do not use if any components are damaged.

3. PACKAGE CONTENTS

Verify that all components are present in your package:

- FREDORCH FR2 Machine Unit
- Power Adapter (24V Power Supply)
- Wired Control Unit (if applicable)
- Wireless Remote Control (if applicable)
- Realistic Dildo Attachment
- Vibrator Clamp
- T-Support Rods (for T-type assembly)
- H-Support Rods (for H-type assembly)
- Instruction Manual

Protect your privacy

The packaging does not contain sensitive text to ensure your privacy.



Product standard display



Product packaging display

Image: Product standard display showing the machine unit, power adapter, remote control, and various components. Below, the product packaging display shows the machine components securely packed in foam within a plain brown box, emphasizing discreet packaging.

Accessory size

Decagon Anti Rotation Interface



Image: Detailed view of accessories including a realistic dildo (7.87 inches / 20 cm length, 1.22 inches / 3.1 cm width) and a vibrator clamp (2.83 inches / 7.2 cm height, 1.88 inches / 4.8 cm width), illustrating their dimensions.

4. SETUP AND ASSEMBLY

The FREDORCH FR2 supports two primary assembly modes: T-type and H-type. Choose the mode that best suits your intended use.

4.1. General Assembly Steps

1. Unpack all components and verify against the package contents list.
2. Attach the support rods to the main machine unit according to your desired assembly type (T-type or H-type). Ensure all connections are secure.
3. Connect the desired attachment (e.g., dildo) to the machine's anti-rotation interface. Ensure it is firmly locked into place.
4. Connect the power adapter to the machine and then plug it into a suitable power outlet.



Image: Illustration of the two assembly modes: H-type (vertical stand) and T-type (horizontal stand), demonstrating how the support rods are configured for each setup.

4.2. Attaching Accessories

The machine features a Decagon Anti-Rotation Interface for secure attachment of accessories. To attach an accessory:

1. Align the accessory's interface with the machine's interface.
2. Push and twist until the accessory locks securely into place.

Vac U Lock Dildos onto the adapter



Machine interfaces



Accessories Interfaces



Vac U Lock Dildos
onto the adapter

Just Compatible with FREDORCH
'Z'series Anti Rotation Interface Sex Toys

Image: Close-up view demonstrating how to connect a Vac U Lock dildo onto the machine's adapter, highlighting the machine and accessory interfaces.

**Relaxed Control the Angle of
any opposite edge for accessory**



Decagon Anti Rotation Interface



Image: Detailed view of the Decagon Anti-Rotation Interface, designed for stable and secure attachment of accessories.

5. OPERATING INSTRUCTIONS

The FREDORCH FR2 machine can be controlled via a wired unit or a wireless remote control, offering 20 different classic modes.

5.1. Basic Controls

The control unit (wired or wireless) typically features the following buttons:

- **Speed Key-up (▲):** Increases the thrusting speed.
- **Pause Key (□):** Pauses or resumes operation.
- **Speed Key-Slow (▼):** Decreases the thrusting speed.
- **Modes Key (○):** Cycles through the 20 different classic modes.



Image: Depicts the remote control with labeled buttons for speed up, pause, speed down, and mode selection, illustrating how to control the machine's functions.

5.2. Adjusting Speed and Stroke

The machine offers adjustable thrusting speeds ranging from 0 to 300 times per minute. The stroke length is adjustable between 3 cm and 9 cm. Use the Speed Up and Speed Down keys to fine-tune the intensity.

Strong Power & Multi-Angle Adjustable

300 beats per minute almost no noise



80W Max Power
Peak torque 260NCM



20 Different
classic modes

Turbine engine full power, enjoy the "out of world" fun.
Experience Relentless Thrusting & Satisfaction That Are 5 Times Stronger than Competition

Image: Shows the machine in operation, highlighting its 80W max power and 20 different classic modes. The image also suggests multi-angle adjustability.

5.3. Adjusting Angles and Positions

The FREDORCH FR2 is designed for multi-angle and height adjustments, allowing for various positions. The swing arm can be adjusted to change the angle of thrust. The support rods can also be configured to achieve different heights and orientations.

Multi Angles Heights Adjustable

Easy to change more postures.
Indulge in Sensual Penetration from All Your favorite Positions



Very convenient for female users to use and carry.

Image: Illustrates various adjustable angles and heights for the machine, including 0° for a horizontal position, 45° for a standing presentation, 90° for a vertical position, and -45° for another angled position, demonstrating its versatility.

6. MAINTENANCE

6.1. Cleaning

Always disconnect the machine from the power source before cleaning. Clean the machine unit with a soft, damp cloth. Do not immerse the main unit in water. Clean attachments thoroughly with warm water and a mild, toy-safe soap, or a specialized toy cleaner. Rinse thoroughly and allow to air dry completely before storage.

6.2. Storage

Store the FREDORCH FR2 machine and its accessories in a clean, dry place, away from direct sunlight and extreme temperatures. Ensure all components are dry before storage. Discreet packaging is provided for privacy.

7. TROUBLESHOOTING

If you encounter any issues with your FREDORCH FR2 machine, please refer to the following common solutions:

- **Machine not turning on:** Ensure the power adapter is securely connected to both the machine and a working power outlet. Check if the power outlet is functional.
- **Remote control not responding:** If using a wireless remote, ensure batteries are correctly inserted and charged. Try moving closer to the machine.
- **Unusual noises or vibrations:** Discontinue use immediately. Check all connections and attachments for proper assembly. Ensure no foreign objects are obstructing moving parts.
- **Attachments not staying secure:** Ensure the accessory is correctly aligned and locked into the Decagon Anti-Rotation Interface. Inspect the interface for any damage or wear.

If problems persist after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Feature	Specification
Model Number	MHC-FR2
Power	80W Turbine Motor
Thrusting Speed	0-300 times per minute
Stroke Length	3-9 cm (1.18-3.54 inches)
Control	Wired & Wireless Remote Control
Modes	20 Classic Modes
Assembly Modes	T-type / H-type
Interface	Decagon Anti-Rotation Interface
Parcel Dimensions	42 x 26 x 26 cm
Weight	4 kg (8.4 lbs)

PERFECT SIZE AND WEIGHT



20 dB

Nearly
Inaudible

30 dB

Whisper

40 dB

Indoor to
whisper

50 dB

Normal
Conversation

60 dB

Phone
Ringtone

70 dB

Animated
Street

The sex device's advanced guide rails and whisper-quiet motor allow it to deliver quality comfort at any speed you need with a soft purr (0 - 35dB)

Image: Displays the machine's dimensions (e.g., 12.99 inches / 33 cm width, 3.74 inches / 95 mm height) and weight (3.8KG / 8.4 lb). It also includes a noise level chart indicating operation between 0-35dB, described as nearly inaudible to a whisper.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the manufacturer's official website or contact their customer service directly. Keep your purchase receipt as proof of purchase.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question