

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [REACHER](#) /

› [REACHER CR7WL FM Alarm Clock Radio with White Noise Machine User Manual](#)

## REACHER CR7WL

# REACHER CR7WL FM Alarm Clock Radio with White Noise Machine User Manual

Model: CR7WL

## INTRODUCTION

---

This manual provides detailed instructions for the setup, operation, and maintenance of your REACHER CR7WL FM Alarm Clock Radio with White Noise Machine. Please read this manual thoroughly before using the device to ensure proper function and to maximize your user experience. Keep this manual for future reference.

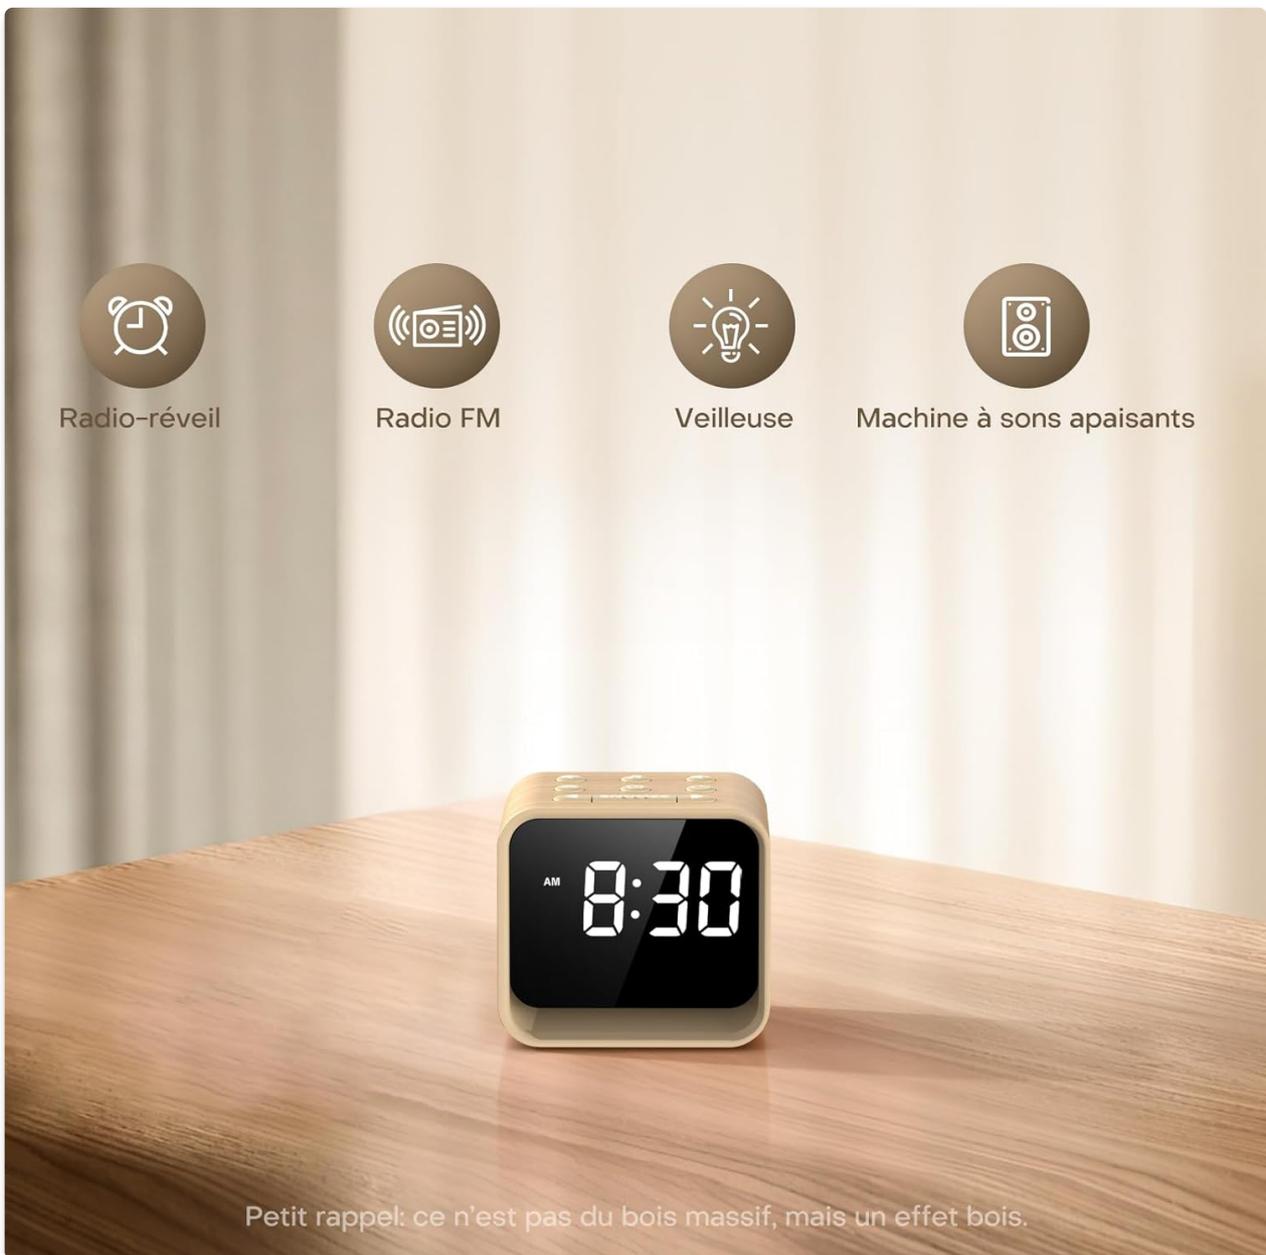


Image: The REACHER CR7WL device highlighting its core functionalities: Alarm Clock, FM Radio, Night Light, and Soothing Sound Machine.

## PRODUCT FEATURES

- **Enhanced FM Radio Experience:** Enjoy clear, high-quality FM radio with automatic station search and easy saving of favorite stations.
- **Customizable Alarm:** Choose from 9 alarm sounds, including 8 natural sounds (bird, flute, piano, frog, stream, wave, bell, beep) or your preferred FM radio station. Features a 9-minute snooze function and adjustable volume (20-105 dB).
- **4-in-1 Bedside Companion:** Functions as a connected alarm clock, FM radio, night light, and sleep aid.
- **Soothing Sleep Aid:** Access 24 relaxing sounds, including natural sounds (rain, fan, waves) and various white noises (white, brown, pink, blue) for a customized sleep environment.
- **Adjustable Display & 7-Color Night Light:** Clear display with adjustable brightness for day and night viewing. The integrated 7-color night light at the base creates a soft, warm ambiance.
- **Power Source:** Operates exclusively via AC power.

## PACKAGE CONTENTS

Please check the package for the following items:

- REACHER CR7WL FM Alarm Clock Radio
- Power Adapter (DC 5V)
- User Manual

## PRODUCT LAYOUT AND CONTROLS



Image: Detailed view of the control buttons and ports on the REACHER CR7WL. The top panel features buttons for sound, time, alarm, FM radio, and snooze. The rear panel includes the display dimmer, night light brightness control, DC 5V power input, and the radio antenna.

### Top Panel Controls:

- **Sound On/Off Button:** Activates or deactivates soothing sounds.
- **Time Setting Buttons:** Adjusts hour and minute.

- **Alarm Setting/On/Off Button:** Configures and toggles the alarm.
- **FM Radio On/Off/Auto Search Button:** Controls FM radio functions.
- **SNOOZE Button:** Activates snooze function for alarms and controls the night light.

## Rear Panel Controls:

- **Display Dimmer:** Adjusts the brightness of the time display.
- **Night Light Brightness:** Adjusts the intensity of the 7-color night light.
- **DC 5V Input:** Power connection port.
- **Radio Antenna:** Extend for optimal FM reception.

## SETUP

---

### 1. Power Connection

1. Unpack the alarm clock and all accessories.
2. Insert the DC 5V power adapter into the DC 5V input port on the rear of the unit.
3. Plug the power adapter into a standard wall outlet. The display will light up.



Image: Illustration of connecting the power adapter to the alarm clock and a power source. A CR2032 button cell battery is also shown, which serves solely for memory backup of settings during power outages.

### 2. Time Setting

1. Press and hold the **Time Setting** button (usually marked with a clock icon) on the top panel. The hour digits will start flashing.
2. Use the +/- buttons (or similar directional buttons) to adjust the hour.
3. Press the **Time Setting** button again to switch to minute adjustment. The minute digits will flash.
4. Use the +/- buttons to adjust the minutes.
5. Press the **Time Setting** button once more to confirm and exit time setting mode.

## OPERATING INSTRUCTIONS

---

### 1. Setting the Alarm

1. Press and hold the **Alarm Setting** button (usually marked with an alarm clock icon). The alarm hour digits will flash.
2. Use the +/- buttons to set the desired alarm hour.
3. Press the **Alarm Setting** button again to switch to minute adjustment. The alarm minute digits will flash.
4. Use the +/- buttons to set the desired alarm minutes.
5. Press the **Alarm Setting** button again to select the alarm sound. Use the +/- buttons to cycle through the 9 available sounds (8 natural sounds + FM radio).
6. Press the **Alarm Setting** button once more to confirm and activate the alarm. An alarm icon will appear on the display.



Image: The 9 available alarm sounds, including various natural sounds and FM radio, designed to provide a gentle wake-up experience.

## 2. Snooze Function

When the alarm sounds, press the **SNOOZE** button to temporarily silence the alarm for 9 minutes. The alarm will sound again after 9 minutes. To turn off the alarm completely, press any other button.

## 3. FM Radio Operation

1. Extend the radio antenna on the rear of the unit for better reception.
2. Press the **FM Radio** button to turn on the radio.
3. Press and hold the **FM Radio** button to initiate an automatic station search. The radio will scan and save available stations.
4. Use the +/- buttons to cycle through saved stations or manually tune.
5. Adjust the volume using the dedicated volume controls (if available) or the +/- buttons in radio mode.
6. Press the **FM Radio** button again to turn off the radio.



Image: The FM Radio function, indicating a frequency range of 76-108 MHz, 0-30 volume levels, and an adjustable auto-off timer from 0-180 minutes.

#### 4. White Noise / Soothing Sounds

1. Press the **Sound On/Off** button to activate the soothing sounds.
2. Use the +/- buttons to cycle through the 24 available soothing sounds.
3. Adjust the volume using the dedicated volume controls or the +/- buttons in sound mode.
4. Press the **Sound On/Off** button again to turn off the sounds.

# 24 Sons apaisants



Image: An overview of the 24 soothing sounds, categorized into 6 white noises, 4 fan sounds, 2 baby-specific sounds, and 12 nature sounds, designed to aid relaxation and sleep.

## 5. Night Light Function

1. Press the **SNOOZE** button to turn on the night light.
2. Press the **SNOOZE** button repeatedly to cycle through the 7 available colors.
3. Use the **Night Light Brightness** control on the rear panel to adjust the intensity of the light.
4. Press and hold the **SNOOZE** button to turn off the night light.

# Lumière inférieure 7 couleurs

 Luminosité réglable

 Option Marche/Arrêt



Image: The 7-color ambient night light feature, showing the light emanating from the base of the clock, with options for adjustable brightness.

## 6. Sleep Timer

The sleep timer allows the FM radio or soothing sounds to play for a set duration before automatically turning off. This duration can be set from 0 to 180 minutes.

1. While FM radio or soothing sounds are playing, press the **Sleep Timer** button (if available, or refer to specific button combinations in the quick start guide).
2. Use the +/- buttons to select the desired sleep timer duration.
3. The device will automatically turn off the audio after the set time.

## 7. Display Brightness Adjustment

The display brightness can be adjusted to suit your preference, ensuring readability during the day and preventing disturbance at night.

1. Locate the **Display Dimmer** control on the rear panel of the unit.
2. Slide or rotate the control to increase or decrease the display brightness.

# Affichage à luminosité réglable

Facile à lire le jour, sans éblouissement la nuit



Image: The adjustable brightness display, demonstrating its readability in various lighting conditions, from bright daylight to a dim night setting.

## MAINTENANCE

To ensure the longevity and optimal performance of your REACHER CR7WL:

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Placement:** Place the device on a stable, flat surface. Avoid direct sunlight, excessive heat, or moisture.
- **Power:** Always use the provided power adapter. Disconnect power during electrical storms or when not in use for extended periods.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Power adapter not connected or faulty outlet.	Ensure the power adapter is securely plugged into the device and a working wall outlet. Try a different outlet.

Problem	Possible Cause	Solution
No sound from FM radio.	Antenna not extended, poor reception, or volume too low.	Extend the radio antenna fully. Try repositioning the device. Increase the volume. Perform an automatic station search.
Alarm does not sound.	Alarm not activated or volume too low.	Ensure the alarm is set and the alarm icon is visible on the display. Increase the alarm volume.
Display is too dim or too bright.	Display dimmer not adjusted.	Adjust the Display Dimmer control on the rear panel.
Night light not working or wrong color.	Night light off or color not selected.	Press the SNOOZE button to turn on/cycle colors. Adjust brightness with the Night Light Brightness control.

## SPECIFICATIONS

Feature	Detail
Brand	REACHER
Model Number	CR7WL
Color	Maple Finish
Product Dimensions (L x W x H)	9 x 3.81 x 8 cm (3.54 x 1.5 x 3.15 inches)
Weight	480 grams (1.06 lbs)
Material	Wood-look finish (not solid wood)
Display Type	Digital
Special Features	Adjustable Brightness, FM Radio, White Noise Machine, 7-Color Night Light, 9 Alarm Sounds, Sleep Timer
Power Source	Corded Electric (DC 5V Adapter)
Backup Battery	CR2032 (for memory retention only)



Image: Product dimensions showing the device measures 9 cm in length, 7.2 cm in depth, and 8 cm in height.

## WARRANTY AND SUPPORT

### Warranty Information

REACHER products are designed and manufactured to the highest quality standards. For specific warranty details, please refer to the warranty card included in your product packaging or contact customer support.

### Customer Support

If you encounter any issues or have questions regarding your REACHER CR7WL FM Alarm Clock Radio, please contact our customer support team. Contact information can typically be found on the product packaging or our official website.

Please have your model number (CR7WL) and purchase details ready when contacting support.

