

[manuals.plus](#) /

› [Lefant](#) /

› [Lefant M3 Max Robot Vacuum and Mop User Manual](#)

Lefant M3 Max

Lefant M3 Max Robot Vacuum and Mop User Manual

Model: M3 Max

1. INTRODUCTION

Thank you for choosing the Lefant M3 Max Robot Vacuum and Mop. This manual provides essential information for the safe operation, maintenance, and troubleshooting of your device. Please read it thoroughly before use and retain it for future reference.



Image: The Lefant M3 Max robot vacuum and its accompanying self-cleaning station, shown with additional mop pads and dust bags.

2. PRODUCT OVERVIEW

2.1 Components

Qu'y a-t-il dans la boîte?



Image: An illustration detailing the contents of the Lefant M3 Max package, including the robot, self-cleaning station, power cord, dust bags, side brushes, mop holders, washable mop cloths, HEPA filter, cleaning tool, cleaning liquid, and user manual.

The package includes the following items:

- Lefant M3 Max Robot Vacuum and Mop
- Self-Cleaning Station
- Power Cord
- Dust Bags (x2)
- Side Brushes (x2)
- Mop Holders (x2)
- Washable Mop Cloths (x4)
- HEPA Filter (x2)
- Cleaning Tool
- Cleaning Liquid
- User Manual

2.2 Key Features

- **Advanced Navigation:** dToF 360° Laser Navigation for precise mapping and efficient path planning.
- **Obstacle Avoidance:** PSD 190° obstacle detection and Freemove 3.0 sensor network for comprehensive protection.
- **Powerful Suction:** 20,000 Pa hyper suction for deep cleaning on various surfaces.
- **Dual Rotating Mops:** 200 RPM high-speed rotating mops with 9mm auto-lift function for effective stain removal and carpet protection.
- **All-in-One Self-Cleaning Station:** Features 45°C hot water sterilization, 2-hour air drying, and a 3.5L automatic dust collection system.
- **Anti-Tangle Brush:** V-shaped brush with double comb design to prevent hair entanglement.
- **Smart Control:** Multi-level mapping, customizable cleaning zones, no-go zones, scheduled cleaning via the Lefant app, and voice control compatibility (Alexa, Google Assistant).
- **Extended Runtime:** 220 minutes of cleaning on a single charge, covering up to 220 m².

3. SETUP

3.1 Unpacking and Placement

1. Carefully remove all components from the packaging.
2. Place the self-cleaning station on a hard, flat surface against a wall. Ensure there is at least 0.5 meters of clear space on both sides and 1.5 meters in front of the station for optimal robot navigation.
3. Connect the power cord to the self-cleaning station and plug it into a power outlet.

3.2 Initial Charging

Place the Lefant M3 Max robot onto the charging contacts of the self-cleaning station. The robot will automatically begin charging. Ensure the robot is fully charged before its first use.

3.3 App Connection

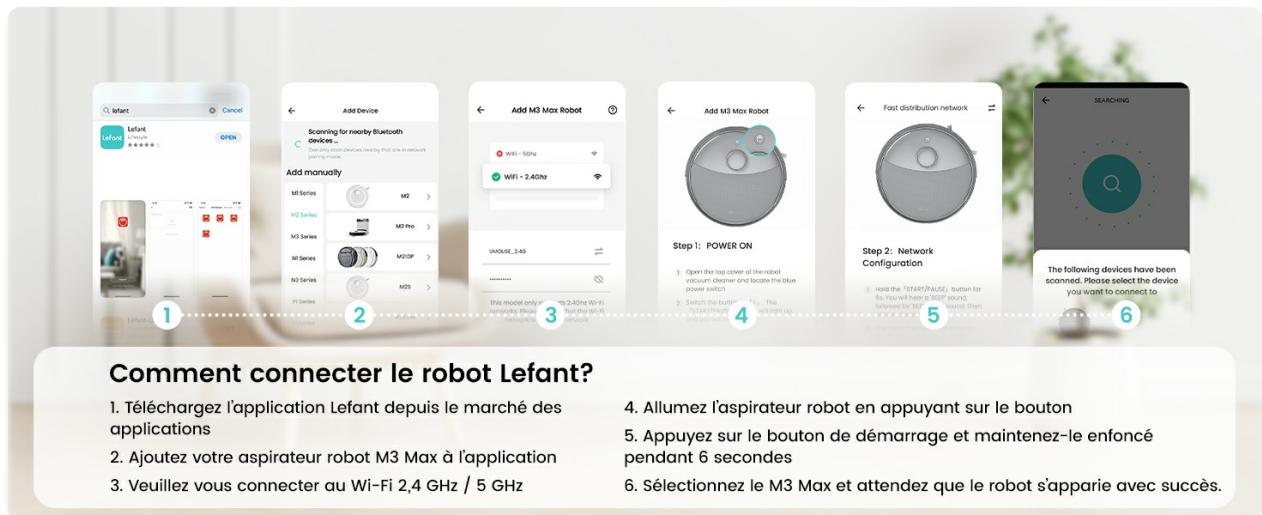


Image: A visual guide illustrating the process of connecting the Lefant M3 Max robot to the dedicated mobile application, showing screenshots of each step.

1. Download the **Lefant app** from your mobile device's app store.
2. Open the app and add your M3 Max robot.
3. Ensure your mobile device is connected to a 2.4 GHz or 5 GHz Wi-Fi network.
4. Power on the robot by pressing its main button.
5. Press and hold the robot's start button for 6 seconds until it enters pairing mode.
6. Follow the in-app instructions to select the M3 Max and complete the pairing process.

3.4 Voice Assistant Connection (Alexa/Google Assistant)

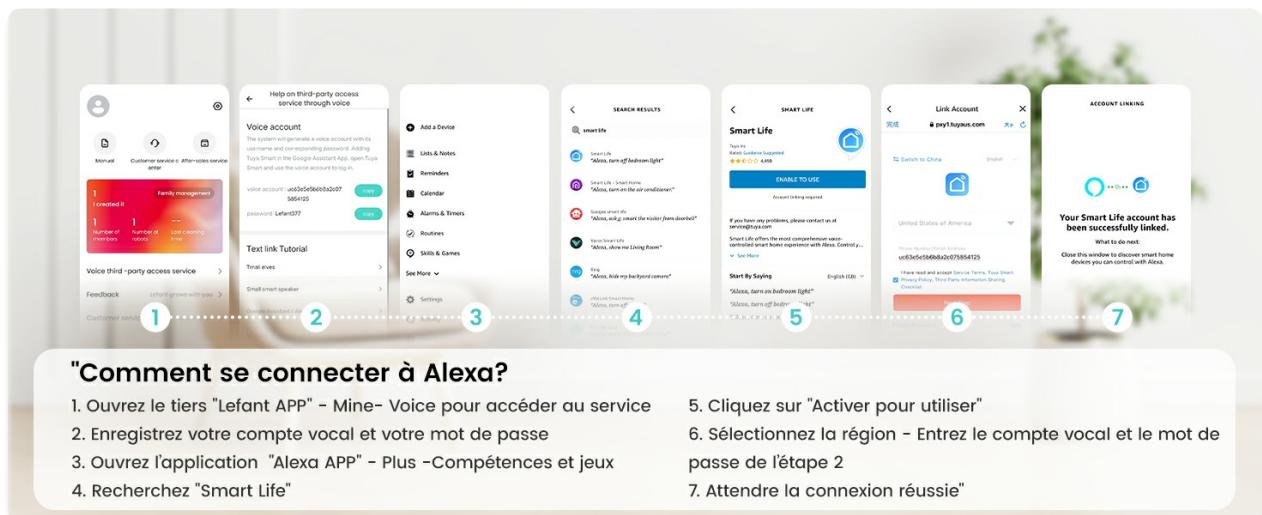


Image: A visual guide demonstrating the steps to link the Lefant M3 Max robot with Amazon Alexa for voice control.

1. Open the Lefant app, navigate to 'Mine' and then 'Voice' to access the service.
2. Register your voice account and password.
3. Open the Alexa app (or Google Home app), go to 'Plus' (or 'Add device') and then 'Skills & Games' (or 'Works with Google').
4. Search for "Smart Life".
5. Click on "Enable to Use" (or "Link account").
6. Select your region and enter the voice account and password from step 2.
7. Wait for the successful connection confirmation.

4. OPERATING INSTRUCTIONS

4.1 Starting and Stopping Cleaning

- **Via App:** Open the Lefant app and select the desired cleaning mode or start/stop function.
- **Via Robot Button:** Press the main button on the robot to start or pause cleaning.
- **Via Voice Control:** Use compatible voice assistants (Alexa, Google Assistant) with commands like "Alexa, ask Lefant Robot to clean."

4.2 Cleaning Modes and Customization



Image: The Lefant mobile application interface displaying options for planning cleaning, customized routines, no-go zones, intelligent mapping, targeted zone cleaning, water flow adjustment, and tap-to-clean anywhere.

- **Auto Cleaning:** The robot intelligently cleans the entire mapped area.
- **Zone Cleaning:** Select specific areas on the map for targeted cleaning.
- **Spot Cleaning:** Direct the robot to clean a specific small area with concentrated effort.
- **Scheduled Cleaning:** Set specific times for the robot to clean automatically.
- **No-Go Zones:** Define areas on the map that the robot should avoid.
- **Water Flow Adjustment:** Adjust the water output for mopping via the app.
- **Do Not Disturb Mode:** Set quiet hours during which the robot will not clean or send notifications.

4.3 Navigation and Mapping

Nettoyage intelligent, couverture complète

Nettoyage sans effort grâce à la navigation LIDAR à 360°, cartographie précise, planification intelligente des trajectoires et évitement des obstacles pour un nettoyage en profondeur et efficace, même dans l'obscurité



Image: The Lefant M3 Max robot vacuum navigating a living room, illustrating its LIDAR mapping capabilities and obstacle avoidance for comprehensive cleaning.

- The M3 Max uses dToF 360° laser navigation to create accurate maps of your home, even in low light conditions.
- PSD 190° sensors enable the robot to detect and avoid obstacles, protecting furniture and objects.
- The robot supports multi-level mapping, allowing it to store maps for up to 3 different floors.

4.4 Mop and Suction Control



Image: Close-up view of the Lefant M3 Max's dual rotating mop pads, highlighting their 200 RPM speed and 9mm lift capability for thorough floor cleaning.

- The robot automatically detects carpets and lifts its mop pads by 9mm to prevent wetting and ensure optimal vacuuming.
- Suction power is automatically adjusted based on the floor type. You can also manually select suction levels (Standard, Max) via the app.
- The dual rotating mops operate at 200 RPM to effectively scrub and remove stubborn stains from hard floors.

5. MAINTENANCE

5.1 Self-Cleaning Station Maintenance



Image: The Lefant M3 Max self-cleaning station with its removable tray being detached and cleaned under running water, demonstrating ease of maintenance.

- **Automatic Mop Washing:** The station automatically washes the mop pads with 45°C hot water to sterilize and clean them.
- **Automatic Mop Drying:** After washing, the mops are air-dried for 2 hours to prevent odors and maintain their integrity.
- **Automatic Dust Collection:** The robot automatically empties its dustbin into the station's 3.5L dust bag, which typically requires replacement every 8 weeks.
- **Removable Tray:** The base tray of the self-cleaning station is removable for easy manual cleaning.

5.2 Robot Maintenance

- **V-Brush and Side Brushes:** Regularly check and clean the V-shaped main brush and side brushes for tangled hair or debris. The anti-tangle design minimizes this, but periodic inspection is recommended.
- **HEPA Filter:** Clean the HEPA filter regularly by tapping out dust. Replace the filter every 3-6 months, depending on usage.
- **Mop Cloths:** Wash the reusable mop cloths after each mopping session.
- **Sensors:** Wipe the LIDAR sensor, PSD sensors, and cliff sensors with a clean, dry cloth to ensure optimal navigation and obstacle detection.

6. TROUBLESHOOTING

If you encounter issues with your Lefant M3 Max, please refer to the following common solutions:

Problem	Possible Cause	Solution
Robot not starting or charging	Power cord disconnected; Robot not properly docked; Low battery.	Ensure power cord is securely connected. Re-dock the robot, ensuring charging contacts align. Allow robot to charge fully.
Robot getting stuck frequently	Obstacles (cables, small objects); Uneven surfaces; No-go zones not set.	Clear the cleaning area of loose cables and small objects. Define no-go zones in the app for problematic areas.

Problem	Possible Cause	Solution
Poor cleaning performance	Full dustbin; Clogged brushes/filter; Empty water tank; Worn mop cloths.	Empty the dustbin. Clean or replace brushes and HEPA filter. Refill the water tank. Replace worn mop cloths.
App connectivity issues	Incorrect Wi-Fi password; Router too far; Robot not in pairing mode.	Verify Wi-Fi password. Ensure robot is within Wi-Fi range. Re-pair the device following app connection steps.
Mop not lifting on carpet	Carpet detection disabled; Sensor obstruction.	Ensure carpet detection is enabled in the Lefant app. Clean the bottom sensors of the robot.

7. SPECIFICATIONS

Feature	Specification
Brand	Lefant
Model Number	M3 Max
Suction Power	20,000 Pa
Battery Capacity	5200 mAh
Runtime	Up to 220 minutes
Coverage Area	Up to 220 m ²
Mop Rotation Speed	200 RPM
Mop Lift Height	9 mm
Navigation Type	dToF 360° Laser
Obstacle Avoidance	PSD 190°, Freemove 3.0
Dustbin Capacity (Station)	3.5 Liters
Dimensions (Robot)	32L x 32W x 9.7H cm
Item Weight	12 Kilograms
Connectivity	Wi-Fi (2.4/5 GHz), App Control, Voice Control (Alexa, Google Assistant)
Surface Recommendation	Hard floors, Wood, Tile, Marble, Carpets
Filter Type	HEPA Filter

8. WARRANTY AND SUPPORT

Lefant is committed to providing quality products and responsive customer service. For any warranty claims, technical assistance, or product-related inquiries, please contact Lefant customer support through the following channels:

- Refer to the contact information provided in the original product packaging.
- Visit the official Lefant website for support resources and contact details.
- Utilize the support features within the Lefant mobile application.

Please retain your proof of purchase for warranty validation.

© 2025 Lefant. All rights reserved

Related Documents - M3 Max

This image shows the user manual for the Lefant N3 Robot Vacuum and Mop. The cover is white with a black border. In the center, there is a large image of the Lefant N3 robot vacuum. The text on the cover includes the product name 'Lefant N3' and 'Robot Vacuum and Mop'.

 Lefant  Lefant N3 User manual	<p><u>Lefant N3 Robot Vacuum User Manual - Setup, Operation, and Maintenance Guide</u></p> <p>Comprehensive user manual for the Lefant N3 robot vacuum cleaner. Includes setup instructions, operating guide, mopping features, app integration, maintenance schedule, troubleshooting tips, technical specifications, and warranty information.</p>
	<p><u>Lefant N3 Robot Vacuum and Mop User Manual Setup, Operation, and Maintenance Guide</u></p> <p>Comprehensive user manual for the Lefant N3 Robot Vacuum and Mop. Covers setup, assembly, charging, operation, mopping, app configuration, maintenance, troubleshooting, and technical specifications.</p>

cause a fire.

18. Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.

19. Take care not to damage the power cord. Do not pull on or carry the robot or the base station by the power cord. Do not use the power cord as a handle, close a door on the power cord, or pull power cord around sharp edges or corners. Do not run the robot over the power cord. Do not damage the power cord or pull from hot surfaces. Do not unplug by pulling on the cord. To unplug, grasp the plug, not the cord.

20. If the power cord is damaged, it must be repaired by the manufacturer or its service agent in order to avoid a hazard.

21. Do not use the base station if it is damaged.

22. Do not use the robot or the base station if it is not working properly, has been dropped, damaged, left outdoors, or come in contact with water. It must be repaired by the manufacturer or its service agent in order to avoid a hazard.

23. Turn OFF the power switch before cleaning or removing the battery or other controls.

24. The plug must be removed from the receptacle before cleaning or maintaining the base station.

25. Remove the robot from the base station, and turn OFF the power switch to the Appliance before removing the battery for cleaning or maintenance.

26. The battery must be removed and discarded according to local laws and regulations before disposal of the robot.

27. Please dispose of the batteries according to local laws and regulations.

28. Do not incinerate the robot even if it is severely damaged. The batteries can explode in a fire.

29. When not using the base station for a long period of time, please unplug it.

30. Do not use the robot for cleaning. Ensure the switch is in the off position before connecting to battery pack, picking up or carrying the appliance. Carrying the robot with your finger on the power switch can damage the robot that have the switch on/have on/off.

31. When battery pack is not in use, keep it away from sharp metal objects, like paper clips, pens, keys, coins, etc. These can make a connection from one terminal to another, shorting the battery terminals. Liquid can damage the battery cells.

32. Under abusive conditions, liquid may be ejected from the battery, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, flush for at least 15 minutes and seek medical help. Liquid ejected from the battery may cause irritation or burns.

33. Do not use a battery pack that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.

34. Do not expose the robot or experience the robot to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.

35. Repairs or servicing performed by a qualified repair person using only identical replacement parts.

36. Do not modify or attempt to repair the robot or the battery pack (as applicable) except as indicated in the instructions.

37. Do not operate the robot in a room that has 10 condens on the walls or floor. If vacuum motor is used, do not let it blow into the robot.

38. Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may be a risk if the when used with another battery pack.

39. Use the robot only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.

40. The robot contains batteries that are only replaceable by skilled persons. To replace the robot's battery, please contact Customer Service.

41. If the robot is not going to be used for a long time, fully charge the robot, power it OFF, and store it in a cool, dry place.

SAFE THESE INSTRUCTIONS

To satisfy all exposure requirements, a separation distance of 20 cm or more should be maintained between the robot and persons during device operation.

To ensure compliance, operations at close than 20 cm are not recommended. The antenna used for this transmitter must not be co-located in conjunction with any other antenna or transmitter.



Correct Disposal of this Product

This marking indicates that this product should not be disposed of with other household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To recycle your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can safely recycle this product.



Cleaner Precautions

Keep this product away from heat sources. It is recommended that the product is stored in a sealed container at 0-30°C in a dry and cool place. Keep this product out of the reach of children. If the cleaner comes into contact with the product to come into contact with eyes or skin, in case of accidental contact with the eyes, rinse slowly and gently with plenty of water for at least 15 minutes. If contact with skin, immediately cover contact lenses for the first 5 minutes and continue to rinse eyes. If skin contact occurs, wash with plenty of water for at least 15 minutes. If symptoms persist after these actions seek medical attention. Do not inhale or consume this product. If this product is accidentally ingested, rinse mouth or drink plenty of water. If discomfort persists after doing so, seek medical attention immediately. Do not add other liquids to this product to increase its cleaning power. Use the normal use of the machine. A small amount of suspended matter in the cleaner is normal and should be used with confidence.

Federal Communications Commission (FCC) Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following methods:

- Relocate or reorient the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

• Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2ABH2

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

RF exposure warning:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment must be installed

Lefant T1 Robot Mop User Manual and Safety Instructions

Comprehensive guide to the Lefant T1 Robot Mop, covering important safety instructions, product introduction, preparation, usage, troubleshooting, and technical specifications. Learn how to set up and operate your robot mop for optimal cleaning performance.

and operated in accordance with provided instructions. The following conditions for this transmitter must be met before antenna is used for this transmitter must be installed to: provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Conditions:
This device contains licence-exempt transmitter(s) and receiver(s) which comply with Innovation, Science and Economic Development Canada licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

Any changes or modifications not expressly approved by the party responsible for approval could void the user's authority to operate the equipment.

RF exposure statement:
The equipment complies with IC Radiation exposure limit set out for an uncontrolled environment. The equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

Cet appareil contient des émetteurs / récepteurs exemptés de licence conformes aux RSS (RSS) d'Innovation, Sciences et Développement économique Canada. Le fonctionnement est soumis aux deux conditions suivantes:
(1) Cet appareil ne doit pas causer d'interférences.
(2) Cet appareil doit accepter toutes les interférences, y compris celles susceptibles de provoquer un fonctionnement indésirable de l'appareil.

Tout changement ou modification non expressément approuvée par la partie responsable de la commission pourra annuler l'autorité du fabricant à utiliser l'équipement.

Déclaration d'exposition RF:
L'équipement est conforme à la limite d'exposition aux radiations de la IC établie pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec une distance minimale de 20cm entre le radiateur et votre corps.

<p>Congratulations on the purchase of your Lefant robot vacuum cleaner. The Lefant robot vacuum cleaner will keep your home clean and provide you a high-quality life.</p> <p>Should you encounter situations that have not been properly addressed in this manual, please contact our customer service center, we will solve your specific problems. For more information, please visit our website at www.lefant.com or send email to the following email address: support@lefant.com.</p> <p>The Lefant robot vacuum cleaner is a new technology and/or design changes to this product continuous improvement.</p> <p>IMPORTANT SAFETY INSTRUCTIONS</p> <p>WARNING: Read all safety warnings and instructions. Failure to follow all instructions listed below may result in electric shock, fire, or serious injury. Do not use this appliance near water.</p> <p>For household use only</p> <p>When using an electrical appliance, basic precautions should always be followed, including the following:</p> <ol style="list-style-type: none"> 1. The robot must be used in accordance with the directions in this user manual. Our company cannot be held liable or responsible for any damage or injury resulting from the use of this product. 2. Do not allow it to be used as a toy. Close supervision is necessary when used near children. 3. Do not allow children to clean the vacuum. 4. Use only power cords and power supplies that are recommended by the manufacturer. Do not use power cords or power supplies that are damaged or frayed. 5. Please make sure your power supply voltage matches the power requirements of the unit. 6. Do not handle or plug in appliance with wet hands. 7. Do not use the vacuum in areas where there is water. 8. Do not use dust bin cleaner when in place. 9. Do not use the robot in the dark. 10. Do not use the robot to clean the parts of body away from the operating or moving parts. 11. Do not use the robot in areas where an infant or child is sleeping. 12. Do not expose the robot to outdoor, commercial or industrial environments. Do not use appliance on wet surfaces. 13. Do not allow the robot to pick up large objects like stones, large pieces of debris, or any other sharp objects. 14. Do not use the robot to pick up flammable or combustible materials like matches, cigarette papers or copper wire, or use it around where they may be present. 15. Do not use the robot to pick up any sharp objects. 16. Do not use the robot to pick up any sharp objects. 17. Do not use the robot to pick up any sharp objects. 18. Do not use the robot to pick up any sharp objects. 19. Do not use the robot to pick up any sharp objects. 20. Do not use the robot to pick up any sharp objects. 21. Do not use the robot to pick up any sharp objects. 22. Do not use the robot to pick up any sharp objects. 23. Do not use the robot to pick up any sharp objects. 24. Do not use the robot to pick up any sharp objects. 25. Do not use the robot to pick up any sharp objects. 26. Do not use the robot to pick up any sharp objects. 27. Do not use the robot to pick up any sharp objects. 28. Do not use the robot to pick up any sharp objects. 29. Do not use the robot to pick up any sharp objects. 30. Do not use the robot to pick up any sharp objects. 31. Do not use the robot to pick up any sharp objects. 32. Do not use the robot to pick up any sharp objects. 33. Do not use the robot to pick up any sharp objects. 34. Do not use the robot to pick up any sharp objects. 35. Do not use the robot to pick up any sharp objects. 36. Do not use the robot to pick up any sharp objects. 37. Do not use the robot to pick up any sharp objects. 38. Do not use the robot to pick up any sharp objects. 39. Do not use the robot to pick up any sharp objects. 40. Do not use the robot to pick up any sharp objects. 41. Do not use the robot to pick up any sharp objects. 42. Do not use the robot to pick up any sharp objects. 43. Do not use the robot to pick up any sharp objects. 44. Do not use the robot to pick up any sharp objects. 45. Do not use the robot to pick up any sharp objects. 46. Do not use the robot to pick up any sharp objects. 47. Do not use the robot to pick up any sharp objects. 48. Do not use the robot to pick up any sharp objects. 49. Do not use the robot to pick up any sharp objects. 50. Do not use the robot to pick up any sharp objects. 51. Do not use the robot to pick up any sharp objects. 52. Do not use the robot to pick up any sharp objects. 53. Do not use the robot to pick up any sharp objects. 54. Do not use the robot to pick up any sharp objects. 55. Do not use the robot to pick up any sharp objects. 56. Do not use the robot to pick up any sharp objects. 57. Do not use the robot to pick up any sharp objects. 58. Do not use the robot to pick up any sharp objects. 59. Do not use the robot to pick up any sharp objects. 60. Do not use the robot to pick up any sharp objects. 61. Do not use the robot to pick up any sharp objects. 62. Do not use the robot to pick up any sharp objects. 63. Do not use the robot to pick up any sharp objects. 64. Do not use the robot to pick up any sharp objects. 65. Do not use the robot to pick up any sharp objects. 66. Do not use the robot to pick up any sharp objects. 67. Do not use the robot to pick up any sharp objects. 68. Do not use the robot to pick up any sharp objects. 69. Do not use the robot to pick up any sharp objects. 70. Do not use the robot to pick up any sharp objects. 71. Do not use the robot to pick up any sharp objects. 72. Do not use the robot to pick up any sharp objects. 73. Do not use the robot to pick up any sharp objects. 74. Do not use the robot to pick up any sharp objects. 75. Do not use the robot to pick up any sharp objects. 76. Do not use the robot to pick up any sharp objects. 77. Do not use the robot to pick up any sharp objects. 78. Do not use the robot to pick up any sharp objects. 79. Do not use the robot to pick up any sharp objects. 80. Do not use the robot to pick up any sharp objects. 81. Do not use the robot to pick up any sharp objects. 82. Do not use the robot to pick up any sharp objects. 83. Do not use the robot to pick up any sharp objects. 84. Do not use the robot to pick up any sharp objects. 85. Do not use the robot to pick up any sharp objects. 86. Do not use the robot to pick up any sharp objects. 87. Do not use the robot to pick up any sharp objects. 88. Do not use the robot to pick up any sharp objects. 89. Do not use the robot to pick up any sharp objects. 90. Do not use the robot to pick up any sharp objects. 91. Do not use the robot to pick up any sharp objects. 92. Do not use the robot to pick up any sharp objects. 93. Do not use the robot to pick up any sharp objects. 94. Do not use the robot to pick up any sharp objects. 95. Do not use the robot to pick up any sharp objects. 96. Do not use the robot to pick up any sharp objects. 97. Do not use the robot to pick up any sharp objects. 98. Do not use the robot to pick up any sharp objects. 99. Do not use the robot to pick up any sharp objects. 100. Do not use the robot to pick up any sharp objects. 101. Do not use the robot to pick up any sharp objects. 102. Do not use the robot to pick up any sharp objects. 103. Do not use the robot to pick up any sharp objects. 104. Do not use the robot to pick up any sharp objects. 105. Do not use the robot to pick up any sharp objects. 106. Do not use the robot to pick up any sharp objects. 107. Do not use the robot to pick up any sharp objects. 108. Do not use the robot to pick up any sharp objects. 109. Do not use the robot to pick up any sharp objects. 110. Do not use the robot to pick up any sharp objects. 111. Do not use the robot to pick up any sharp objects. 112. Do not use the robot to pick up any sharp objects. 113. Do not use the robot to pick up any sharp objects. 114. Do not use the robot to pick up any sharp objects. 115. Do not use the robot to pick up any sharp objects. 116. Do not use the robot to pick up any sharp objects. 117. Do not use the robot to pick up any sharp objects. 118. Do not use the robot to pick up any sharp objects. 119. Do not use the robot to pick up any sharp objects. 120. Do not use the robot to pick up any sharp objects. 121. Do not use the robot to pick up any sharp objects. 122. Do not use the robot to pick up any sharp objects. 123. Do not use the robot to pick up any sharp objects. 124. Do not use the robot to pick up any sharp objects. 125. Do not use the robot to pick up any sharp objects. 126. Do not use the robot to pick up any sharp objects. 127. Do not use the robot to pick up any sharp objects. 128. Do not use the robot to pick up any sharp objects. 129. Do not use the robot to pick up any sharp objects. 130. Do not use the robot to pick up any sharp objects. 131. Do not use the robot to pick up any sharp objects. 132. Do not use the robot to pick up any sharp objects. 133. Do not use the robot to pick up any sharp objects. 134. Do not use the robot to pick up any sharp objects. 135. Do not use the robot to pick up any sharp objects. 136. Do not use the robot to pick up any sharp objects. 137. Do not use the robot to pick up any sharp objects. 138. Do not use the robot to pick up any sharp objects. 139. Do not use the robot to pick up any sharp objects. 140. Do not use the robot to pick up any sharp objects. 141. Do not use the robot to pick up any sharp objects. 142. Do not use the robot to pick up any sharp objects. 143. Do not use the robot to pick up any sharp objects. 144. Do not use the robot to pick up any sharp objects. 145. Do not use the robot to pick up any sharp objects. 146. Do not use the robot to pick up any sharp objects. 147. Do not use the robot to pick up any sharp objects. 148. Do not use the robot to pick up any sharp objects. 149. Do not use the robot to pick up any sharp objects. 150. Do not use the robot to pick up any sharp objects. 151. Do not use the robot to pick up any sharp objects. 152. Do not use the robot to pick up any sharp objects. 153. Do not use the robot to pick up any sharp objects. 154. Do not use the robot to pick up any sharp objects. 155. Do not use the robot to pick up any sharp objects. 156. Do not use the robot to pick up any sharp objects. 157. Do not use the robot to pick up any sharp objects. 158. Do not use the robot to pick up any sharp objects. 159. Do not use the robot to pick up any sharp objects. 160. Do not use the robot to pick up any sharp objects. 161. Do not use the robot to pick up any sharp objects. 162. Do not use the robot to pick up any sharp objects. 163. Do not use the robot to pick up any sharp objects. 164. Do not use the robot to pick up any sharp objects. 165. Do not use the robot to pick up any sharp objects. 166. Do not use the robot to pick up any sharp objects. 167. Do not use the robot to pick up any sharp objects. 168. Do not use the robot to pick up any sharp objects. 169. Do not use the robot to pick up any sharp objects. 170. Do not use the robot to pick up any sharp objects. 171. Do not use the robot to pick up any sharp objects. 172. Do not use the robot to pick up any sharp objects. 173. Do not use the robot to pick up any sharp objects. 174. Do not use the robot to pick up any sharp objects. 175. Do not use the robot to pick up any sharp objects. 176. Do not use the robot to pick up any sharp objects. 177. Do not use the robot to pick up any sharp objects. 178. Do not use the robot to pick up any sharp objects. 179. Do not use the robot to pick up any sharp objects. 180. Do not use the robot to pick up any sharp objects. 181. Do not use the robot to pick up any sharp objects. 182. Do not use the robot to pick up any sharp objects. 183. Do not use the robot to pick up any sharp objects. 184. Do not use the robot to pick up any sharp objects. 185. Do not use the robot to pick up any sharp objects. 186. Do not use the robot to pick up any sharp objects. 187. Do not use the robot to pick up any sharp objects. 188. Do not use the robot to pick up any sharp objects. 189. Do not use the robot to pick up any sharp objects. 190. Do not use the robot to pick up any sharp objects. 191. Do not use the robot to pick up any sharp objects. 192. Do not use the robot to pick up any sharp objects. 193. Do not use the robot to pick up any sharp objects. 194. Do not use the robot to pick up any sharp objects. 195. Do not use the robot to pick up any sharp objects. 196. Do not use the robot to pick up any sharp objects. 197. Do not use the robot to pick up any sharp objects. 198. Do not use the robot to pick up any sharp objects. 199. Do not use the robot to pick up any sharp objects. 200. Do not use the robot to pick up any sharp objects. 	<p>Lefant Mop Bracket User Instructions</p> <p>Instructions for the proper installation and replacement of cleaning wipes on the Lefant Mop Bracket for robot vacuums.</p>
---	---