

Candy BR 410BL8-S

Candy ProWash 500 BR 410BL8-S Washing Machine User Manual

Model: BR 410BL8-S (31020484) | Capacity: 10 KG | Spin Speed: 1400 RPM

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your new Candy ProWash 500 BR 410BL8-S washing machine. Please read these instructions carefully before using the appliance and keep them for future reference. This appliance is designed for domestic use only.



Front view of the Candy ProWash 500 washing machine, showcasing its modern design and control panel.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Ensure the appliance is properly grounded.
- Do not touch the appliance with wet hands.

- Keep children and pets away from the appliance during operation.
- Do not allow children to play with the appliance.
- Unplug the appliance before cleaning or performing any maintenance.
- Do not overload the washing machine.
- Only use detergents suitable for automatic washing machines.

3. SETUP AND INSTALLATION

3.1 Unpacking

Remove all packaging materials and transit bolts from the rear of the machine before installation. Failure to remove transit bolts will cause severe vibration and damage.

3.2 Positioning and Leveling

Place the washing machine on a firm, level floor. Adjust the adjustable feet to ensure the appliance is stable and level. The dimensions of the appliance are 85 cm (Height) x 59.5 cm (Width) x 57.9 cm (Depth), and it weighs 67 kg.

3.3 Water Connection

Connect the water inlet hose to a cold water tap with a 3/4" thread. Ensure all connections are tight to prevent leaks. Position the drain hose into a standpipe or over the edge of a sink, ensuring it is securely fixed to prevent displacement during draining.

3.4 Electrical Connection

Plug the power cord into a grounded electrical outlet. Ensure the voltage and frequency match the specifications on the appliance rating plate. Do not use extension cords or adapters.

4. OPERATING INSTRUCTIONS

4.1 Control Panel Overview

The washing machine features a large program selector knob and a digital display for intuitive control. The display shows the selected program and current settings.



Close-up of the washing machine's control panel, showing the large program selector knob and the digital display with text, indicating easy and intuitive control.

4.2 Loading Laundry

Open the door and load laundry into the drum. Do not exceed the maximum load capacity of 10 KG. Close the door firmly.

Testado para durar 20 años*



Gracias a su estructura robusta, materiales y componentes de calidad.

*Pruebas internas de durabilidad con 4.000 ciclos (= 3,85 cargas de lavado por semana durante 52 semanas)

Washing machine with its door open, showing laundry inside, highlighting its robust structure and quality components tested for 20 years.

4.3 Detergent Dispenser

Add the appropriate amount of detergent and fabric softener to the designated compartments in the dispenser drawer.

 
4.4 Selecting a Program

Turn the program selector knob to choose one of the 16 available cycles. The digital display will show the selected program. You can also select quick cycles ranging from 14 to 59 minutes.

4.5 Special Features

- **ProActive Wash Technology:** This exclusive water injection system ensures uniform and effective washing, removing up to 99% of daily stains without pre-treatment.

ProActive Wash elimina el 99%
de las manchas diarias
sin pre-tratamiento*

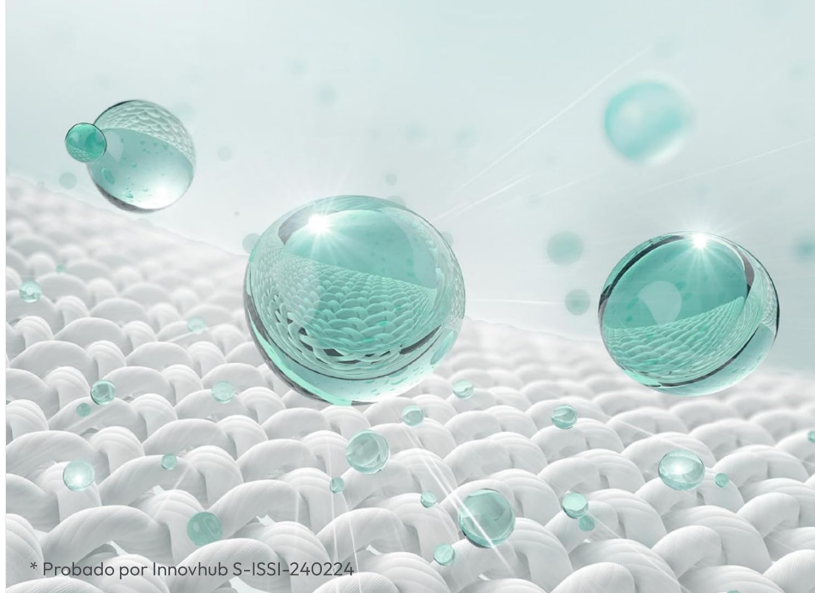

* Probado por Innovhub S-ISSI-240224

Microscopic view illustrating water injection technology for ProActive Wash, showing how it removes 99% of daily stains without pre-

treatment.

- **Smart Steam:** Reduces wrinkles and facilitates ironing.
- **Clean Shield & Smart Spray:** Clean Shield protects seals, and Smart Spray cleans the door of detergent residues, ensuring hygienic and durable cycles.
- **Delayed Start 24H:** Allows you to set the start time of a wash cycle up to 24 hours in advance.
- **Child Lock:** Prevents accidental changes to settings during operation.
- **XL Drum (525mm):** The large drum with a cushioned design offers maximum capacity and contributes to 20% more stain removal efficiency and 17% fewer wrinkles.



Close-up of the washing machine drum, highlighting its 525mm XL diameter with a cushioned design, contributing to 20% more stain removal efficiency and 17% fewer wrinkles.

4.6 hOn App Connectivity

Connect your washing machine to the hOn app via WIFI for enhanced control. The app allows you to access additional programs, receive recommendations, and manage your washing remotely.



Smartphone screen displaying the hOn app interface, prompting the user to select fabric types for guided washing.

4.7 Starting and Pausing a Cycle

Press the Start/Pause button to begin the selected wash cycle. Press it again to pause the cycle. To cancel a program, turn the program selector to the 'OFF' position.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

- **Cleaning the Exterior:** Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners.
- **Cleaning the Detergent Drawer:** Remove the detergent drawer and rinse it under running water to remove any residue.
- **Cleaning the Filter:** Periodically clean the drain pump filter, located at the bottom front of the machine, to prevent blockages. Refer to the full manual for detailed instructions.
- **Drum Cleaning:** Run a maintenance wash cycle (e.g., a hot wash with no laundry and a descaling agent) regularly to keep the drum clean and free of odors.

6. TROUBLESHOOTING

If you encounter issues with your washing machine, consult the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Machine does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
Excessive vibration	Transit bolts not removed; machine not level; uneven load.	Remove transit bolts; adjust leveling feet; redistribute laundry in the drum.
Water not draining	Drain hose kinked or blocked; pump filter clogged.	Check and clear drain hose; clean the pump filter.
No water intake	Water tap closed; inlet hose kinked; water supply cut off.	Open water tap; straighten inlet hose; check household water supply.

For more detailed troubleshooting and error codes, please refer to the comprehensive user manual provided with your appliance or visit the Candy support website.

7. SPECIFICATIONS

Model: BR 410BL8-S
Product Model Number: 31020484
Brand: Candy
Capacity: 10 Kilograms
Maximum Spin Speed: 1400 RPM

Dimensions (H x W x D): 85 cm x 59.5 cm x 57.9 cm

Weight: 67 Kilograms

Energy Efficiency Class: A

Noise Level (Spin): 72 dB

Connectivity: WIFI (hOn App compatible)

Motor Type: Inverter Speed Drive

Number of Programs: 16

Special Features: ProActive Wash, Smart Steam, Clean Shield, Smart Spray, Delayed Start 24H, Child Lock, XL Drum (525mm)

Power Supply: 220-240V, 50Hz (Standard for EU appliances)

Country of Origin: China

8. WARRANTY AND SUPPORT

Your Candy ProWash 500 BR 410BL8-S washing machine comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms and conditions.

For technical assistance, spare parts, or to register your product, please visit the official Candy website or contact their customer support. Ensure you have your model number (BR 410BL8-S) and serial number (located on the back of the appliance) ready when contacting support.

Related Documents - BR 410BL8-S

	Candy Pro Dry 700 Tumble Dryer User Manual Comprehensive user manual for the Candy Pro Dry 700 Tumble Dryer, covering installation, control panel operation, program selection, maintenance, and troubleshooting. Includes detailed descriptions of various drying programs and features.
	Candy HE 1294TWM6/1-S Ultra Hygiene Washing Machine Specifications Detailed specifications for the Candy HE 1294TWM6/1-S Ultra Hygiene washing machine, including features, technical characteristics, energy efficiency, and dimensions.
	Candy CSTG282DE/1-S 8kg Smart Top-Load Washing Machine Discover the Candy CSTG282DE/1-S, an 8kg top-load washing machine with 1200 RPM spin speed and Class D energy efficiency. Features Smart Touch NFC technology, Mix Power System+, Gentle Touch Opening, and 16 versatile programs for optimal laundry care.
	CANDY Smart Inverter Washing Machine Quick Start Guide Learn how to quickly set up and use your CANDY Smart Inverter washing machine with this comprehensive guide, covering installation, settings, and programs.
	Candy GVW 364TC Washer Dryer: Features and Specifications Discover the Candy GVW 364TC, a space-saving washer dryer with a 6kg wash capacity, 4kg drying capacity, and 1300 RPM spin speed. This guide details its features, programs, performances, and technical specifications.
	Candy Перална Машина: Пълно Ръководство за Безопасна и Ефективна Употреба Открийте как да използвате вашата нова Candy перална машина безопасно и ефективно с това изчерпателно ръководство. Включва инструкции за инсталация, поддръжка, програми и съвети за пестене на енергия и вода.

Nome e Cognome: _____, Matr. n° _____

1. SCELTA DI MATERIA

Indicare la materia di seguito in ordine di preferenza (1 = prima scelta, 2 = seconda scelta, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

2. SCELTA DI CORSO

Indicare il corso di laurea in cui si intende iscriversi (es. 011 - Lettere e Filosofia, 021 - Scienze della Terra, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

3. SCELTA DI INDIRIZZO

Indicare l'indirizzo di studio (es. Lettere Moderne, Lettere Classiche, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

4. SCELTA DI UNIVERSITÀ

Indicare l'università di appartenenza (es. Università di Roma, Università di Napoli, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

5. SCELTA DI CATEGORIA

Indicare la categoria di appartenenza (es. A, B, C, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

6. SCELTA DI SEDE

Indicare la sede di appartenenza (es. Roma, Napoli, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

Per favore, leggere attentamente e compilare con attenzione tutti i campi richiesti. Le informazioni e le scelte indicate in questo modulo sono fondamentali per la compilazione del piano di studi e per la scelta della sede di appartenenza. Le informazioni e le scelte indicate in questo modulo sono fondamentali per la compilazione del piano di studi e per la scelta della sede di appartenenza.

Se si vuole, si può anche indicare la materia di insegnamento (es. Lettere, Scienze, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

7. SCELTA DI CORSO

Indicare il corso di laurea in cui si intende iscriversi (es. 011 - Lettere e Filosofia, 021 - Scienze della Terra, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

8. SCELTA DI INDIRIZZO

Indicare l'indirizzo di studio (es. Lettere Moderne, Lettere Classiche, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

9. SCELTA DI UNIVERSITÀ

Indicare l'università di appartenenza (es. Università di Roma, Università di Napoli, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

10. SCELTA DI CATEGORIA

Indicare la categoria di appartenenza (es. A, B, C, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

11. SCELTA DI SEDE

Indicare la sede di appartenenza (es. Roma, Napoli, ecc.):
 1. _____ 2. _____ 3. _____ 4. _____ 5. _____

Per favore, leggere attentamente e compilare con attenzione tutti i campi richiesti. Le informazioni e le scelte indicate in questo modulo sono fondamentali per la compilazione del piano di studi e per la scelta della sede di appartenenza. Le informazioni e le scelte indicate in questo modulo sono fondamentali per la compilazione del piano di studi e per la scelta della sede di appartenenza.

ENERGY 

CANDY **BR 410BE S**

A
B
C
D
E
F
G

41 kWh / **100%**

10,00 **3:58** **47** L

A B C D E F G **A B C D**

 
VERBODEN TOEGANG VOOR ONBEVOEGDE PERSOONEN

[pdf] Label


Candy BR 410BL8 S washing machine Front load 10 kg 1400 RPM White EU Energy Label 90 KB 31020484 mmo 124819340 1733673566 9373 3265433 objects

Insert here product QR code SCUAPNPDLYIER S NAME A B C D E F G A MODELBRID4E1N0BTILF8l-ESR B C D E 4X1Y2 kWh l


lang:pl score:14 filesize: 90.04 K page_count: 1 document date: 2024-12-08

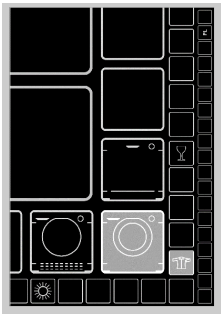


[\[pdf\]](#)
Administrator PobierzCANDY ProWash 500 BR 49SBL8 S 9kg 1400 obr Pralka niskie ceny i opinie w Media Expertv1mediaexpert pl products files 78 7862747 inst PL Dzikujemy PL Dzikujemy za zakup produktu Hoover. Prosimy o uwane zapoznanie si z niniejszymi ... wody w MPa Masa netto w BR 411BL9-S BR 412BL8-S BR 413BL8-S 71 WIDOK Z PRZODU BR 47SBL8-S BR 47SBL8G-S B...
lang:pl score:13 filesize: 1.95 M page_count: 37 document date: 2024-10-06

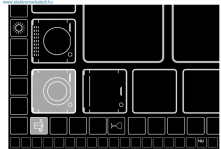 

[\[pdf\]](#)
elektromarkabolt huelektromarkabolt hucandy br 413bl8 selektromarkabolt hu media infolapok other hasznalati candy s |||
www.elektromarkabolt.hu HU www.elektromarkabolt.hu K sz nj k HU K sz nj k, hogy Hoover te ... A Max. teljes tm ny W V znyom s N 59 67 HU BR 411BL9-S BR 412BL8-S BR 413BL8-S...
lang:no score:12 filesize: 1.6 M page_count: 37 document date: 2025-10-17

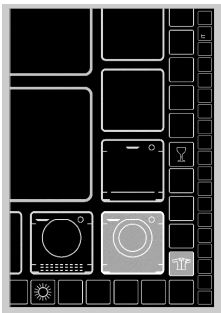 

[\[pdf\]](#) Label
Administrator mmo 125032742 1735555459 7128 1465265static unieuro it energylabel 1465265 Scarica il manuale del prodottoCandy BR 48SBL6 S lavatrice Cari 975075static prodottoGrazie UnieuroCandy UnieuroBR 47SBL8 47SBL8G 49SBL8 410BL8 411BL9 412BL8 413BL8 Tensione V 220 240 V~ 50Hz Corrente A 10n UnieuroUntitledUntitledCandy 124979624 1734883461 18 856132mmo 1465265objects icecat biz objects 856132static ||| ||| IT Grazie IT Grazie per aver acquistat contengono informazioni importanti che vi aiuteranno a utilizzare al meglio l ||| IT Grazie IT Grazie per aver acquistato un prodotto Hoover. Leggere attentamente le aiuteranno a utilizzare al meglio l ||| IT Grazie IT Grazie per aver acquistato un prodotto Hoover. Leggere attentamente le presenti istruzioni prima di utilizzare ques IT Grazie IT Grazie per aver acquistato un prodotto Hoover. Leggere attentamente le presenti ist ... za max in W Pressione dell acqu 10 1950 0,03 P 1 59 67 IT BR 411BL9-S BR 412BL8-S BR 413BL8-S 7...
lang:it score:12 filesize: 2 M page_count: 37 document date: 2024-10-09

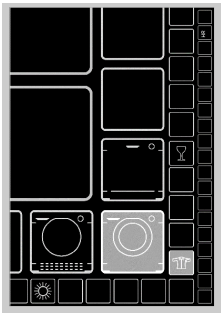 

[\[pdf\]](#)
Administrator Untitledv1pevex hr Documents product document 401587 up |||
HR Hvala HR Zahvaljujemo na kupnji proizvoda tvrtke Hoover. Pazljivo procitajte ove upute prije ... u V Struja u A Maks. snaga u W Hz 10 1950 0,03 P 1 59 67 HR BR 411BL9-S BR 412BL8-S BR 413B...
lang:hr score:9 filesize: 2.01 M page_count: 37 document date: 2024-10-08