

[Manuals.plus](#) /

› [Timex](#) /

› Timex Ironman Classic 30 38mm Watch User Manual

Timex T5H591

Timex Ironman Classic 30 38mm Watch User Manual

Model: T5H591

1. PRODUCT OVERVIEW

The Timex Ironman Classic 30 is a digital sport watch designed for durability and functionality. It features a 100-hour chronograph, 30-lap memory, 24-hour countdown timer, multiple alarms, dual time zones, and the INDIGLO night-light.



Front view of the Timex Ironman Classic 30 38mm Watch, displaying the digital time and various function buttons.



Side profile of the Timex Ironman Classic 30 watch, illustrating its design and strap.

2. SETUP

2.1 Initial Time and Date Setting

To set the time and date on your Timex Ironman Classic 30 watch:

1. Press the **MODE** button repeatedly until you reach the Time Set mode. The seconds display will begin to flash.
2. Press the **START/SPLIT** button to advance the flashing digit.
3. Press the **STOP/RESET** button to move to the next digit (minutes, hours, 12/24-hour format, month, day, year).
4. Repeat steps 2 and 3 until all desired settings are adjusted.
5. Press the **MODE** button to exit Time Set mode and return to the normal time display.

2.2 Dual Time Zone Setup

Your watch supports two time zones. To set the second time zone (T2):

1. From the normal time display, press and hold the **SET/RECALL** button.
2. Press the **MODE** button to cycle through settings until T2 time is displayed.
3. Use the **START/SPLIT** and **STOP/RESET** buttons to adjust the T2 time, similar to setting the main time.
4. Press **SET/RECALL** to save and exit.

Your browser does not support the video tag.

This video provides a brief overview of the Timex Ironman Classic 30 watch, showcasing its design and key features, which can assist with initial setup understanding.

3. OPERATING INSTRUCTIONS

3.1 Navigating Modes

Press the **MODE** button to cycle through the watch's functions: Time, Chronograph, Timer, and Alarm.



Close-up view of the watch face, showing the labels for the MODE, SET/RECALL, INDIGLO, STOP/RESET, and START/SPLIT buttons.

3.2 Chronograph (Stopwatch)

The chronograph measures elapsed time up to 100 hours with 30-lap memory.

1. Press **MODE** until "CHRONO" appears.
2. Press **START/SPLIT** to begin timing.
3. Press **START/SPLIT** again to record a lap/split time. The display will hold the split time for a few seconds before returning to running time.

4. Press **STOP/RESET** to pause the chronograph.
5. Press **STOP/RESET** again to reset the chronograph to zero.
6. To recall lap times, press **SET/RECALL** while the chronograph is stopped.

3.3 Countdown Timer

The 24-hour countdown timer can be set for various durations.

1. Press **MODE** until "TIMER" appears.
2. Press and hold **SET/RECALL** to enter timer set mode.
3. Use **START/SPLIT** and **STOP/RESET** to set the desired countdown time.
4. Press **SET/RECALL** to save the setting.
5. Press **START/SPLIT** to start the countdown.
6. Press **STOP/RESET** to pause or resume the timer.

3.4 Alarms

The watch features three customizable alarms (daily, weekday, or weekend).

1. Press **MODE** until "ALARM" appears.
2. Press **SET/RECALL** to select an alarm (AL1, AL2, AL3).
3. Press and hold **SET/RECALL** to enter alarm set mode.
4. Use **START/SPLIT** and **STOP/RESET** to set the alarm time and frequency (daily, weekday, weekend).
5. Press **SET/RECALL** to save the alarm.
6. Press **START/SPLIT** to toggle the alarm on/off.

3.5 INDIGLO Night-Light

Press the **INDIGLO** button (top right) to illuminate the watch face for easy viewing in low light conditions.

Your browser does not support the video tag.

A video demonstrating the Timex Ironman Classic 30 watch, showcasing its features and display.

Your browser does not support the video tag.

This short video highlights the core functions of the Timex Ironman Classic watch, including its chronograph, alarm, timer, and INDIGLO backlight.

4. MAINTENANCE

4.1 Water Resistance

This watch is water-resistant to 100 meters (330 feet). It is suitable for showering, swimming, and snorkeling. Do not press any buttons while the watch is wet or submerged to prevent water entry.

4.2 Battery Replacement

The watch uses one Lithium Metal battery (included). When the display dims or functions become erratic, it may be time to replace the battery. Battery replacement should ideally be performed by a qualified watch technician to ensure proper sealing and maintain water resistance.

4.3 General Care

- Clean your watch regularly with a soft, damp cloth.
- Avoid exposing the watch to extreme temperatures or direct sunlight for prolonged periods.
- Keep the watch away from strong magnetic fields.

5. TROUBLESHOOTING

- **Display is blank or dim:** The battery may be low. Replace the battery.
- **Buttons are unresponsive:** Ensure the watch is not in a locked mode (if applicable, refer to specific model features). If issues persist, a battery reset may be needed by removing and reinserting the battery.
- **Time is incorrect:** Re-set the time and date following the instructions in Section 2.1.
- **Water inside the watch:** Immediately take the watch to a qualified service center. Do not attempt to open it yourself.

6. SPECIFICATIONS

Model Number	T5H591
Case Diameter	38 mm
Case Material	Resin
Band Material	Resin
Water Resistance Depth	100 meters (330 feet)
Display Type	Digital
Movement Type	Quartz
Battery Type	Lithium Metal (included)
Special Features	Chronograph, Countdown Timer, Alarms, INDIGLO Night-Light, 30-Lap Memory, Dual Time Zones

7. WARRANTY INFORMATION

This Timex watch is covered by a manufacturer's warranty. Please refer to the official Timex website or the warranty card included with your purchase for specific terms and conditions regarding coverage and duration.

8. SUPPORT

For additional support, frequently asked questions, or to view the full user manual in PDF format, please visit the official Timex website or contact Timex customer service.

You can also find more information and products at the [Timex Store on Amazon](#).

Your browser does not support the video tag.

This video provides a sizing guide to help determine the best fit for your Timex watch.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question