

[Manuals.plus](#) /

› [Zyliss](#) /

› Zyliss Easy Pull Food Chopper and Manual Food Processor Instruction Manual

Zyliss Easy-Pull E910074

Zyliss Easy Pull Food Chopper and Manual Food Processor Instruction Manual

INTRODUCTION

Thank you for choosing the Zyliss Easy Pull Food Chopper and Manual Food Processor. This manual provides essential information for the safe and efficient operation, maintenance, and care of your new kitchen tool. Please read these instructions thoroughly before first use and retain them for future reference. The Zyliss Easy Pull Food Chopper is designed to simplify food preparation by efficiently chopping, blending, and pureeing various ingredients. Its manual operation offers precise control over food texture without requiring electricity.



pull.
chop.
enjoy.

**manual food prep
made fast and simple.**

Image: The Zyliss Easy Pull Food Chopper shown alongside a bowl of hummus and bread, demonstrating its utility in preparing ingredients for meals.

PRODUCT COMPONENTS

The Zyliss Easy Pull Food Chopper consists of the following main parts:

- **Lid with Pull Cord Mechanism:** Contains the manual pull-cord system for blade rotation.
- **Ultra-Sharp Stainless Steel Blades:** Durable blades designed for efficient chopping.
- **Container/Bowl:** The main bowl where food is processed, with a 25-ounce capacity.
- **Sweeper Arm:** Guides food for consistent texture during chopping.
- **Non-Slip Base:** Ensures stability during operation.

even chopping results



quick pull-cord action controls chopping speed and coarseness

the **cleverly swiss** brand

Image: An exploded view diagram of the Zyliss Easy Pull Food Chopper, pointing out its key components: the pull cord mechanism, stainless steel blades, and non-slip base.

SETUP INSTRUCTIONS

1. **Unpack:** Carefully remove all components from the packaging.
2. **Wash:** Before first use, wash all parts (lid, blades, container) with warm soapy water. Rinse thoroughly and dry.
3. **Assemble Blades:** Place the ultra-sharp stainless steel blade unit onto the central post inside the container. Ensure it sits securely.
4. **Add Ingredients:** Place your desired ingredients into the container. Do not overfill; ensure the lid can close properly without forcing.
5. **Secure Lid:** Place the lid onto the container, aligning it correctly. Twist or press down firmly until it is securely locked in place.

simple to clean



disassembles in
seconds for fast,
easy cleaning.

Image: A user demonstrating the disassembly of the Zyliss Easy Pull Food Chopper, highlighting how the blade unit detaches from the lid for easy cleaning and setup.

OPERATING INSTRUCTIONS

To operate the Zyliss Easy Pull Food Chopper:

1. **Prepare Ingredients:** Cut larger ingredients into smaller, manageable pieces (approximately 1-2 inches) before placing them in the container.
2. **Pull Cord:** With the lid securely in place, hold the container firmly with one hand. With the other hand, grasp the pull cord handle and pull it horizontally away from the body of the chopper.
3. **Control Texture:** The number of pulls determines the fineness of the chop.
 - 1-3 pulls for coarse chop.
 - 4-6 pulls for medium chop.
 - 7-10+ pulls for fine chop or pureeing.
4. **Check Consistency:** Periodically remove the lid to check the consistency of your ingredients.
5. **Empty Container:** Once desired consistency is achieved, carefully remove the lid and blade unit. Empty the chopped ingredients.

Safety Note:

- The blades are extremely sharp. Always handle the blade unit with caution.
- Keep fingers away from the blades during operation and cleaning.
- Ensure the lid is securely fastened before pulling the cord.
- Do not attempt to process extremely hard items like coffee beans or ice cubes, as this may damage the blades.



Image: A person demonstrating the use of the Zyliss Easy Pull Food Chopper, pulling the cord to chop ingredients in the bowl, with various chopped foods displayed nearby.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your Zyliss Easy Pull Food Chopper.

- **Disassembly:** Disassemble the chopper by removing the lid and then the blade unit from the container.
- **Dishwasher Safe:** The container and blade unit are dishwasher safe. Place them on the top rack for best results.
- **Hand Washing:** For the lid, hand wash with warm soapy water. Use a brush to clean any food particles from the pull cord mechanism area. *Do not submerge the lid in water,* as this may damage

the internal mechanism.

- **Drying:** Ensure all parts are completely dry before reassembling or storing.
- **Storage:** Store the chopper in a dry place.

simple to clean



disassembles in seconds for fast, easy cleaning.

Image: A user separating the blade unit from the container of the Zyliss Easy Pull Food Chopper, illustrating the ease of disassembly for thorough cleaning.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Blades not rotating or difficult to pull cord.	• Container is overfilled. • Ingredients are too large or too hard. • Lid not properly secured.	• Reduce the amount of ingredients. • Cut ingredients into smaller pieces. • Ensure the lid is locked firmly in place.

Problem	Possible Cause	Solution
Uneven chopping results.	- Ingredients are not evenly distributed. - Not enough pulls for desired consistency.	- Shake the chopper gently between pulls to redistribute ingredients. - Continue pulling the cord until desired consistency is reached.
Food stuck in lid mechanism.	Lid was submerged or not cleaned properly.	Clean the lid carefully with a damp cloth and brush, avoiding submerging it.

SPECIFICATIONS

Feature	Detail
Brand	Zyliss
Model Name	Easy-Pull
Item Model Number	E910074
Color	Black
Power Source	Manual
Bowl Capacity	25 Ounces
Material	Stainless Steel (Blades)
Product Dimensions	5.51 x 5.51 x 5.51 inches
Item Weight	14.2 ounces
Product Care Instructions	Dishwasher Safe (Bowl & Blade Unit)



1 pull cord mechanism

easy manual operation, no electricity needed

2 ultra-sharp stainless steel blades

durable blades for effortless chopping

3 non-slip base

keeps the processor stable on any surface

Image: A visual representation of the Zyliss Easy Pull Food Chopper with its key dimensions labeled for reference.

WARRANTY AND SUPPORT

For warranty information or product support, please contact Zyliss customer service. Details can typically be found on the Zyliss official website or product packaging.

Please retain your proof of purchase for any warranty claims.