

F6

Generic F6 20000mAh Rechargeable Camping Fan with LED Lantern User Manual

INTRODUCTION

Thank you for choosing the Generic F6 20000mAh Rechargeable Camping Fan with LED Lantern. This versatile device is designed to provide cooling airflow and illumination for various outdoor and indoor activities, including camping, travel, fishing, and emergency situations. Please read this manual carefully before use to ensure proper operation and maintenance.



The Generic F6 Camping Fan is suitable for a variety of outdoor activities, providing comfort and light.

PRODUCT FEATURES

- **High Capacity Battery:** Integrated 20000mAh rechargeable battery provides extended operation, up to 72 hours of continuous cooling.

- **Dual-Powered Versatility:** Features 5V/3A Type-C input/output for recharging via USB cable or solar panels. Functions as an emergency power bank for charging mobile devices.
- **Adjustable Airflow:** Offers 4 quiet speed settings for varied cooling needs.
- **Flexible Positioning:** Built-in 360° hanging hook for tent, RV, or patio use. Features 45°/90° auto oscillation and 270° manual rotation for precise airflow.
- **Integrated LED Lantern:** Includes 2 light modes and 3 brightness levels for illumination during nighttime activities.
- **Convenient Control:** Operable via base switch or a 5-meter range remote control. Includes timer (1-8H) and sleep mode functions.

PACKAGE CONTENTS

- 1 x Generic F6 Rechargeable Camping Fan
- 1 x Remote Control
- 1 x USB Type-C Charging Cable
- 1 x User Manual

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for future storage or transport.
2. **Initial Charge:** Before first use, fully charge the fan. Connect the provided USB Type-C cable to the fan's charging port and to a compatible 5V/3A USB power adapter (not included). The charging indicator will show progress.
3. **Remote Control Battery:** Ensure the remote control has a working battery. If not, insert or replace with the correct battery type (typically CR2025 or similar, check remote for specifics).



The fan can be recharged via its Type-C port and also functions as a power bank.

OPERATING INSTRUCTIONS

Fan Operation

- **Power On/Off:** Press the power button on the fan base or remote control to turn the fan on or off.
- **Adjust Fan Speed:** Press the fan speed button on the base or remote to cycle through 4 speed settings.
- **Oscillation:** Press the oscillation button on the base or remote to activate 45° or 90° automatic oscillation. The fan head can also be manually rotated 270° for desired direction.
- **Hanging Hook:** Utilize the integrated 360° rotatable hook to hang the fan from tents, branches, or other suitable structures.



The fan offers multi-angle adjustment and oscillation for maximum coverage.

LED Lantern Operation

- **Turn Light On/Off:** Press the light button on the fan base or remote control to turn the LED lantern on or off.
- **Adjust Brightness:** Cycle through 3 brightness levels by repeatedly pressing the light button.
- **Light Modes:** The lantern offers 2 distinct light modes.
- **Sleep Mode:** Activate sleep mode via the remote control to turn off all lights for undisturbed rest.



The integrated LED lantern provides three brightness levels for various lighting needs.

Remote Control Functions

The remote control allows for convenient operation from a distance of up to 5 meters.

- **Power Button:** Turns the fan and light on/off.
- **Fan Speed Buttons:** Adjusts fan speed.
- **Light Button:** Controls LED lantern on/off and brightness levels.
- **Oscillation Button:** Activates/deactivates automatic oscillation.
- **Timer Button:** Sets the operating timer for 1, 2, 4, or 8 hours.
- **Sleep Mode Button:** Activates sleep mode, turning off all lights.



The remote control provides convenient access to all fan and light functions.

CHARGING AND POWER BANK FUNCTION

Charging the Fan

To charge the fan, connect the provided USB Type-C cable to the fan's input port and to a 5V/3A USB power source. The charging indicator will illuminate to show charging status. A full charge can take approximately 8 hours.

Using as a Power Bank

The fan can serve as an emergency power bank. Connect your mobile device's charging cable to the fan's USB output port (5V/3A) to charge your device. This feature is ideal for situations where electricity is unavailable.



The 20000mAh battery allows the fan to charge a phone multiple times.

MAINTENANCE

- **Cleaning:** Ensure the fan is turned off and unplugged before cleaning. Use a soft, dry cloth to wipe the exterior. Do not use abrasive cleaners or immerse the fan in water.
- **Storage:** Store the fan in a cool, dry place away from direct sunlight when not in use. For long-term storage, charge the battery to approximately 50% every 3 months to prolong battery life.
- **Battery Care:** Avoid fully depleting the battery frequently. Charge the fan regularly to maintain optimal battery performance.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Battery is depleted.	Charge the fan using the provided USB Type-C cable.
Fan not charging.	Charging cable or adapter is faulty; connection is loose.	Ensure the cable is securely connected. Try a different USB cable or power adapter.
Remote control not working.	Remote battery is low or depleted; obstruction between remote and fan.	Replace the remote control battery. Ensure there is a clear line of sight to the fan's receiver.
Weak airflow.	Fan speed is set too low; battery is low.	Increase the fan speed. Charge the fan's battery.

SPECIFICATIONS

- **Brand:** Generic
- **Model Number:** F6 (GF6)
- **Color:** Orange
- **Power Source:** Battery Powered
- **Battery Capacity:** 20000mAh
- **Material:** Plastic
- **Product Dimensions (L x W x H):** 11.13" x 8.76" x 4.43"
- **Item Weight:** 2.8 pounds
- **Mounting Type:** Tabletop Mount, Hanging Hook
- **Voltage:** 5 volts
- **Wattage:** 15 watts
- **Included Components:** Remote Control
- **UPC:** 722066556702

3 Levels Brightness Camping Fan

Super bright **32 LED Lights** *beads*



120 hours *low*



80 hours *Medium*



40 hours *High*



Key dimensions of the Generic F6 Camping Fan.

SAFETY INFORMATION

- Do not expose the fan to extreme temperatures, direct sunlight for prolonged periods, or high humidity.
- Keep out of reach of children and pets.
- Do not disassemble, repair, or modify the fan yourself. Contact customer support for assistance.
- Use only the provided or recommended charging cable.
- Avoid blocking the fan blades or air inlets/outlets during operation.
- Do not use the fan near flammable gases or liquids.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

This video demonstrates the features and functionality of the 20000mAh rechargeable camping fan.

WARRANTY AND SUPPORT

This product is manufactured by Gorsoon. For any questions, technical support, or warranty inquiries, please contact the seller or manufacturer directly through your purchase platform. Please retain your proof of purchase for warranty claims.

© 2026 Generic. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question