

[manuals.plus](#) /› [YESHOMY](#) /› [YESHOMY LED Corner Fireplace TV Stand \(Model YH-TS23-214LED-WT\) Instruction Manual](#)**YESHOMY YH-TS23-214LED-WT**

YESHOMY LED Corner Fireplace TV Stand (Model YH-TS23-214LED-WT) Instruction Manual

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your YESHOMY LED Corner Fireplace TV Stand, Model YH-TS23-214LED-WT. This unit is designed to accommodate TVs up to 55 inches and features an integrated electric fireplace with mood lighting and ample storage solutions.

The TV stand includes an electric fireplace that provides warmth and ambiance. Its corner design optimizes space utilization, making it suitable for various room sizes without causing clutter. Multiple storage options, including two cabinets and open shelving, allow for organized placement of media devices, books, and decorative items.



Figure 1: The YESHOMY LED Corner Fireplace TV Stand in a living room setting.

2. SAFETY INFORMATION

Please read and understand all safety instructions before assembling or operating this product. Failure to follow these instructions may result in electric shock, fire, property damage, or personal injury.

- Always ensure proper ventilation when using the fireplace.
- Keep the product away from flammable materials.
- Do not block the ventilation openings of the fireplace.
- Keep the product out of reach of children and pets.
- Always follow the assembly instructions carefully to avoid injury.
- Do not overload the shelves or the top surface of the TV stand.
- Ensure the power cord is not pinched or routed under the unit.

3. PACKAGE CONTENTS

Your YESHOMY LED Corner Fireplace TV Stand package includes the following components. Please verify all

parts are present before beginning assembly.

- TV Stand Console components
- Electric Fireplace Insert
- Assembly Hardware (screws, dowels, etc.)
- Remote Control for Fireplace
- Instruction Manual (this document)

Note: The TV console and the electric fireplace may be shipped in separate boxes and might arrive at different times. Please ensure both packages have been received before starting assembly.

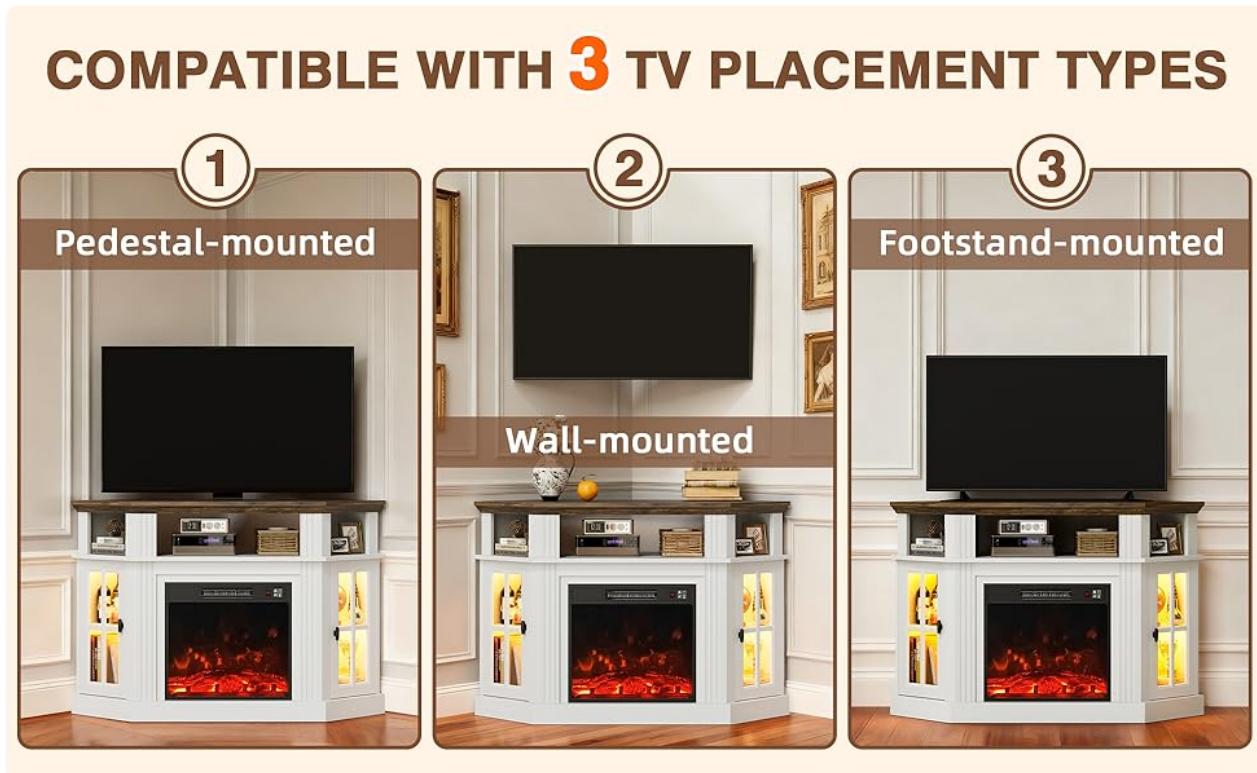


Figure 2: The TV stand and fireplace are shipped in two separate packages.

4. ASSEMBLY INSTRUCTIONS

The YESHOMY LED Corner Fireplace TV Stand is designed for easy assembly. A clear introduction and a package of screws are included to guide you through the process. It is recommended to have a second person assist with assembly for stability and ease.

General Assembly Tips:

- Lay out all components and hardware on a soft, clean surface to prevent scratches.
- Identify each part using the provided diagrams in the included manual.
- Do not overtighten screws during initial assembly; tighten fully once the unit is stable.
- Ensure all connections are secure before placing items on the stand.



Glass-Front Showcase Doors

Protect your treasures in style.

Open-Concept Shelving

Easy access to your essentials.



Figure 3: Front view of the assembled TV stand, ready for use.

5. SETUP

5.1 Placement

This TV stand is specifically designed for corner placement, maximizing space efficiency in your living area. Ensure the chosen corner is clear of obstructions and has access to a power outlet for the electric fireplace.

5.2 TV Compatibility

The stand is suitable for televisions up to 55 inches. Verify your TV's dimensions and weight are within the stand's capacity for safe placement.



Figure 4: The TV stand is compatible with TVs up to 55 inches.

5.3 Power Connection

Connect the electric fireplace to a standard electrical outlet. Ensure the power cord is not damaged or obstructed.

6. OPERATING INSTRUCTIONS

6.1 Electric Fireplace Operation

The 18-inch electric fireplace features 3D vertical flames and adjustable mood lighting. It can be operated using the control panel on the unit or the included remote control.

- **Power:** Use the power button to turn the fireplace on or off.
- **Flame Brightness:** Adjust the flame brightness to one of three levels (L1, L2, L3) using the flame button.
- **Heat Settings:** The fireplace offers a low-heat mode and can heat to temperatures between 60-82°F (or 99°F). Use the temperature controls to set your desired warmth.
- **Timer:** Set an operating timer from 0.5 to 9.0 hours. A 7-day timer function is also available.
- **Mood Lighting:** The fireplace features 14-level adjustable mood lighting to enhance the ambiance.



Figure 5: Fireplace control panel and remote control functions.

Your browser does not support the video tag.

Video 1: Demonstration of the LED Corner Fireplace TV Stand, showcasing the fireplace and mood lighting features. This video highlights the remote control functionality and various flame settings.

Your browser does not support the video tag.

Video 2: A brief overview of the Corner TV Stand with its electric fireplace insert, demonstrating its cozy aesthetic and functionality.

6.2 Storage Utilization

The TV stand offers versatile storage options:

- **Cabinets:** Two glass-front cabinets are ideal for storing fragile items or items requiring protection.
- **Open Shelves:** The open storage spaces are perfect for media consoles, DVDs, books, or decorative elements, providing easy access.

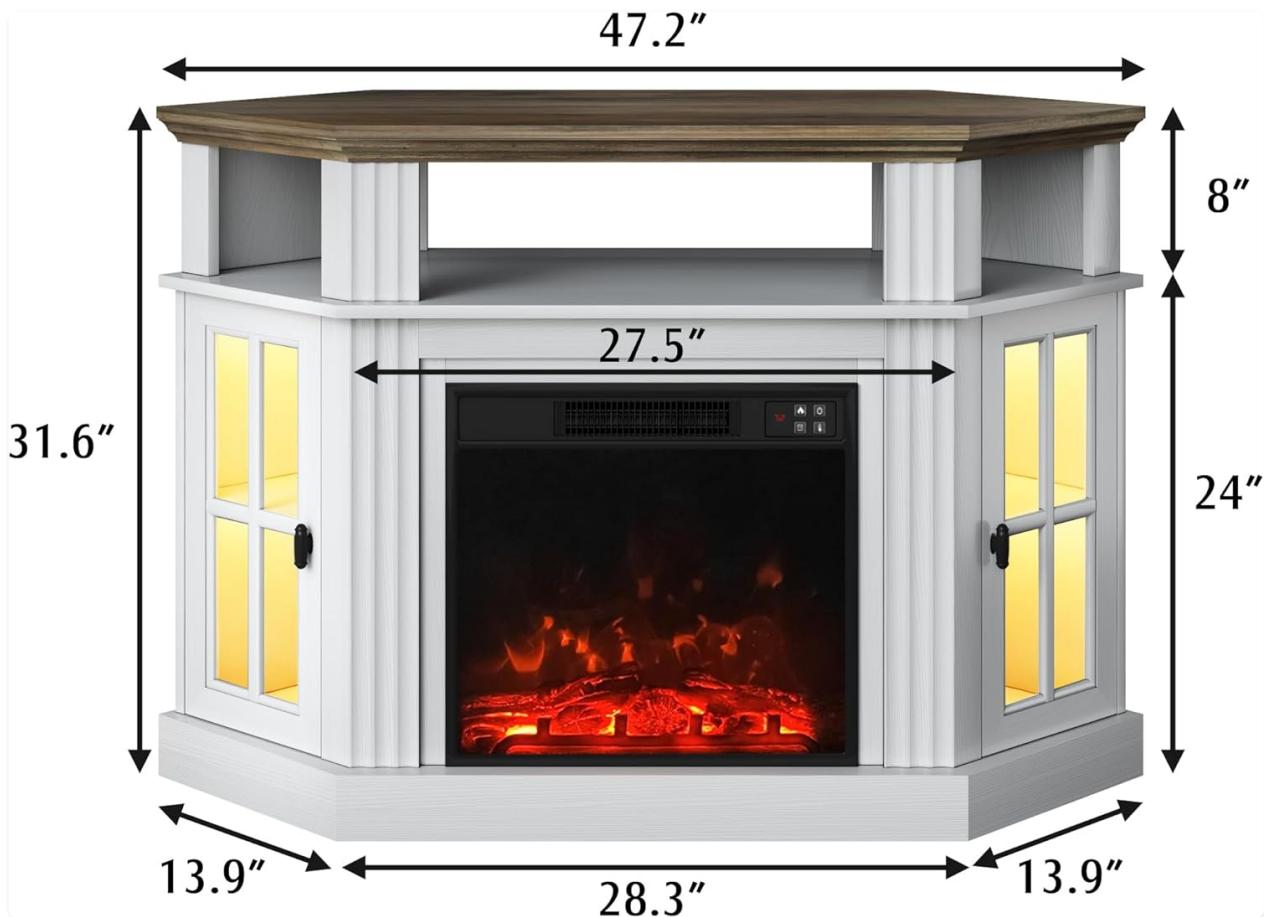


Figure 6: Detail of the glass-front showcase doors and open-concept shelving.



Figure 7: Hidden and open storage options for various items.

7. MAINTENANCE

Regular maintenance will ensure the longevity and optimal performance of your TV stand and fireplace.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners that may damage the finish.
- **Fireplace Care:** Periodically check the fireplace's air intake and outlet for dust accumulation. Clean gently with a soft brush or vacuum cleaner.
- **Structural Integrity:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- **Cord Management:** Ensure all electrical cords are neatly organized and not pinched or damaged.

8. TROUBLESHOOTING

If you encounter any issues with your YESHOMY LED Corner Fireplace TV Stand, refer to the following common troubleshooting tips:

- **Fireplace Not Turning On:** Ensure the unit is properly plugged into a functional power outlet. Check the power button on both the unit and the remote control.
- **No Heat Output:** Verify that the heat function is activated on the control panel or remote. Check the temperature setting to ensure it is above the current room temperature.
- **Unusual Noises:** If the fireplace makes unusual noises, turn it off immediately and unplug it. Contact customer support if the issue persists after restarting.
- **Loose Components:** If any part of the TV stand feels loose, carefully inspect and tighten all screws and connections.

For persistent issues or concerns not addressed here, please contact YESHOMY customer support.

9. SPECIFICATIONS

Feature	Detail
Brand	YESHOMY
Model Number	YH-TS23-214LED-WT
Color	White & Rustic
Material	Wood
Product Dimensions	20.1"D x 47.2"W x 31.6"H
Item Weight	89 Pounds
Recommended Uses	Television Stand, Heating, Storage
Special Feature	LED Flame, 14-level Mood Lighting
Mounting Type	Floor Mount

Room Type	Living Room
Storage Options	2 cabinets, 1 open shelf
Assembly Required	Yes
Included Components	TV Stand, Electric Fireplace, Manual

10. WARRANTY AND SUPPORT

YESHOMY is committed to providing quality products and customer satisfaction.

- **Returns:** This product is eligible for 30-day easy returns. Please refer to the retailer's return policy for details.
- **Protection Plans:** Extended protection plans are available for purchase, including 2-Year and 3-Year options. Please check with your retailer for more information on these plans.
- **Customer Support:** For any questions, assistance, or to report issues, please contact YESHOMY customer support through your purchase platform.