

[Manuals.plus](#) /

› [GUESS](#) /

› GUESS GW0945L4 Women's Analog Watch User Manual

GUESS GW0945L4

GUESS GW0945L4 Women's Analog Watch User Manual

Model: GW0945L4

PRODUCT OVERVIEW

The GUESS GW0945L4 is an analog women's watch featuring a blue rectangle dial and a rose gold-tone case. It is designed with a navy blue bio-based nylon overlay and a textured navy blue silicone strap, offering a sporty yet chic aesthetic. This model includes a multi-function dial for enhanced utility.



Figure 1: Front view of the GUESS GW0945L4 watch, showcasing the blue dial and silicone strap.

Setting the Time

To set the time on your GUESS GW0945L4 watch, follow these steps:

1. **Pull out the crown:** Locate the crown on the right side of the watch case. Gently pull it out to the outermost position.
2. **Rotate the crown:** Turn the crown clockwise or counter-clockwise to move the hour and minute hands to the correct time.
3. **Push in the crown:** Once the correct time is set, push the crown back into its original position against the watch case. This will start the watch movement.



Figure 2: Side view of the watch, highlighting the crown for time adjustment.

Adjusting the Strap

The silicone strap features a buckle closure for easy adjustment. To adjust the fit:

1. **Open the buckle:** Unfasten the buckle.
2. **Select a hole:** Place the watch on your wrist and choose the strap hole that provides a comfortable and secure fit.
3. **Fasten the buckle:** Insert the buckle pin into the selected hole and secure the strap. Ensure the watch is not too tight or too loose.

OPERATING YOUR WATCH

Basic Timekeeping

Your GUESS GW0945L4 watch is an analog timepiece powered by a Quartz movement. Once the time is set, the watch will continuously display the current hour, minute, and second (if applicable) via its hands.

Multi-Function Dial

This watch features a multi-function dial, which typically includes sub-dials for displaying additional information such as the day of the week, date, or 24-hour time. Refer to the specific markings on your watch's dial for the functions of each sub-dial. Adjustment for these functions is usually done by pulling the crown to a specific position and rotating it, or by using additional pushers on the watch case if present.

MAINTENANCE

Cleaning Your Watch

To maintain the appearance of your watch:

- Wipe the case and strap with a soft, damp cloth.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish or strap material.
- For silicone straps, a mild soap solution can be used, followed by rinsing with clean water and thorough drying.

Water Resistance

Your watch has a water resistance depth of 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. It is **not** suitable for swimming, showering, or diving. Always ensure the crown is fully pushed in before any contact with water.

Battery Replacement

The watch is powered by a product-specific battery. When the battery needs replacement, it is recommended to take your watch to an authorized service center or a professional watchmaker. Attempting to replace the battery yourself may void the warranty and could damage the watch's internal components or compromise its water resistance.

TROUBLESHOOTING

If you encounter issues with your watch, consider the following common solutions:

- **Watch not running:** Ensure the crown is fully pushed in. If it still doesn't run, the battery may need replacement.
- **Incorrect time:** Re-set the time as described in the "Setting the Time" section.
- **Condensation under crystal:** This may indicate a loss of water resistance. Avoid further contact with water and

seek professional service immediately.

- **Strap discomfort:** Adjust the strap to a different hole for a more comfortable fit. If irritation occurs, clean the strap thoroughly.

For issues not resolved by these steps, please contact customer support.

SPECIFICATIONS

Model Name	GW0945L4
Brand	GUESS
Display Type	Analog
Movement Type	Quartz
Case Shape	Rectangular
Case Diameter	35 mm
Case Thickness	11.1 mm
Band Material	Silicone
Band Colour	Blue
Band Width	21 mm
Dial Colour	Blue
Crystal Material	Crystal
Water Resistance Depth	30 Metres (3 ATM)
Closure Type	Buckle
Item Weight	58.5 Grams
Batteries Required	1 Product Specific battery

WARRANTY INFORMATION

Your GUESS GW0945L4 watch comes with a **1 Year Manufacturer Warranty** against manufacturing defects. This warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from accidents, improper use, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, service, or warranty claims, please contact the authorized importer and manufacturer:
Timex Group India Limited

Plot No. 10, Industrial Area- Katha,
Bhatoli Kalan, Baddi,
Himachal Pradesh – 173205, India

Please visit the official GUESS website or your local authorized dealer for additional support resources.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question