

jiteentarou Fluted Dresser B0FQTYFLM5

jiteentarou Fluted 9-Drawer Dresser with Power Outlet User Manual

Model: Fluted Dresser (B0FQTYFLM5)

INTRODUCTION

This manual provides detailed instructions for the assembly, operation, and maintenance of your jiteentarou Fluted 9-Drawer Dresser. Please read this manual thoroughly before assembly and use to ensure proper function and safety.

The jiteentarou Fluted 9-Drawer Dresser is designed with distinctive wave-like fluted panels and smooth metal handles, offering both modern aesthetics and practical storage. It features nine spacious drawers and an integrated charging station for convenience.

SAFETY INFORMATION

WARNING: Failure to follow these safety instructions may result in injury or damage to the product.

- **Anti-Tipping Kit:** This dresser includes a wall anchor kit to prevent tipping. It is crucial to install this kit as instructed to ensure stability and safety, especially in households with children or pets.
- **Drawer Safety Stops:** Each drawer is equipped with a safety stop to prevent accidental pull-outs. Do not attempt to force drawers beyond their intended stop.
- **Weight Capacity:** The maximum tabletop load capacity is 200 lbs. Do not exceed this weight. Distribute weight evenly across the surface.
- **Assembly:** Assembly requires careful attention to detail. It is recommended to have two people for assembly, especially for larger components. An electric screwdriver can assist with assembly.
- **Placement:** Place the dresser on a flat, stable surface. Avoid placing it in areas with high humidity or direct sunlight to prevent material degradation.
- **Power Outlet:** Ensure the power cord is not pinched or damaged. Do not overload the power outlets. Use only in dry indoor locations.

PACKAGE CONTENTS

Before beginning assembly, verify that all parts are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

The package typically includes:

- Dresser panels (top, bottom, sides, back, drawer fronts, drawer sides, drawer bottoms)
- Hardware kit (screws, dowels, cam locks, drawer slides, handles, wall anchor kit)
- Integrated power outlet unit with power cord
- Assembly instructions manual

SETUP AND ASSEMBLY INSTRUCTIONS

Assembly is required for this dresser. Please follow the steps carefully. An electric screwdriver is recommended for faster assembly. It is advisable to have a second person assist with assembly.

1. **Prepare the Area:** Clear a spacious, clean, and flat area for assembly. Lay down a blanket or cardboard to protect the floor and furniture parts from scratches.
2. **Identify Parts:** Unpack all components and hardware. Refer to the parts list in your included assembly guide to identify each piece.
3. **Assemble the Main Frame:** Begin by assembling the base and side panels of the dresser. Secure them using the provided hardware (e.g., cam locks, screws). Ensure all connections are tight.
4. **Install Drawer Slides:** Attach the drawer slides to the inner sides of the dresser frame according to the instructions. Ensure they are level and properly aligned.
5. **Assemble Drawers:** For each of the nine drawers, attach the sides to the front and back panels. Insert the drawer bottom. Secure the drawer slides to the sides of the assembled drawers. Attach the metal handles to the drawer fronts.
6. **Install Power Outlet:** Locate the designated cutout on the dresser top or back panel. Insert the power outlet unit and secure it with the provided screws. Route the power cord safely.
7. **Insert Drawers:** Carefully slide each assembled drawer into its respective slot in the dresser frame. Ensure they glide smoothly.
8. **Attach Anti-Tipping Kit:** Secure the wall anchor kit to the back of the dresser and to a wall stud using the provided hardware. This step is critical for safety.
9. **Final Check:** Verify that all screws are tightened, and the dresser is stable.

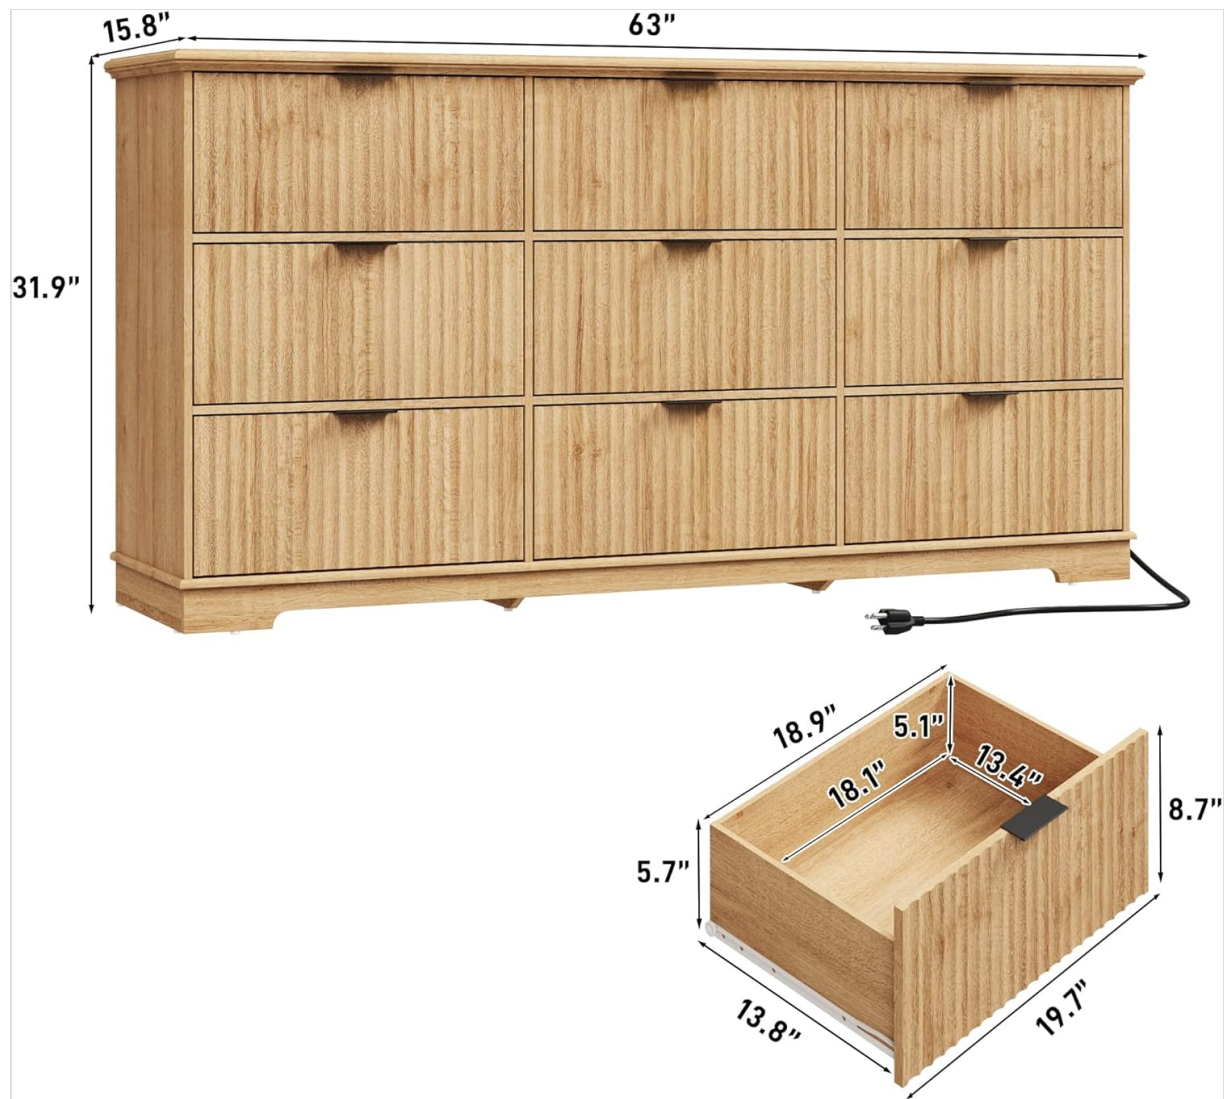


Image: Overall dimensions of the dresser (15.8"D x 63"W x 31.9"H) and internal dimensions of a single drawer (18.1"W x 13.4"D x 8.7"H).



Heightened Drawer Interior

Sleek Metal Handles

Bottom padded frame prevent scratches on the floor

Anti-Tipping Kit

Image: Detailed view of key features: heightened drawer interior for more storage, sleek metal handles, bottom padded frame to prevent floor scratches, and the anti-tipping kit for safety.

OPERATING INSTRUCTIONS

Using the Drawers

The dresser features nine spacious drawers designed for smooth operation. To open a drawer, gently pull the metal handle. To close, push the drawer firmly until it is fully seated. Each drawer has a safety stop to prevent it from being pulled out completely by accident.

9 large drawers for storing different types of clothing, toys, games



Clothes



Ornaments



Socks



Bag



Scarf



Toy



Image: The dresser with drawers open, illustrating ample storage capacity for various items such as clothing, ornaments, socks, bags, scarves, and toys.

Using the Integrated Charging Station

Your dresser is equipped with a convenient charging station located on the tabletop. This unit includes:

- 2 AC Outlets (125V/12A)
- 1 USB Port (5V/2A)
- 1 Type-C Port (5V/3A)

To use, plug the dresser's main power cord into a standard wall outlet. You can then connect your electronic devices to the available ports. Ensure devices are compatible with the provided voltage and current specifications.



Image: The integrated charging station on the dresser top, featuring two AC outlets, one USB port, and one Type-C port, actively charging a tablet, smartphone, and smartwatch.

MAINTENANCE

Proper care will extend the life and appearance of your dresser.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the finish. Dry immediately with a clean cloth.
- **Spills:** Blot spills immediately with a clean, dry cloth.
- **Heat and Moisture:** Avoid placing hot items directly on the surface. Use coasters or protective pads. Protect from excessive moisture.
- **Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration.
- **Drawer Slides:** Periodically check drawer slides for smooth operation. If they become stiff, a small amount of silicone lubricant can be applied.
- **Hardware:** Periodically check and tighten all screws and hardware to ensure stability.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers do not slide smoothly.	Misaligned drawer slides, loose hardware, obstruction.	Check alignment of drawer slides on both the drawer and the frame. Tighten all screws. Remove any obstructions. Apply silicone lubricant if necessary.
Dresser feels wobbly or unstable.	Loose assembly hardware, uneven floor, anti-tipping kit not installed.	Ensure all assembly screws are fully tightened. Place the dresser on a level surface or use shims if needed. Install the anti-tipping kit securely to a wall stud.
Charging station is not working.	Power cord not plugged in, wall outlet issue, overloaded circuit, damaged unit.	Ensure the dresser's power cord is securely plugged into a functional wall outlet. Test the wall outlet with another device. Do not exceed the rated capacity of the charging station. If still not working, contact customer support.
Scratches or minor damage to the surface.	Impact during assembly or use, abrasive cleaning.	For minor scratches, touch-up pens or furniture markers matching the finish color may be used. Avoid abrasive materials for cleaning.

SPECIFICATIONS

Brand: jiteentarou

Model Name: Fluted Dresser

ASIN: B0FQTYFLM5

Material: Engineered Wood

Finish Type: Painted

Color: Oak

Product Dimensions (D x W x H): 15.8" x 63" x 32"

Number of Drawers: 9

Item Weight: Approximately 120 Pounds

Tabletop Load Capacity: 200 lbs (maximum)

Charging Station:

- AC Outlets: 2 (125V/12A)
- USB Port: 1 (5V/2A)
- Type-C Port: 1 (5V/3A)
- Power Cord Length: 4.9 Feet

Required Assembly: Yes

Room Type: Bedroom, Kids Room, Living Room

WARRANTY INFORMATION

This jiteentarou product comes with a limited warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the documentation included with your purchase or contact jiteentarou customer support. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report missing/damaged parts, please contact jiteentarou customer support.

Manufacturer: jiteentarou

Online Store: [Visit the jiteentarou Store on Amazon](#)

Please have your model name (Fluted Dresser) and ASIN (B0FQTYFLM5) ready when contacting support.