

[Manuals.plus](#) /

› [Whirlpool](#) /

› Whirlpool WAM 76WBC IT 7kg Washing Machine User Manual

Whirlpool WAM 76WBC

Whirlpool WAM 76WBC IT 7kg Washing Machine User Manual

Model: WAM 76WBC

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Whirlpool WAM 76WBC IT 7kg front-load washing machine. Please read these instructions carefully before using the appliance and keep them for future reference.

Your washing machine is equipped with advanced features designed to simplify your laundry routine and ensure optimal results:

- **6th SENSE Technology:** Intelligent sensors automatically adapt time, energy, and water based on the load, ensuring perfect results with maximum resource savings.
- **FreshCare+:** Keeps garments fresh and soft for up to 6 hours after the cycle ends, thanks to delicate drum movements and steam, ideal if you cannot unload laundry immediately.
- **Steam Refresh:** Refreshes garments in just 20 minutes without a full wash: steam eliminates odors, softens fabrics, and reduces wrinkles.
- **HomeWhiz:** Control the washing machine remotely with the HomeWhiz app: start cycles, receive notifications, and customize settings from anywhere.
- **AutoDose:** Automatically dispenses detergent and softener for each cycle. Up to 26 washes with a single refill, without waste.

Whirlpool

7 kg

HomeWhiz



6th sense



Temp. Centrifuga Rapido/Intensivo Vapore Water Flow Termina in Controllo remoto



2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

General Safety

- Read all instructions before using the appliance.
- Do not allow children to play on or in the appliance. Close supervision is necessary when the appliance is used near children.
- Do not reach into the appliance if the tub or agitator is moving.
- Do not install or store this appliance where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the appliance or attempt any servicing unless specifically recommended in this manual.

Electrical Safety

- Ensure the appliance is properly grounded.
- Do not operate any appliance with a damaged cord or plug, or if it has been dropped or damaged in any manner.
- Unplug the appliance from the power supply before cleaning or performing any maintenance.

3. SETUP AND INSTALLATION

Proper installation is crucial for the performance and longevity of your washing machine. Follow these steps carefully.

3.1 Unpacking

- Remove all packaging materials, including the polystyrene base and any protective film.
- Remove the transport bolts from the rear of the machine. Keep them for future transport.

3.2 Positioning

Place the washing machine on a flat, stable floor. Ensure there is adequate space around the appliance for ventilation and maintenance. The dimensions are 84.5 cm (Height) x 60 cm (Width) x 49.6 cm (Depth).



The washing machine installed in a kitchen setting, demonstrating its free-standing design.

3.3 Leveling

Adjust the feet of the washing machine to ensure it is perfectly level. A level machine prevents excessive vibration and noise during operation.

3.4 Water Connection

- Connect the water inlet hose to a cold water tap with a 3/4" thread.
- Ensure all connections are tight to prevent leaks.

3.5 Drain Connection

Position the drain hose into a standpipe or connect it to a siphon. Ensure the hose is not kinked and is securely fastened.

3.6 Electrical Connection

Plug the power cable into a grounded electrical outlet. The appliance comes with a power cable included. Do not use extension cords or adapters.

3.7 First Use

Before the first wash with laundry, run an empty cycle (e.g., a short cotton program at 60°C) with a small amount of detergent to clean the drum and remove any manufacturing residues.

4. OPERATING INSTRUCTIONS

Familiarize yourself with the control panel and various functions to get the best results from your washing machine.

4.1 Control Panel Overview



Detailed view of the washing machine's control panel with program selector and function buttons.

The control panel features a central program selector knob, a digital display, and various touch buttons for options like temperature, spin speed, and special functions.

4.2 Loading Laundry

- Open the washing machine door.
- Load laundry loosely into the drum, ensuring not to overload. The maximum capacity is 7 kg.
- Close the door firmly.

4.3 Detergent Dispenser (AutoDose)



Close-up of the detergent dispenser drawer, showing compartments for detergent and softener.

Your washing machine features an AutoDose system. Fill the dedicated compartments with liquid detergent and fabric softener. The machine will automatically dispense the correct amount for each cycle, reducing waste and ensuring optimal cleaning.

Autodose

Dosa automaticamente detersivo e ammorbidente per ogni ciclo. Fino a **26 lavaggi con un solo riempimento**, senza sprechi.



Visual representation of the AutoDose system, highlighting automatic detergent and softener dispensing.

4.4 Selecting a Program

Turn the program selector knob to choose the desired wash program. The digital display will show the default settings for that program.

- **6th SENSE Technology:** Many programs utilize 6th SENSE, which automatically adjusts resources based on load size and fabric type.
- **Common Programs:** Cotton, Synthetics, Mixed, Delicates, Rapid 30', Eco 40-60, Intensive Wash, Dark Garments, Wool, Rinse & Spin, Spin & Drain, Drum Clean, Steam Refresh.



Sense Wash

Tre **sensori intelligenti** adattano programma e durata in base a tessuti, sporco e quantità di carico.

Diagram illustrating the Sense Wash feature, showing how sensors detect load, soil level, and fabric type to optimize the wash cycle.

4.5 Customizing Settings

After selecting a program, you can adjust settings using the touch buttons:

- **Temperature:** Adjust the wash temperature (e.g., 20°C, 30°C, 40°C, 60°C, 90°C).
- **Spin Speed:** Modify the spin speed (e.g., 800, 1000, 1200, 1400 rpm).
- **Special Options:** Activate functions like FreshCare+, Steam Refresh, or Delay Start.

4.6 Starting a Cycle

Press the Start/Pause button to begin the wash cycle. The indicator light will illuminate.

4.7 Special Functions

- **FreshCare+:** Activates at the end of the cycle to keep clothes fresh.
- **Steam Refresh:** Use for quick refreshing of clothes without washing.
- **HomeWhiz:** Connect your washing machine to the HomeWhiz app for remote control and additional features.



Home Whiz

Controlla la lavatrice **da remoto** con l'**app HomeWhiz**: avvia i cicli, ricevi notifiche e personalizza le impostazioni ovunque tu sia.

A smartphone screen showing the HomeWhiz application, used for remote control of the washing machine.

Fresh Care+

Mantiene i capi freschi e morbidi fino a **6 ore dopo la fine del ciclo**, grazie a delicati movimenti del cestello e vapore, ideale se non puoi scaricare subito il bucato.



Visual explanation of the FreshCare+ feature, showing how the machine maintains freshness after the cycle.

5. MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your washing machine.

5.1 Cleaning the Detergent Dispenser

Periodically remove and clean the detergent dispenser drawer to prevent residue buildup. Rinse it under running water and brush away any hardened detergent.

5.2 Cleaning the Filter

The filter should be cleaned regularly to prevent blockages. Refer to the diagram in your full manual for the exact location, usually at the bottom front of the machine. Place a shallow container underneath to catch any residual water.

5.3 Cleaning the Drum

Use the dedicated 'Drum Clean' program (Pulizia Cestello) with a suitable washing machine cleaner or a small amount of detergent to keep the drum hygienic and free from odors.



Close-up view of the stainless steel drum interior, highlighting its design.

5.4 Cleaning the Exterior

Wipe the exterior surfaces with a soft, damp cloth. Do not use abrasive cleaners or solvents.

5.5 Door Seal

Regularly inspect and clean the rubber door seal to remove any lint, dirt, or detergent residue. This helps prevent mold growth and leaks.

6. TROUBLESHOOTING

Before contacting customer service, try these solutions for common issues:

Problem	Possible Cause	Solution
Machine does not start	No power; Door not closed; Program not selected.	Check power supply; Ensure door is latched; Select a program and press Start.
Water not filling	Water tap closed; Inlet hose kinked; Water supply issue.	Open water tap; Straighten hose; Check household water supply.
Water not draining	Drain hose kinked; Filter blocked; Pump issue.	Straighten drain hose; Clean the filter; Contact service if pump is faulty.
Excessive vibration/noise	Machine not level; Transport bolts not removed; Overloaded drum.	Adjust leveling feet; Remove transport bolts; Reduce laundry load.
Error code on display	Specific malfunction.	Consult the full user manual for specific error code meanings and solutions. Try restarting the machine.

7. SPECIFICATIONS

Feature	Detail
Model Name	WAM 76WBC
Brand	Whirlpool
Capacity	7 Kilograms
Dimensions (HxWxD)	84.5 cm x 60 cm x 49.6 cm
Max Spin Speed	1400 rpm
Energy Class	A
Installation Type	Free-standing
Loading Type	Front-load
Control Type	Button, Rotary Knob
Material	Stainless Steel and Plastic
Color	White
Special Features	6th SENSE Technology, FreshCare+, Steam Refresh, HomeWhiz, AutoDose
Included Components	Power cable
Manufacturer Part Number	859991724180

8. WARRANTY AND SUPPORT

8.1 Warranty Information

This Whirlpool WAM 76WBC IT washing machine comes with **a2-year manufacturer's warranty**. Please retain your proof of purchase for warranty claims. The warranty covers manufacturing defects and malfunctions under normal use conditions.

8.2 Customer Support

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool customer service. Refer to the official Whirlpool website or your purchase documentation for the most up-to-date contact information in your region.

When contacting support, please have the following information ready:

- Model Name: WAM 76WBC
- Serial Number (found on the appliance rating plate)
- Date of Purchase
- A clear description of the issue

© 2026 Whirlpool Corporation. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FQV2HBGJ>

More documents and user manuals: <https://manuals.plus/>