

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [NBDDIGITAL](#) /
- › [NBD K100C 64MP 5K Digital Camera User Manual](#)

## NBDDIGITAL K100C

# NBD K100C 64MP 5K Digital Camera User Manual

Model: K100C

## 1. INTRODUCTION

---

This manual provides detailed instructions for the NBD K100C 64MP 5K Digital Camera. Please read this manual thoroughly before using the camera to ensure proper operation and to maximize its features. Keep this manual for future reference.

The NBD K100C is a versatile digital camera designed for high-quality photography and videography, featuring 64MP photo resolution, 5K video recording, autofocus, 18x digital zoom, and a 180° flip screen. It is suitable for various applications, including vlogging, travel, and everyday photography.

## 2. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- NBD K100C Digital Camera
- Rechargeable Batteries (x2)
- Battery Charger
- 64GB SD Card
- USB 2.0 Card Reader
- USB Cable
- Shoulder Strap
- User Manual (this document)

\*K110

# PERFECT GIFT SET



*Image: Contents of the NBD K100C Digital Camera package.*

### 3. CAMERA OVERVIEW

Familiarize yourself with the main components of your NBD K100C camera.

# 5K ULTRA HD

\*K110

\* Captured in  
Extreme Definition

VIDEO

● REC

00:07:03



Image: Front and rear view of the NBD K100C Digital Camera.

## Key Features:

- **64MP Photo Resolution:** Capture high-detail still images.
- **5K Video Recording:** Record ultra-clear videos.
- **Autofocus:** Automatically focuses on subjects for sharp images.
- **18x Digital Zoom:** Magnify distant subjects.
- **180° Flip Screen:** Ideal for self-portraits and vlogging.
- **Anti-Shake:** Reduces blur from camera movement.
- **Built-in Fill Light:** Improves clarity in low-light conditions.
- **Webcam Functionality:** Connect to a computer for live streaming.

## 4. SETUP

---

### 4.1. Charging the Battery

1. Insert the rechargeable battery into the provided battery charger.
2. Connect the charger to a power source using the USB cable.
3. The indicator light on the charger will show charging status. Charge until fully charged.

### 4.2. Installing the Battery and SD Card

1. Open the battery compartment cover on the bottom of the camera.
2. Insert the charged battery according to the polarity indicators.
3. Insert the 64GB SD card into the SD card slot until it clicks into place. Ensure the card is inserted correctly to avoid damage.
4. Close the battery compartment cover securely.

### 4.3. Attaching the Shoulder Strap

Thread the shoulder strap through the designated loops on the camera body to prevent accidental drops.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Powering On/Off

Press and hold the **Power Button** to turn the camera on or off.

### 5.2. Mode Selection

Rotate the **Mode Dial** on the top of the camera to select between different shooting modes such as Video, Photo, Continuous Shooting, Time-Lapse, and Slow Motion.

# MULTI-FUNCTIONAL

## & Beginner-Friendly for Effortless Photography



Image: Mode Dial and various shooting functions.

### 5.3. Taking Photos

1. Select **Photo Mode** using the Mode Dial.
2. Frame your shot using the 3-inch flip screen. You can rotate the screen 180° for self-portraits or vlogging.
3. Half-press the **Shutter Button** to activate autofocus. A green focus indicator will appear when the subject is in focus.
4. Fully press the Shutter Button to capture the photo.

\*K110

# 64MP AUTOFOCUS

## DIGITAL CAMERA

\* Shoot pro-level photos without manual complexity



00000/00354

64  
MP



## FAST AND PRECISE AUTOFOCUS

*Image: Demonstrating the camera's autofocus capability.*

### 5.4. Recording Videos

1. Select **Video Mode** using the Mode Dial.
2. Press the **Shutter Button** to start recording. A recording indicator will appear on the screen.
3. Press the Shutter Button again to stop recording.



Image: Camera in 5K video recording mode with 180° flip screen.

## 5.5. Using Digital Zoom

In Photo or Video mode, use the **Zoom Lever** (typically around the shutter button) to zoom in or out digitally up to 18x.

\*K110

# 18X DIGITAL ZOOM

F1.8

\* Clearly capture  
the moment  
of beauty  
F1.8



Image: Example of 18x digital zoom.

## 5.6. Webcam Mode

1. Connect the camera to your computer using the provided USB cable.
2. On the camera screen, select **PC Camera Mode** (or Webcam Mode) when prompted.
3. Your computer should recognize the camera as a webcam. You can then use it with video conferencing software or live streaming platforms.

\* K110

# WEBCAM MODE



USB Plug → PC Camera Mode → Start Interaction!



*Image: Camera connected and functioning as a webcam.*

## 5.7. Other Functions

- **Continuous Shooting:** Capture a rapid sequence of photos.
- **Slow Motion:** Record videos at a higher frame rate for slow-motion playback.
- **Time-Lapse:** Capture images at set intervals to create a time-lapse video.
- **Filter Mode:** Apply various creative filters to your photos.
- **Macro Mode:** For close-up photography of small subjects.
- **Timed Taking:** Set a timer for 3s, 5s, or 10s before taking a photo.

## 6. MAINTENANCE

## 6.1. Cleaning the Camera

- Use a soft, dry cloth to clean the camera body.
- For the lens, use a lens cleaning cloth and specialized lens cleaning solution. Avoid touching the lens surface with your fingers.
- Do not use organic solvents or strong chemicals to clean the camera.

## 6.2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- If the camera will not be used for an extended period, remove the battery.

## 6.3. Storage

Store the camera in a dry, dust-free environment, away from direct sunlight and extreme temperatures. Use a camera bag for protection during transport.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is dead or incorrectly inserted.	Charge the battery fully. Reinsert the battery correctly.
Images are blurry.	Autofocus failed, camera shake, or dirty lens.	Ensure autofocus locks on (green indicator). Hold camera steady or use a tripod. Clean the lens.
SD card error.	SD card is full, corrupted, or incorrectly inserted.	Delete unnecessary files or use a new SD card. Reinsert the card. Format the card (this will erase all data).
Camera freezes.	Temporary software glitch.	Remove and reinsert the battery to reset the camera.

## 8. SPECIFICATIONS

Feature	Detail
Brand	NBDDIGITAL
Model Name	K100C
Maximum Webcam Image Resolution	64 MP
Photo Sensor Size	1/3-inch
Photo Sensor Technology	CMOS
Image Stabilisation	Digital
Supported File Format	MP4 (for video)

Feature	Detail
Aspect Ratio	4:3
Form Factor	Compact
Item Weight	265 g (approx. 9.3 oz)
Package Dimensions	15.19 x 12.29 x 8.41 cm

## 9. WARRANTY AND SUPPORT

---

This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or warranty claims, please contact NBDDIGITAL customer service through the retailer where the product was purchased or visit the official NBDDIGITAL website for contact information.