

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [MERACH](#) /

› [MERACH Replacement Remote Control User Manual for Vibration Platforms \(Models CV30 pro, CV30, CV40, 2398, 2398slim, 2440\)](#)

MERACH 2398-XPJ048

MERACH Replacement Remote Control User Manual

Model: 2398-XPJ048

1. INTRODUCTION

This manual provides essential information for the proper setup, operation, and maintenance of your MERACH Replacement Remote Control. This remote is specifically designed for use with MERACH Vibration Platform Fitness Equipment models CV30 pro, CV30, CV40, 2398, 2398slim, and 2440. Please read these instructions thoroughly before use to ensure optimal performance and longevity of your device.

What's Included:

- 1 x MERACH Replacement Remote Control

2. PRODUCT OVERVIEW

The MERACH Replacement Remote Control features a simple, intuitive design for easy operation of your vibration platform. Familiarize yourself with the buttons and their functions.

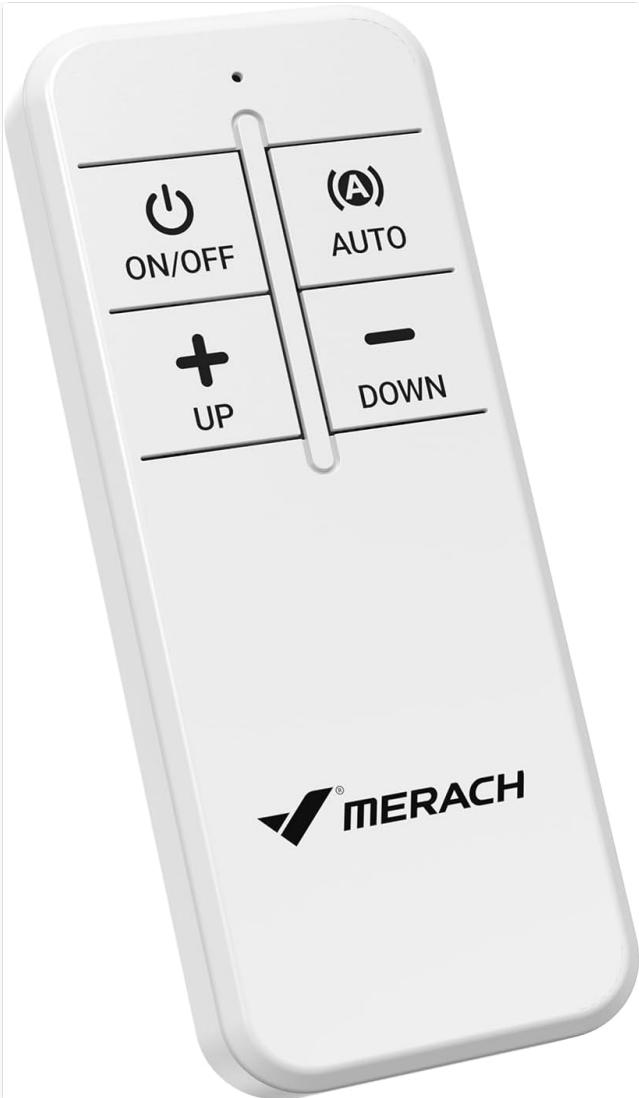


Image 1: Front view of the MERACH Replacement Remote Control, showing the ON/OFF, AUTO, UP, and DOWN buttons.

Button Functions:

- **ON/OFF:** Powers the vibration platform on or off.
- **AUTO:** Activates the automatic program mode on the vibration platform.
- **UP (+):** Increases the vibration intensity or time setting.
- **DOWN (-):** Decreases the vibration intensity or time setting.

3. SETUP AND PAIRING

Before using your new remote control, you may need to install batteries and pair it with your MERACH Vibration Platform.

3.1 Battery Installation

The remote control typically requires two AAA batteries (not included). To install:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover off in the direction indicated by the arrow.
3. Insert two AAA batteries, ensuring the correct polarity (+ and -) as marked inside the compartment.
4. Replace the battery compartment cover until it clicks securely into place.

3.2 Pairing Instructions

If your remote control does not immediately operate your vibration platform, it may need to be paired. The pairing process is designed to be straightforward:

1. Ensure your MERACH Vibration Platform is powered on and in standby mode.
2. Press and hold the **ON/OFF** button on the remote control for approximately 3-5 seconds.
3. Observe the indicator light on the remote (if present) or the display on your vibration platform. A successful pairing is usually indicated by a flash of light or a confirmation message on the platform's screen.
4. Release the button. Test the remote control by pressing other function buttons.

If pairing is unsuccessful, repeat the steps. Ensure there are no obstructions between the remote and the vibration platform during the pairing process.

4. OPERATING INSTRUCTIONS

Once paired, the remote control allows you to manage your MERACH Vibration Platform conveniently.

- **Power On/Off:** Press the **ON/OFF** button once to turn the vibration platform on or off.
- **Select Auto Mode:** Press the **AUTO** button to cycle through or activate the pre-programmed automatic workout modes on your platform. Refer to your vibration platform's manual for details on specific auto modes.
- **Adjust Intensity/Time:** Use the **UP (+)** button to increase the vibration intensity level or workout duration. Use the **DOWN (-)** button to decrease the vibration intensity level or workout duration.

5. MAINTENANCE

Proper care ensures the longevity and functionality of your remote control.

- **Cleaning:** Wipe the remote control with a soft, dry cloth. Do not use abrasive cleaners or immerse it in water.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Replacement:** If the remote's response becomes sluggish or the indicator light (if any) dims, replace the batteries. Remove batteries if the remote will not be used for an extended period to prevent leakage.

6. TROUBLESHOOTING

If you encounter issues with your remote control, refer to the following common solutions:

Problem	Possible Cause	Solution
Remote not responding	Dead or incorrectly installed batteries.	Replace batteries with new ones, ensuring correct polarity.
Remote not responding	Remote not paired with the vibration platform.	Follow the pairing instructions in Section 3.2.
Remote not responding	Obstruction between remote and platform sensor.	Ensure a clear line of sight between the remote and the vibration platform.
Limited range	Weak batteries or environmental interference.	Replace batteries. Reduce potential sources of interference (e.g., other electronic devices).

7. SPECIFICATIONS

- **Brand:** MERACH
- **Model Number:** 2398-XPJ048
- **Compatible Devices:** MERACH Vibration Platform (Models CV30 pro, CV30, CV40, 2398, 2398slim, 2440)
- **Power Source:** 2 x AAA Batteries (not included)
- **Special Feature:** Lightweight
- **Color:** White
- **Max Number of Supported Devices:** 1

8. COMPATIBLE MODELS

This MERACH Replacement Remote Control is compatible with the following MERACH Vibration Platform Fitness Equipment models:

- MERACH CV30 pro
- MERACH CV30
- MERACH CV40
- MERACH 2398
- MERACH 2398slim
- MERACH 2440



Image 2: Visual representation of compatible MERACH Vibration Platform models (CV30 pro, CV30, CV40) and the remote control.

9. SUPPORT

For further assistance, technical support, or warranty information, please visit the official MERACH website or contact MERACH customer service directly. Keep your product model number (2398-XPJ048) handy when seeking support.

You can find more information and support resources at the [MERACH Store on Amazon](#).

© 2025 MERACH. All rights reserved.