

Edvivi FFG7301BN

Edvivi 52-inch Ceiling Fan User Manual

Model: FFG7301BN | Brand: Edvivi

IMPORTANT SAFETY INSTRUCTIONS

Read all instructions carefully before beginning installation. Failure to follow these instructions may result in electric shock, fire, or personal injury.

- Ensure the power is turned off at the circuit breaker before installation or servicing.
- All wiring must be in accordance with national and local electrical codes. If you are unfamiliar with wiring, consult a qualified electrician.
- The ceiling fan must be mounted to a structurally sound ceiling joist or outlet box capable of supporting at least 35 lbs (15.9 kg).
- Do not operate the fan with damaged blades or housing.
- Keep hands, clothing, and other objects clear of the fan blades when the fan is in operation.
- This fan is designed for indoor use only.

PACKAGE CONTENTS

Carefully unpack your ceiling fan and inspect the contents to ensure all parts are present and undamaged. If any parts are missing or damaged, contact customer service.

- Motor Housing Assembly
- Fan Blades (5)
- Light Kit Assembly
- Glass Diffuser
- Pull Chains
- Downrod and Canopy
- Mounting Hardware Kit
- LED Bulbs (4 x 9W E26 base)
- Instruction Manual



Image: Edvivi 52-inch Ceiling Fan in Brushed Nickel. This image shows the complete fan assembly, including the motor housing, five blades, light kit with glass diffuser, and pull chains.

PRODUCT FEATURES

- **Traditional Design:** 52-inch ceiling fan with a classic bell lampshade, suitable for rooms 300 to 400 square feet.
- **Pull Chain Control:** Two pull chains for easy control of fan speed and light on/off function.
- **Dual Finish Blades:** Reversible blades with a gray weathered wood finish on one side and a beige finish on the other, allowing for customization to match various decors.
- **Reversible Motor:** High-quality motor improves air circulation. Operates clockwise for cooling in summer and counter-clockwise at low speeds for warm air distribution in winter.
- **Integrated LED Lighting:** Includes four 9W medium E26 base LED bulbs for a warm glow through the white diffuser.

2-COLOR IN ONE BLADE

Suitable for variety decoration styles

Side A: Beige



Side B: Gray Weathered



Image: Close-up view illustrating the dual-finish blades. One side is beige, and the other is gray weathered wood, offering versatile aesthetic options.

SETUP AND INSTALLATION

This section provides general guidelines for installing your Edvivi ceiling fan. Refer to the detailed diagrams and instructions in the included physical instruction manual for specific steps.

Pre-Installation Checklist:

- Ensure you have all necessary tools (screwdriver, wire strippers, ladder, etc.).
- Verify the mounting location can support the fan's weight.
- Turn off power at the main circuit breaker.

Installation Steps (Overview):

1. Secure the mounting bracket to the ceiling outlet box.

2. Assemble the downrod and canopy, then hang the motor assembly onto the mounting bracket.
3. Complete electrical wiring connections (ensure proper grounding).
4. Attach the fan blades to the motor housing. Choose your desired blade finish (beige or gray weathered wood).
5. Install the light kit assembly and glass diffuser.
6. Insert the included LED bulbs.
7. Attach the pull chains.
8. Restore power and test the fan and light functions.

CEILING FAN DIMENSIONS:

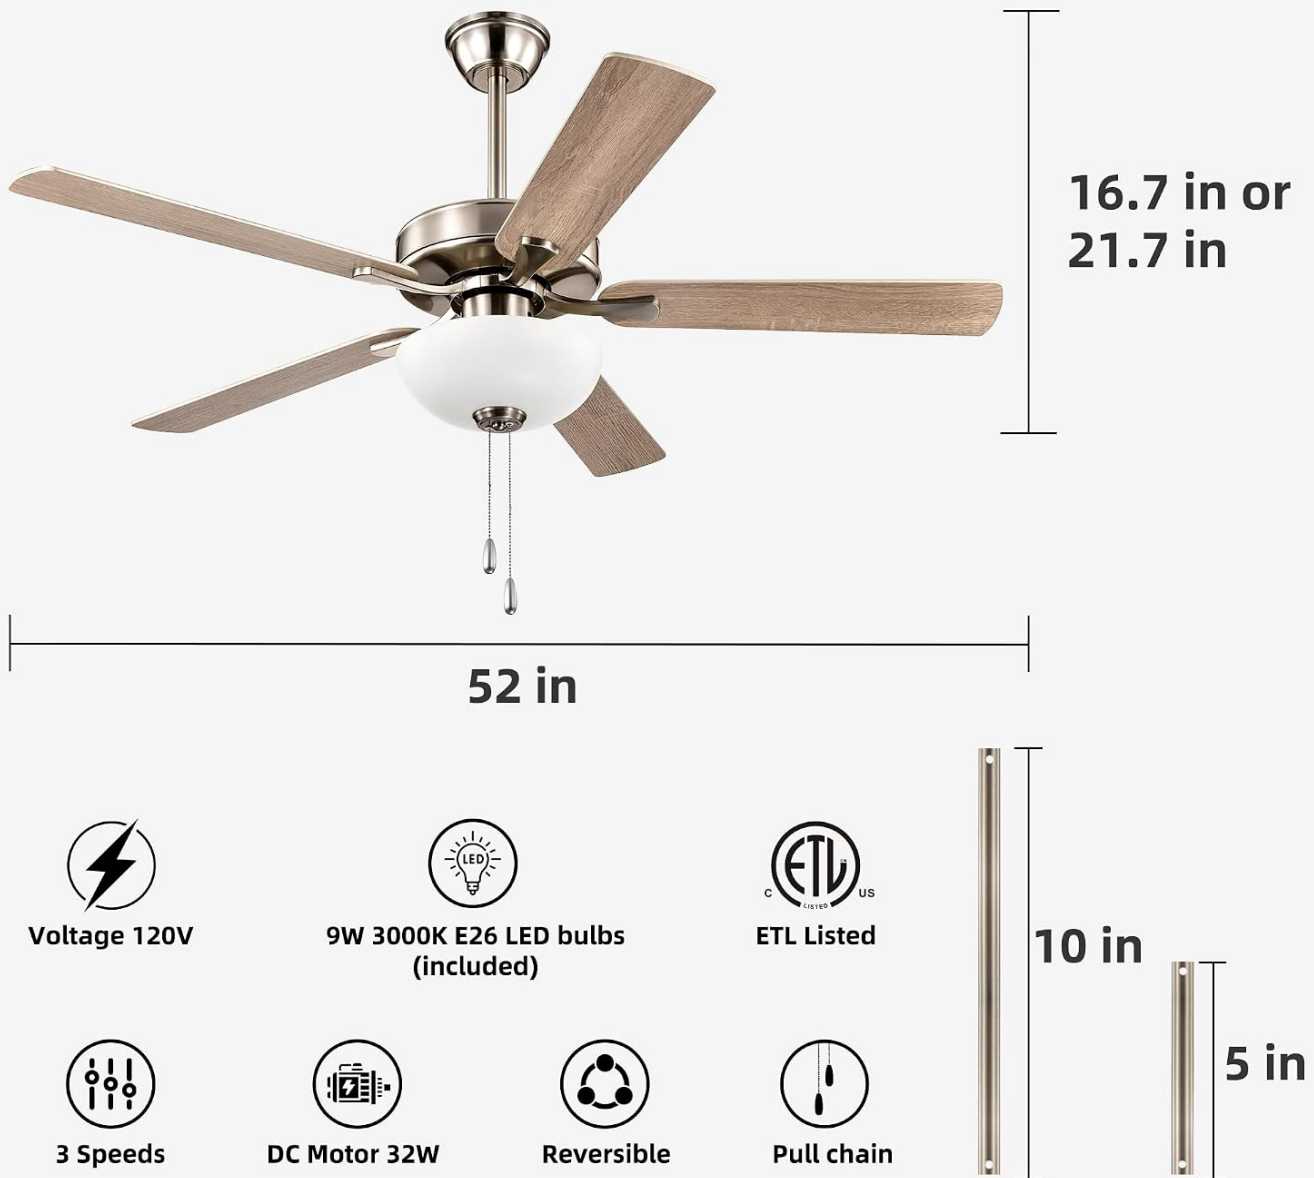


Image: Diagram showing the dimensions of the Edvivi 52-inch Ceiling Fan. The fan has a 52-inch blade span and can be installed with a total height of 16.7 inches or 21.7 inches depending on the downrod used.

OPERATING INSTRUCTIONS

Your Edvivi ceiling fan is controlled by two pull chains.

Fan Speed Control:

- Pull the fan chain repeatedly to cycle through fan speeds: High → Medium → Low → Off.

Light Control:

- Pull the light chain to turn the integrated LED light on or off.

Reversible Motor Function:

The fan features a reversible motor for year-round comfort. A switch on the motor housing controls the direction of blade rotation.

- **Summer Mode (Downward Airflow):** Set the switch to allow blades to rotate counter-clockwise, creating a downward breeze for cooling.
- **Winter Mode (Upward Airflow):** Set the switch to allow blades to rotate clockwise, circulating warm air trapped near the ceiling. Operate at low speed for best results.
- **Important:** Always turn off the fan and wait for the blades to stop completely before changing the direction switch.



Image: Detailed view of the fan's light kit, glass diffuser, and the two pull chains for controlling fan speed and light.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your ceiling fan.

Cleaning:

- Always turn off the power at the circuit breaker before cleaning.
- Use a soft, damp cloth to clean the fan's surfaces. Do not use abrasive cleaners or solvents.
- Periodically wipe dust from the blades and motor housing.

Bulb Replacement:

- Ensure power is off before replacing bulbs.
- Allow bulbs to cool before touching.
- Replace with 9W E26 base LED bulbs. Do not exceed the recommended wattage.

Blade Tightness:

- Check blade screws periodically to ensure they are tight. Loose blades can cause wobbling and noise.

TROUBLESHOOTING

If you experience issues with your ceiling fan, consult the following common problems and solutions.

Problem	Possible Cause	Solution
Fan does not start	No power to the fan; Loose wire connections; Motor issue	Check circuit breaker; Verify all wire connections are secure; Contact customer support if motor is faulty.
Light does not work	Bulb loose or burnt out; Loose wire connection; Light kit issue	Tighten or replace bulbs; Check light kit wiring; Contact customer support.
Fan wobbles	Loose blade screws; Unbalanced blades; Loose mounting bracket	Tighten all blade screws; Use a balancing kit (not included) to balance blades; Ensure mounting bracket is securely fastened.
Noisy operation	Loose screws; Motor hum; Blades hitting an obstruction	Check all screws for tightness; Ensure no wires are rubbing against the motor housing; Verify blades are clear of obstructions.

SPECIFICATIONS

Feature	Detail
Model Number	FFG7301BN
Brand	Edvivi
Color	Brushed Nickel
Electric Fan Design	Ceiling Fan
Power Source	Corded Electric
Style	Modern
Room Type	Bedroom, Dining Room, Home Office, Kitchen, Living Room
Special Feature	Adjustable Height, Dimmable (with compatible dimmer switch, not included)
Mounting Type	Ceiling Mount
Material	Metal, Wood
Wattage	9 watts (per bulb, 4 bulbs included)
Voltage	120 Volts
Switch Type	Pull Chain

Feature	Detail
Indoor Outdoor Usage	Indoor
Control Method	Pull Chain
Specification Met	ETL Listed
Item Weight	12 Pounds
Included Components	Instruction Manual, Mounting Hardware, LED Bulbs
UPC	812381038301

WARRANTY INFORMATION

This Edvivi ceiling fan is covered by a **5-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims.

The warranty does not cover damage resulting from improper installation, misuse, abuse, accident, or unauthorized repairs. For specific warranty terms and conditions, please refer to the documentation included with your product or contact Edvivi customer support.

CUSTOMER SUPPORT

If you have any questions, require assistance with installation, or encounter any problems with your Edvivi ceiling fan, please do not hesitate to contact our customer service team.

For the most up-to-date contact information, please visit the official Edvivi website or refer to the contact details provided in your product packaging.

When contacting support, please have your model number (FFG7301BN) and proof of purchase readily available.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question