

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [OHAYO](#) /

> [OHAYO X10 Max Bluetooth Speaker Instruction Manual](#)

OHAYO X10 Max

OHAYO X10 Max Bluetooth Speaker Instruction Manual

Welcome to your new OHAYO X10 Max Portable Bluetooth Speaker.

1. IMPORTANT SAFETY INFORMATION

- Do not expose the speaker to extreme temperatures or direct sunlight for prolonged periods.
- Keep the speaker away from heat sources, sharp objects, and corrosive materials.
- Do not disassemble, repair, or modify the speaker yourself. Contact qualified service personnel if needed.
- Ensure the charging port cover is securely closed when using the speaker near water to maintain its IPX7 waterproof rating.
- Use only the provided charging cable or a certified USB-C cable for charging.

2. PACKAGE CONTENTS

- 1 x OHAYO X10 Max Bluetooth Speaker (White)
- 1 x USB-C Charging Cable (charging plug not contained)
- 1 x 3.5mm AUX Cable
- 1 x User Manual
- 1 x Lanyard

3. PRODUCT OVERVIEW

The OHAYO X10 Max is a versatile portable Bluetooth speaker designed for high-quality audio and durability. It features a powerful 25W sound output with active bass, IPX7 waterproofing, and a long-lasting 24-hour battery. Enjoy dynamic sound with colorful RGB lighting effects, dual pairing for stereo sound, and multiple input modes.

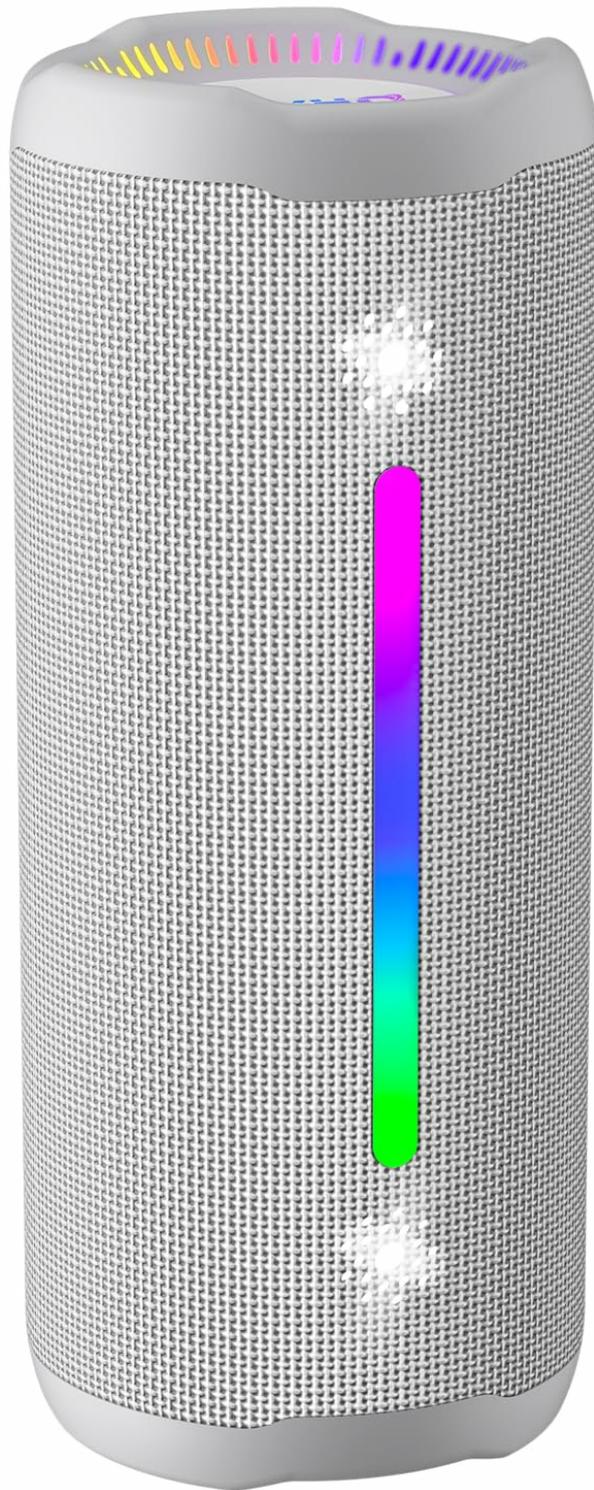


Figure 3.1: OHAYO X10 Max Bluetooth Speaker (White)



X10 MAX

BLUETOOTH SPEAKER

FULLY UPGRADED SPEAKERS,
FROM APPEARANCE TO PERFORMANCE.

Figure 3.2: OHAYO X10 Max Bluetooth Speaker - Fully upgraded from appearance to performance.

Independent Bass Channel

The independent channel design of 15W bass + 10W silk membrane tweeter makes music richer and more three-dimensional, experience a whole new level of sound quality.

15W + **10W**
Bass

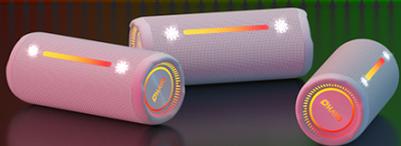


Figure 3.3: 25W Deep Bass Sound - Independent channel design for accurate audio performance.

6 Unique Dazzling Coloured Lights

With the popping flash design, synced to the music beats, immerse you in a vibrant music ambiance.

Upgraded spun cloth enclosure and tilted center of gravity design ensure optimal sound position regardless of how you place the speaker, while also reducing speaker roll.



Note: Lights can be switched off

Figure 3.4: 6 Dazzling RGB Light Effects - Syncs with music for an immersive experience.



IPX7 Waterproof

OHAYO speakers are IPX7-rated waterproof, so you can enjoy your music without worry, whether you're on the beach, by the pool or at a rainy outdoor party.

Figure 3.5: IPX7 Waterproof - Highly sealed design for use in various environments.



Figure 3.6: 24H Ultra-Long Battery Life - 6600mAh battery for extended playback.

4. CONTROLS AND INDICATORS

The OHAYO X10 Max features intuitive controls for easy operation.

25W DEEP BASS SOUND

Independent channel design provides more accurate audio performance, enhances your listening experience.



15W
Bass

+

10W
Silk Diaphragm Tweeter

Figure 4.1: Control Panel and Ports

- **Power Button:** Press and hold to power on/off. Short press to switch between input modes (Bluetooth, AUX, TF Card, USB-Audio).
- **Volume Up (>):** Short press to increase volume. Long press for next track.
- **Volume Down (<):** Short press to decrease volume. Long press for previous track.
- **Bass Button:** Press to activate/deactivate Bass Boost mode.
- **Play/Pause/Call Button:** Short press to play/pause music. Short press to answer/end calls. Long press to reject calls. Double press to activate voice assistant.

- **Battery Indicator Lights:** Four LED lights indicate battery level.
- **RGB Light Strip:** Displays various colorful lighting effects.
- **Charging Port (USB-C):** For charging the speaker.
- **AUX-in Port:** For wired audio connection.
- **TF Card Slot:** For playing music directly from a MicroSD card.

5. SETUP

5.1 Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's charging port and the other end to a 5V/2A USB power adapter (not included). The battery indicator lights will blink during charging and remain steady when fully charged.

5.2 Powering On/Off

Press and hold the Power button for approximately 3 seconds to turn the speaker on or off. A voice prompt will confirm the action.

5.3 Bluetooth Pairing

1. Turn on the speaker. It will automatically enter Bluetooth pairing mode, indicated by a blinking blue LED.
2. Enable Bluetooth on your device (smartphone, tablet, etc.).
3. Search for "X10 Max" in your device's Bluetooth list and select it to connect.
4. Once connected, a voice prompt will confirm successful pairing.

5.4 True Wireless Stereo (TWS) Pairing

To achieve a true wireless stereo experience, you can pair two OHAYO X10 Max speakers together.

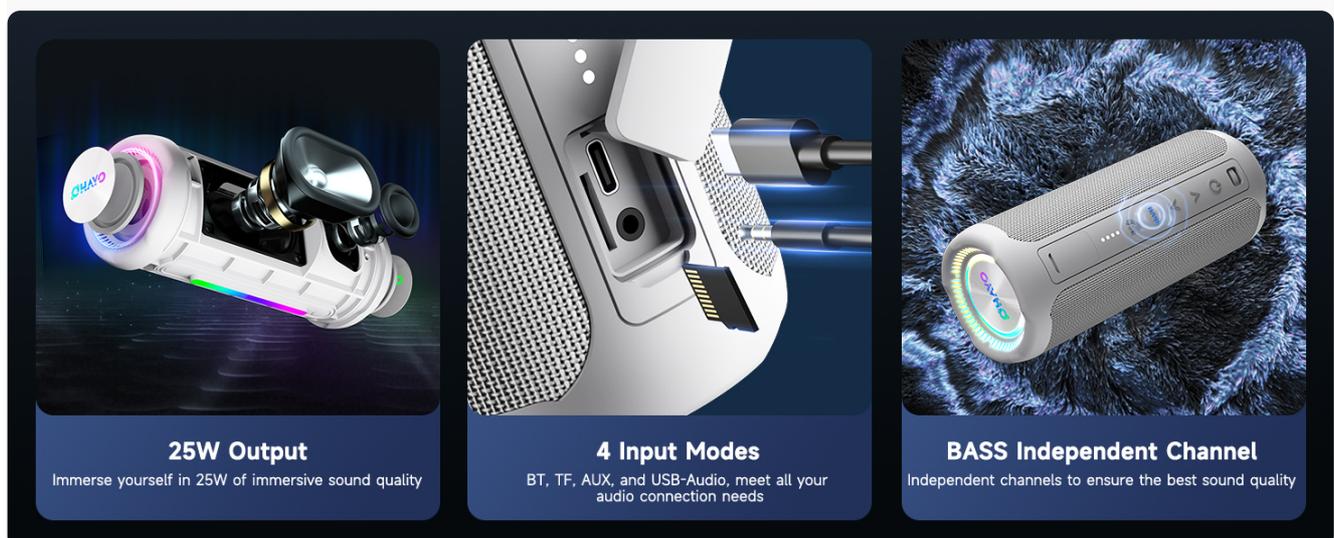


Figure 5.1: True Wireless Stereo Pairing

1. Ensure both X10 Max speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), double-press the Power button. It will enter TWS pairing mode.
3. The two speakers will automatically connect to each other. A voice prompt will confirm successful TWS pairing.
4. Now, connect your device to the primary speaker via Bluetooth as described in section 5.3.

5.5 Connecting via AUX

Use the provided 3.5mm AUX cable to connect the speaker to devices without Bluetooth capability.

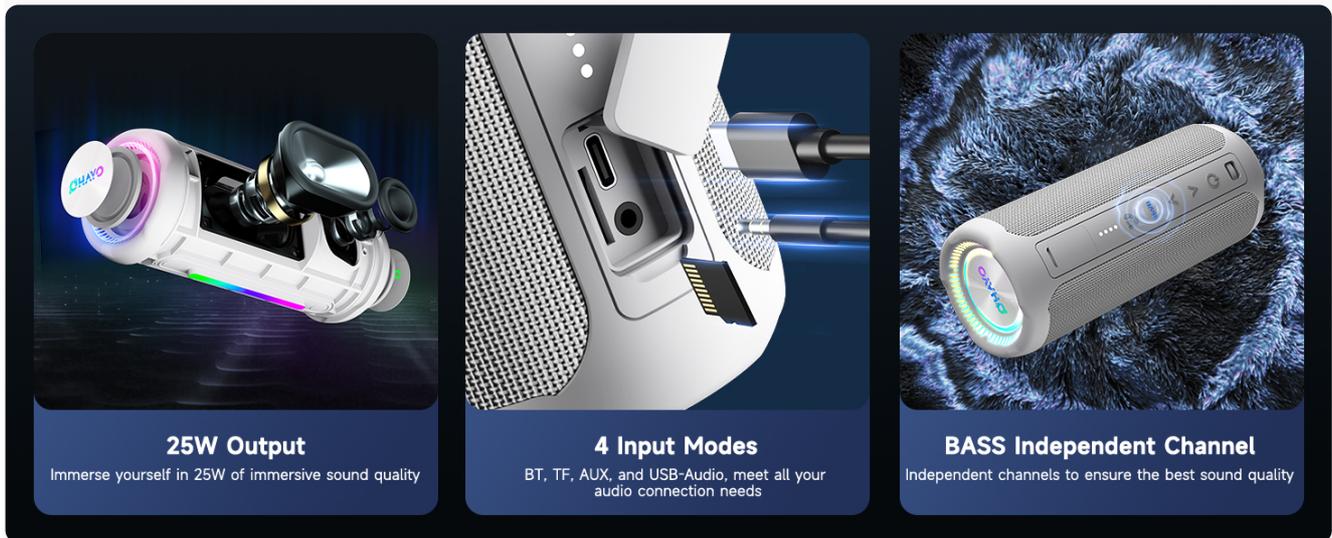


Figure 5.2: 4 Input Modes - Including AUX, TF, and USB-Audio.

1. Connect one end of the AUX cable to the speaker's AUX-in port.
2. Connect the other end to the audio output of your device.
3. The speaker will automatically switch to AUX mode. If not, short press the Power button to cycle through modes until AUX mode is activated.

5.6 Using TF Card

Insert a MicroSD (TF) card with MP3/WAV/FLAC/WMA audio files into the TF card slot. The speaker will automatically switch to TF card mode and begin playback. Short press the Power button to cycle through modes if needed.

5.7 Using USB-Audio

Connect the speaker to a computer using the USB-C cable. The speaker can function as an external audio output device for your computer. Short press the Power button to cycle through modes if needed.

6. OPERATING INSTRUCTIONS

6.1 Playing Music

- **Play/Pause:** Short press the Play/Pause/Call button.
- **Volume Control:** Short press the Volume Up (>) or Volume Down (<) buttons.
- **Next Track:** Long press the Volume Up (>) button.
- **Previous Track:** Long press the Volume Down (<) button.

6.2 Bass Boost Function

Press the 'BASS' button to activate or deactivate the enhanced bass mode. This feature provides deeper and richer low frequencies for a more impactful audio experience.

6.3 RGB Light Modes

The speaker features dynamic RGB lighting. The lights will automatically sync with the music beat. To turn the lights on/off, refer to the specific control instructions in your quick start guide or experiment with the mode button if available.

6.4 Hands-Free Calling

When connected via Bluetooth to your smartphone, the speaker can be used for hands-free calls.

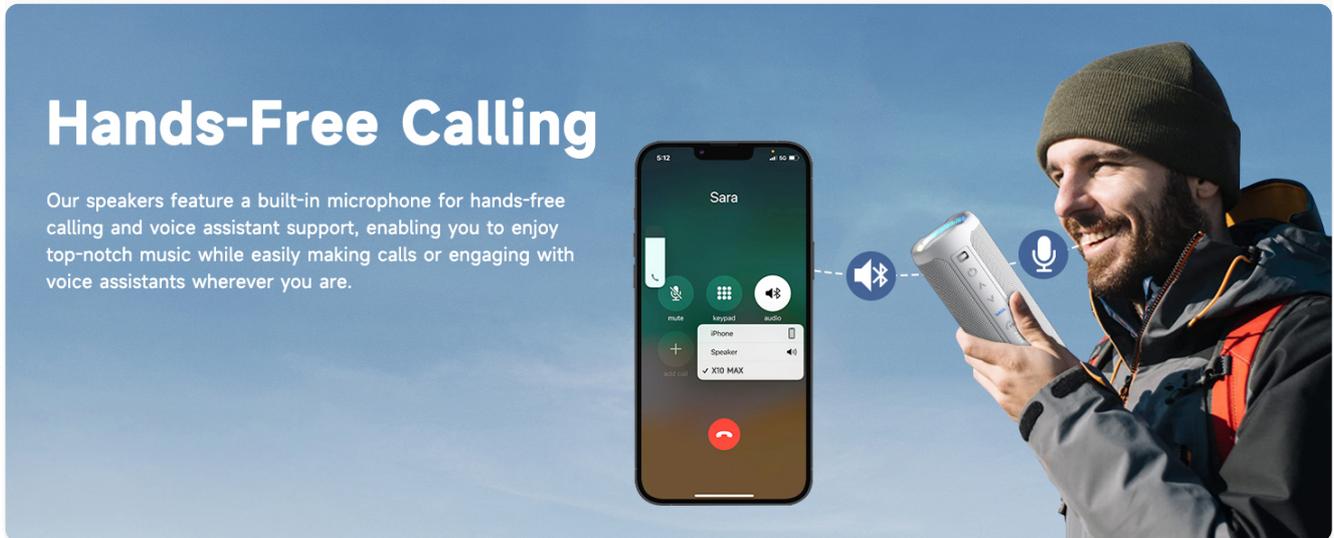


Figure 6.1: Hands-Free Calling Feature

- **Answer/End Call:** Short press the Play/Pause/Call button.
- **Reject Call:** Long press the Play/Pause/Call button.
- **Activate Voice Assistant:** Double press the Play/Pause/Call button.

7. MAINTENANCE

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.
- **Battery Care:** To prolong battery life, charge the speaker at least once every three months if not used regularly.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is in pairing mode (blinking blue LED). Turn on device Bluetooth. Move device closer to speaker (within 10 meters).

Problem	Possible Cause	Solution
No sound or low volume.	Volume too low on speaker or device; incorrect input mode.	Increase volume on both speaker and device. Check if the correct input mode (Bluetooth, AUX, TF) is selected.
TWS pairing failed.	Speakers too far apart; one speaker already connected to another device.	Ensure speakers are close to each other. Disconnect any existing Bluetooth connections before TWS pairing.
Sound distortion.	Volume too high; low battery.	Reduce volume. Charge the speaker.

9. SPECIFICATIONS

Feature	Specification
Model Name	X10 Max
Bluetooth Version	5.3
Wireless Communication Technology	Bluetooth
Speaker Maximum Output Power	35 Watts (25W effective)
Battery Capacity	6600 mAh
Playtime	Up to 24 hours (varies with volume and light use)
Water Resistance Level	IPX7 (Waterproof)
Input Voltage	5 Volts (DC)
Frequency Response	20 KHz
Signal-to-Noise Ratio	80 dB
Audio Driver Type	Dynamic Driver
Woofer Diameter	75 Millimeters
Tweeter Diameter	26 Millimeters
Product Dimensions	2.95"D x 2.95"W x 7.28"H

Feature	Specification
Item Weight	450 Grams (15.9 ounces)
Material	Acrylonitrile Butadiene Styrene (ABS), Aluminum
Control Method	Push Button
Special Features	Bass Boost, AUX, Hi-Res Audio, 24-Hour Playtime, IPX7 Waterproof, TF Card Port, Dual Passive Radiators, Hands-free, True Wireless Stereo Pairing, Shockproof

10. WARRANTY AND SUPPORT

The OHAYO X10 Max Bluetooth Speaker comes with an extended warranty. For specific warranty details and to register your product, please refer to the information provided in your quick start guide or contact OHAYO customer support.

For technical support or customer service inquiries, please contact OHAYO Direct. Contact information may be found in your product packaging or on the official OHAYO website.

11. OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video 11.1: Official OHAYO Portable Bluetooth Speaker overview by OHAYO Direct. This video highlights key features and design elements of the speaker.