

[Manuals.plus](#) /

› [Linyuvo](#) /

› Linyuvo KS42 Joystick for Nintendo Switch User Manual

Linyuvo KS42

Linyuvo KS42 Joystick for Nintendo Switch User Manual

INTRODUCTION

The Linyuvo KS42 Joystick is designed to enhance your gaming experience on the Nintendo Switch. This high-quality wireless controller offers precise and responsive control, an ergonomic design for comfortable extended play, and full compatibility with all Nintendo Switch titles. This manual provides essential information for setting up, operating, and maintaining your controller to ensure optimal performance.



Image: Front view of the Linyuvo KS42 Joystick, highlighting its button layout and dual analog sticks.

PRODUCT FEATURES

- **Compatibility:** Specifically designed for Nintendo Switch, offering precise and responsive control during gameplay.
- **Ergonomic Design:** Features an intuitive button layout and comfortable grip for extended gaming sessions without fatigue.
- **Wireless Connectivity:** Provides freedom of movement, allowing gameplay from various positions without being tethered.
- **Precise Controls:** Equipped with responsive buttons and sensitive analog sticks for a more accurate and immersive gaming experience.
- **Full Functionality:** Includes all necessary buttons for Nintendo Switch games, ensuring complete compatibility with all titles.

SETUP

1. Initial Charge

Before first use, fully charge the Linyuvo KS42 controller. Connect the provided USB charging cable to the controller's charging port and then to a compatible USB power source (e.g., Nintendo Switch dock, USB wall adapter, or computer USB port). The charging indicator lights on the controller will show its charging status and turn off when fully charged.

2. Pairing with Nintendo Switch

1. On your Nintendo Switch HOME Menu, select **Controllers** > **Change Grip/Order**.
2. While on the 'Change Grip/Order' screen, press and hold the **SYNC** button located on the top or back of the Linyuvo KS42 controller for a few seconds.
3. The player indicator lights on the controller will begin to flash. Once successfully paired, the player indicator light(s) corresponding to the assigned player number will remain steadily lit.
4. The controller is now ready for use. Press the **HOME** button to return to the HOME Menu.



Image: Angled view of the Linyuvo KS42 Joystick, illustrating its ergonomic design and button placement.

OPERATING INSTRUCTIONS

Power On/Off

- To turn on the controller, press any button (e.g., HOME button).
- To turn off the controller, press and hold the **HOME** button for approximately 3 seconds. The controller will also automatically power off after a period of inactivity to conserve battery.

Reconnecting

If the controller disconnects or you wish to reconnect it to a previously paired Nintendo Switch console, simply press the **HOME** button. Ensure the Nintendo Switch console is awake and within wireless range.

Button Layout and Functions

The Linyuvo KS42 Joystick features a standard Nintendo Switch controller button mapping. This includes:

- **A/B/X/Y Buttons:** Standard action buttons.
- **D-pad:** Directional input.
- **Left/Right Analog Sticks:** For movement and camera control.
- **L/R/ZL/ZR Shoulder Buttons:** For various in-game actions.
- **HOME Button:** Returns to the Nintendo Switch HOME Menu.
- **SYNC Button:** Used for pairing the controller.
- **+ (Plus) / - (Minus) Buttons:** Equivalent to Start/Select in many games.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to gently wipe the surface of the controller. Avoid using liquid cleaners, abrasive materials, or chemical solvents, as these can damage the finish or internal components.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity. Protect it from dust and physical impact when not in use.
- **Battery Care:** To prolong the lifespan of the internal battery, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use, to maintain battery health. Do not attempt to replace the internal battery yourself.



Image: Back view of the Linyuvo KS42 Joystick, showing the ergonomic textured grips.

TROUBLESHOOTING

- **Controller Not Connecting:**

- Ensure the controller is sufficiently charged.
- Verify that your Nintendo Switch console's system software is updated to the latest version.
- Attempt to re-pair the controller by following the 'Pairing with Nintendo Switch' steps in the Setup section.
- Move closer to the Nintendo Switch console to rule out wireless range issues.

- **Buttons Not Responding:**

- Check if the controller is properly connected and powered on.
- Restart both the Nintendo Switch console and the Linyuvo KS42 controller.
- Ensure no physical obstructions are preventing button presses.

- **Charging Issues:**

- Ensure the USB charging cable is securely connected to both the controller and the power source.
- Try using a different USB charging cable or a different USB power adapter to rule out faulty

accessories.

SPECIFICATIONS

Model	KS42
Connectivity	Wireless
Compatibility	Nintendo Switch
Dimensions (L x W x H)	15.2 cm x 14.5 cm x 15 cm
Weight	180 g

WARRANTY AND SUPPORT

For detailed warranty information, product support, or service inquiries regarding your Linyuvo KS42 Joystick, please refer to the retailer or manufacturer's official website where the product was purchased. It is recommended to retain your proof of purchase for any warranty claims or technical assistance.