

[Manuals.plus](#) /

> [MUSM](#) /

> MUSM LCD TV Power Board TP.MS3393.P86/PB801 Series Instruction Manual

MUSM TP.MS3393.P86/PB801, PB851/P86, PB751, PB855, P85

MUSM LCD TV Power Board TP.MS3393.P86/PB801 Series Instruction Manual

Models Covered: TP.MS3393.P86, PB801, PB851/P86, PB751, PB855, P85, TVS-430, LT-32KC35

Brand: MUSM

1. INTRODUCTION

This manual provides essential information for the installation, operation, maintenance, and troubleshooting of the MUSM LCD TV Power Board. This board is designed for various LCD TV models, including those utilizing the TP.MS3393.P86/PB801, PB851/P86, PB751, PB855, P85 series, and compatible with TV models such as TVS-430 and LT-32KC35. Please read this manual thoroughly before attempting any installation or repair to ensure safe and correct usage.

The MUSM power board ensures stable power supply and efficient power management, contributing to the reliable operation and extended lifespan of your television.

2. PRODUCT FEATURES

- **Stable Power Supply:** Equipped with a stable power supply and efficient power management circuit, ensuring consistent and suitable voltage and current to all TV components.
- **Enhanced TV Operation:** Guarantees stable operation of the TV across various usage scenarios.
- **Extended Equipment Lifespan:** Contributes to prolonging the service life of the television.
- **Strong Video Processing Capability:** The integrated display motherboard offers robust video processing for clear images.
- **Anti-Interference Design:** Features strong anti-interference ability to maintain signal integrity.
- **Durability:** Designed for long service life, reducing the need for frequent replacements.
- **User-Friendly Installation:** Engineered for straightforward installation and debugging, suitable for both professionals and experienced DIY users.

3. SAFETY INFORMATION

WARNING: Electrical components can be dangerous. Improper installation or handling may result in electric shock, fire, or damage to the television and personal injury. Always follow these safety guidelines:

- **Disconnect Power:** Always unplug the television from the main power outlet before attempting any installation, removal, or maintenance.
- **Professional Installation Recommended:** Installation of this power board should ideally be performed by a qualified technician.
- **Static Electricity:** Wear an anti-static wrist strap or frequently touch a grounded metal object to discharge static electricity before handling the board. Static discharge can damage sensitive electronic components.
- **Handle with Care:** Avoid touching the components on the board directly. Hold the board by its edges.
- **Inspect for Damage:** Before installation, visually inspect the board for any signs of physical damage. Do not install a damaged board.
- **Ventilation:** Ensure the TV's ventilation openings are not blocked after installation to prevent overheating.

4. PACKAGE CONTENTS

Verify that all items are present and undamaged upon opening the package.

- 1x MUSM LCD TV Power Board (Model: TP.MS3393.P86/PB801 series)
- (No additional accessories are typically included with this component)

5. SETUP AND INSTALLATION

This section outlines the general steps for replacing a TV power board. Specific procedures may vary depending on your TV model. Refer to your TV's service manual for detailed instructions.

1. Preparation:

- Ensure the TV is completely unplugged from the power outlet.
- Place the TV face down on a soft, clean surface to protect the screen.
- Gather necessary tools: screwdrivers, anti-static wrist strap, plastic prying tools (if needed).

2. Access the Power Board:

- Remove the back cover of the TV. This usually involves unscrewing multiple screws around the perimeter and sometimes in the center.
- Carefully detach any cables or connectors that might be attached to the back cover.

3. Locate and Remove Old Board:

- Identify the existing power board. It is typically a large circuit board with power input connectors and various output connectors for other TV components.
- Take photos of all cable connections before disconnecting them. This will aid in reassembly.
- Carefully disconnect all cables connected to the old power board (e.g., AC input, mainboard connection, backlight inverter connection).
- Unscrew the mounting screws holding the old power board in place and gently lift it out.

4. Install New Power Board:

- Align the new MUSM power board with the mounting holes in the TV chassis.
- Secure the board with the appropriate screws. Do not overtighten.
- Reconnect all cables to their correct ports on the new board, referring to your photos if necessary.

Ensure all connections are firm and secure.

5. Reassembly and Testing:

- Before fully reassembling the TV, temporarily plug in the power cord and test the TV's functionality. Check for power-on, display, and basic operations.
- If the TV functions correctly, unplug it again and carefully reattach the back cover, securing all screws.
- Perform a final test after full reassembly.

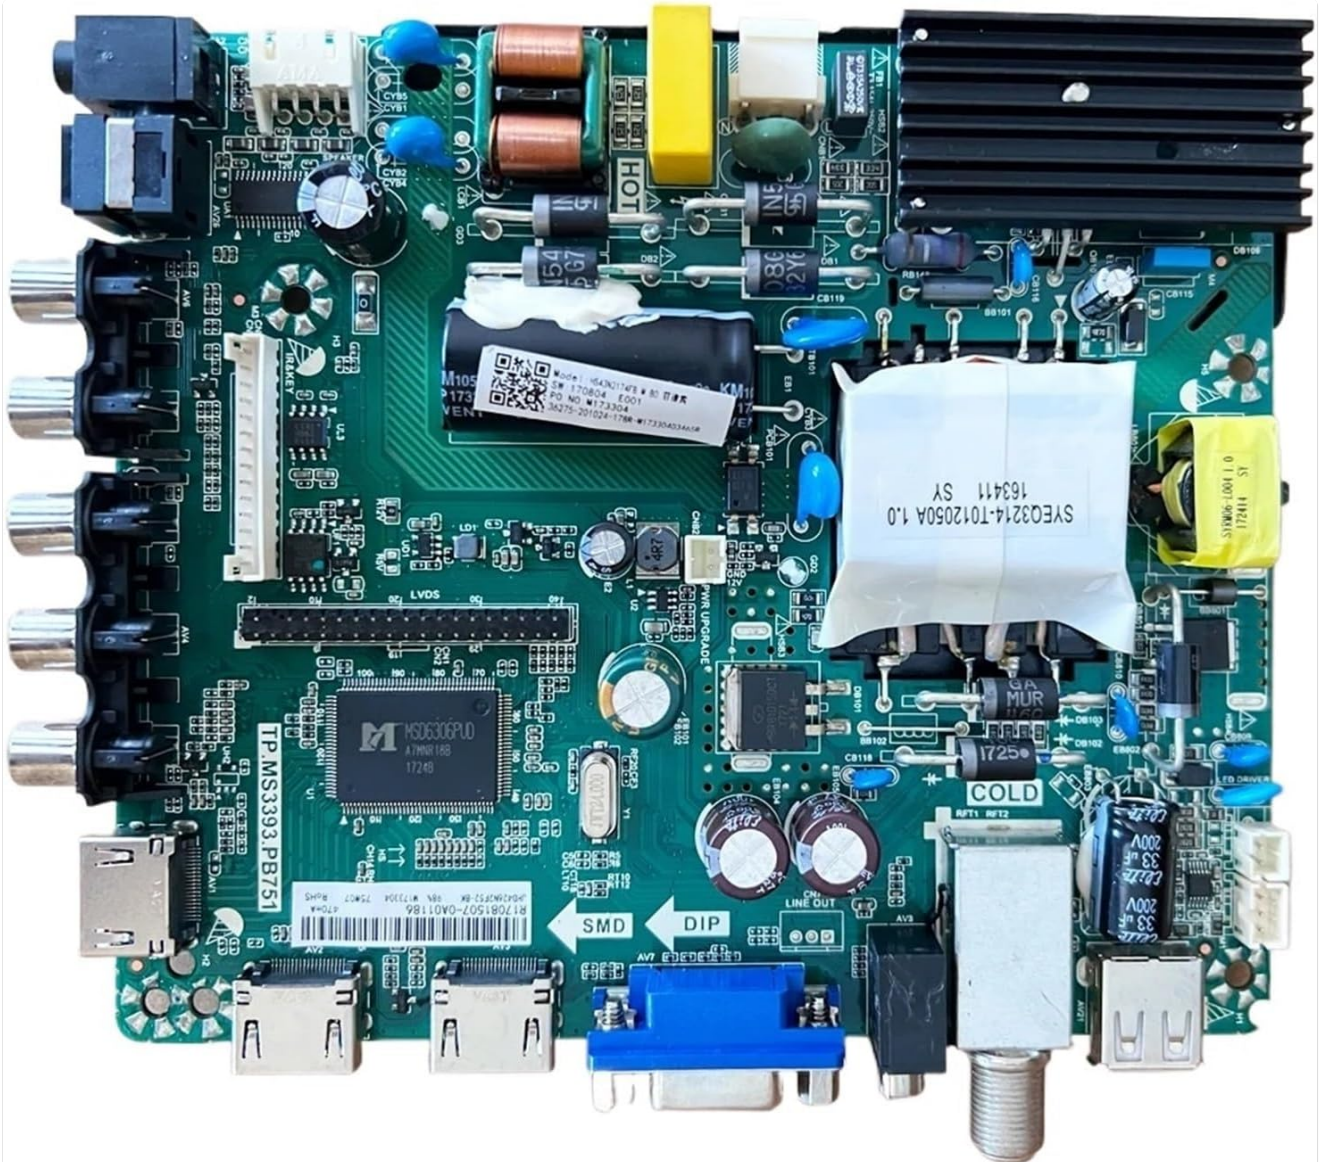


Figure 1: Overview of the MUSM LCD TV Power Board. This image displays the various components and connection points on the circuit board, including power input, video processing unit, and output connectors.

6. OPERATION

Once correctly installed, the MUSM LCD TV Power Board operates automatically as an integral part of your television's power management system. No user intervention is required for its normal function.

- Ensure the TV is connected to a stable power source.
- The board will manage power distribution to all internal components, including the display and mainboard.
- Proper ventilation of the TV is crucial for the longevity of the power board and other components.

7. MAINTENANCE

The MUSM LCD TV Power Board is designed for long-term reliability and generally requires no routine maintenance. However, adhering to general TV maintenance practices can help ensure its longevity:

- **Keep Clean:** Periodically clean the exterior of your TV to prevent dust buildup, which can impede ventilation.
- **Avoid Moisture:** Keep the TV and its internal components away from liquids and excessive humidity.
- **Proper Ventilation:** Ensure the TV's vents are clear and not obstructed by objects or walls.
- **Stable Power:** Connect the TV to a surge protector to guard against power fluctuations.

8. TROUBLESHOOTING

If you experience issues after installing the new power board, consider the following troubleshooting steps:

Problem	Possible Cause	Solution
TV does not power on.	Loose power cable connection.	Ensure power cable is securely plugged into TV and wall outlet.
	Incorrect internal cable connections.	Recheck all internal cable connections on the power board.
	Faulty power outlet or surge protector.	Test the power outlet with another device. Bypass surge protector if used.
	New board is incompatible or faulty.	Verify board compatibility with your TV model. If possible, test with a known working board.
Intermittent power or flickering screen.	Unstable power supply.	Ensure stable power source; use a UPS or voltage regulator if power fluctuations are common.
	Loose internal connections.	Check all internal cable connections for looseness.
	Overheating.	Ensure adequate ventilation for the TV.
No picture, but sound is present.	Backlight issue (often related to power board).	Inspect backlight connections from the power board.
	Connection to mainboard or inverter board.	Ensure the mainboard and inverter board connections are secure. This may indicate a fault beyond the power board itself, such as the backlight strips or mainboard.

If these steps do not resolve the issue, it is recommended to consult a professional TV repair technician.

9. SPECIFICATIONS

Feature	Detail
Brand	MUSM
Model Series	TP.MS3393.P86/PB801, PB851/P86, PB751, PB855, P85
Compatible TV Models	TVS-430, LT-32KC35 (and others using the specified board series)

Feature	Detail
Type	LCD TV Power Board / Motherboard
Item Weight	50 g
Dimensions (Approx.)	1 x 1 x 1 cm (Note: This dimension seems generic and may not reflect actual board size. Refer to product images for visual scale.)
Origin	Mainland China

10. WARRANTY AND SUPPORT

For warranty information and technical support regarding your MUSM LCD TV Power Board, please refer to the purchase documentation or contact your seller directly. Specific warranty terms and support procedures are typically provided at the point of purchase.

It is recommended to retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FR1JXD4D>

More documents and user manuals: <https://manuals.plus/>