

VBUOO TV105S

VBUOO Cordless Vacuum Cleaner TV105S User Manual

Model: TV105S | Brand: VBUOO

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Keep this user manual for future reference.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce air flow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not use without dust bag and/or filters in place.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.
- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- Use appliances only with specifically designated battery packs. Use of any other battery packs may create a risk of injury and fire.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or

other small metal objects, that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or a fire.

- Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C (265°F) may cause explosion.
- Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the product is maintained.
- Do not modify or attempt to repair the appliance or battery pack (as applicable) except as indicated in the instructions for use and care.

PRODUCT OVERVIEW

The VBUOO Cordless Vacuum Cleaner (Model TV105S) is designed for efficient and versatile cleaning across various surfaces. It features a powerful brushless motor, a long-lasting battery, and smart controls for an optimized cleaning experience.

Key Features:

- **600W Brushless Motor & 50KPa Suction:** Provides strong suction for deep cleaning.
- **70 Minutes Max Runtime:** High-capacity lithium-ion battery for extended cleaning sessions.
- **LED Smart Touch Screen:** Displays battery life, suction mode, and maintenance alerts.
- **Anti-Tangle Floor Brush:** V-shaped design with LED lights to prevent hair tangles and illuminate dark areas.
- **Self-standing Design:** Allows the vacuum to stand upright independently.
- **6-Stage HEPA Pro System:** Fully sealed filtration system captures 99.99% of fine dust.
- **Multi-Functional Attachments:** Includes 2-in-1 crevice brush, flat head brush, and adjustable telescopic tube for versatile cleaning.

PACKAGE CONTENTS

Please check the package contents upon unboxing:

- 600W Powerful Motor (Main Unit) x1
- 1.8L Dust Cup x1
- Rechargeable Storage Mount x1
- HEPA Filter Replacement x1
- Floor Brush x1
- 2-in-1 Crevice Brush x1
- Flat Head Brush x1

- Adjustable Telescopic Tube x1
- Clean Hook x1
- Charging Adapter x1
- User Manual x1

SETUP AND ASSEMBLY

Follow these steps to assemble your VBUOO Cordless Vacuum Cleaner:

1. **Attach the Main Unit to the Extension Tube:** Align the main unit (with the dust cup) with the top end of the adjustable telescopic tube and push until it clicks securely into place.



Image: A person attaching the main vacuum unit to the telescopic extension tube.

2. **Attach the Floor Brush:** Connect the floor brush to the bottom end of the extension tube. Ensure it clicks firmly.



Image: A person attaching the motorized floor brush to the telescopic extension tube.

3. **Install the Battery Pack:** Slide the battery pack into the designated slot on the main unit's handle until it locks.



Running Time

65-70
Mins Min Mode

40-45
Mins Mid Mode

20-25
Mins Max Mode

8 X 2600mAh
Battery Capacity

5.5
Charging Time

Only Use Original Adapter Marked "Vacuum TV105S"
Non-OEM Adapter May Cause Damage

8*2600mAh Detachable Battery Pack
Convenient separate battery — recharge anywhere, anytime

Image: Close-up of the detachable battery pack being inserted into the vacuum's main body, showing battery capacity and charging time details.

4. **Wall Mount Installation (Optional):** Use the provided hardware to securely mount the rechargeable storage dock to a wall. This allows for convenient storage and charging.

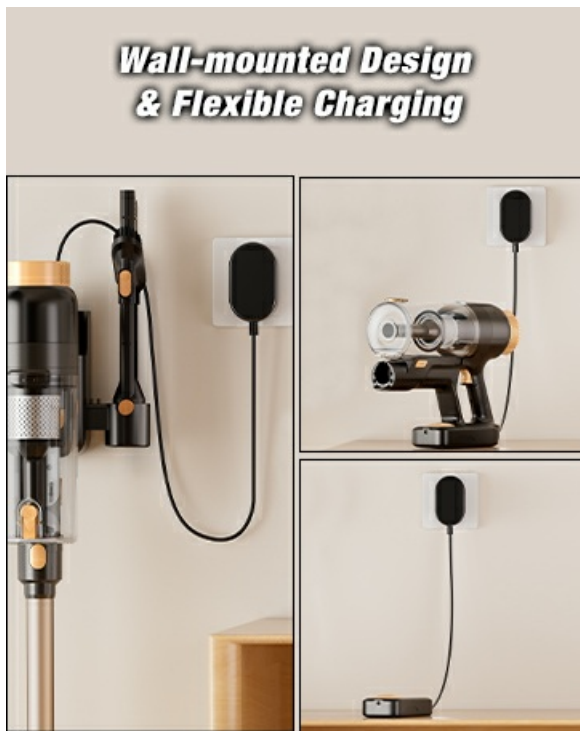


Image: A wall-mounted charging dock with the vacuum cleaner attached, illustrating the charging method.

Important: For optimal suction performance, fully charge the vacuum and empty the dust cup before each use.

OPERATING INSTRUCTIONS

Power On/Off and Suction Modes:

1. **Power On:** Press the power button on the LED smart touch screen to turn on the vacuum.

30W Larger Diameter Brush **Flex & Power in One**

Bright LED Illumination

Soft and Sturdy Bristles Combined

Edge-to-Edge Corner Cleaning

V-Shaped Anti-Tangle Design



Note: To maintain optimal performance, please clean the floor brush regularly.

Image: Close-up of the vacuum's LED smart touch screen displaying battery percentage and various indicators.

2. **Adjust Suction Power:** Tap the "Gear Shift Button" on the touch screen to cycle through the three suction modes:

- **Low Mode (18KPA):** Up to 70 minutes runtime, ideal for tile and small particles.
- **Medium Mode (30KPA):** Up to 45 minutes runtime, suitable for wooden floors and larger particles like kitty litter.
- **High Mode (50KPA):** Up to 25 minutes runtime, best for plush carpets and entangled hair.

3. **Power Off:** Press the power button again to turn off the vacuum.

Using Attachments:

- **Floor Brush:** Use for general floor cleaning on hard floors, low-pile carpets, and plush carpets. The flexible head with LED light helps reach dark spots.



Image: The VBUOO Cordless Vacuum Cleaner in use on a rug, demonstrating its powerful suction and LED lights.

- **2-in-1 Crevice Brush:** Ideal for cleaning sofa seams, keyboards, storage racks, window corners, and vehicle interiors.



Image: The vacuum cleaner being used in various configurations (handheld, with extension tube) to clean different surfaces like beds, tables, and high areas.

- **Flat Head Brush:** Suitable for areas requiring brush sweeping, such as curtains, vehicle interiors, and air conditioners.

Self-standing Feature:

The vacuum can stand independently. Simply release your grip, and it will remain upright, allowing you to pause cleaning without needing to lean it against a wall or furniture.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dust Cup:

1. When the "Dust Full Indicator" lights up on the LED screen, or when the dust level reaches the MAX mark, it's time to empty the 1.8L dust cup.



Image: The vacuum's dust cup being emptied into a trash bin, highlighting its 1.8L capacity.

2. Press the dust cup release button and carefully empty the contents into a trash bin.
3. Close the dust cup securely until it clicks.

Filter Cleaning:

Wash filters monthly for best performance. Clean HEPA every 2-3 weeks.

1. Remove the filter unit from the main unit.



Image: The vacuum's filter unit disassembled, showing how to remove the components for cleaning.

2. Wash filters with cold water. Ensure they are completely dry (approx. 24 hours) before reassembling.
3. Install the HEPA filter onto the motor inlet first, then attach the dust cup. Ensure proper alignment of the dust cup's air outlet.

Brush Roller Cleaning:

When the "Floor Brush Blocked Alerts" lights up, clean the brush.

1. Remove the brush roller. Clean the motorized brush window and suction mouth with a half-wet cloth.

One Vacuum, Endless Possibilities



Image: Steps for cleaning the brush roller, including removing tangled hair with the provided cleaning tool.

2. Remove any debris wrapped around the roller using the provided hair cleaning tool.
3. Flush the roller with water and dry completely before reinserting.

TROUBLESHOOTING

The LED smart touch screen provides indicators for common issues. Refer to the table below for explanations and solutions:

Error Description	Error Code/Indicator	Solution
Low battery	00	Recharge battery
Battery abnormal	E0 + Fault light	Replace battery pack
Main motor overcurrent	E1 + Fault light	Replace main motor

Error Description	Error Code/Indicator	Solution
Main motor short circuit	E2 + Fault light	Replace main motor
Brush roller blocked	Brush block light	Remove debris from roller
Over-temperature	E4 + Fault light	Cool down before restart
Brush roller short circuit	E5 + Fault light	Replace brush roller
Charging overvoltage / current	E6 + Fault light	Use original adapter
No-load output (motor auto-stop)	E7 + Fault light	Check wiring or replace motor
Power-on with empty battery	E8 + Fault light	Recharge before use
Main motor blocked	EA (Fan block light)	Clean dust cup & check air path

Table: Error codes and solutions for the VBUOO Cordless Vacuum Cleaner.

SPECIFICATIONS

Feature	Detail
Brand	VBUOO
Model Name	TV105S
Special Feature	Cordless
Motor Power	600W Brushless Motor
Suction Power	Up to 50KPa
Battery	8x2600 mAh Lithium-Ion (included)
Battery Life	Up to 70 minutes (Low mode)
Charging Time	5.5 Hours
Dust Cup Capacity	1.8 Liters
Filter Type	High-density HEPA Filter; Inclined Conical Cyclone Metal Filter
Noise Level	73 Decibels
Product Dimensions	17.32"L x 10.24"W x 6.1"H
Item Weight	1 pounds
Recommended Uses	Home, Office, Car Interior, Hardwood Floors, Carpet, Upholstery, Stairs, Corners and Edges, Above-Floor Cleaning

Feature	Detail
Surface Recommendation	All floors, Low-pile Carpet, Hard Floor, Hardwoods, Upholstery, Bare Floor, Ceramic Tile, Shelves, Blinds, Baseboards, Laminate Floors, Vinyl Floors, Leather, Windowsills, Ceilings, Walls, Sofa, Pillow

OFFICIAL PRODUCT VIDEOS

Watch these official videos from VBUOO for more information on your vacuum cleaner.

2025 Upgraded Vacuum Cleaners 600W 50Kpa Powerful Suction

Your browser does not support the video tag.

Video: An official product video from VBUOO showcasing the upgraded features, 600W motor, and 50KPa powerful suction of the vacuum cleaner. It demonstrates the vacuum's performance on various surfaces and highlights its efficiency.

WARRANTY AND SUPPORT

For any warranty claims, technical support, or inquiries, please contact VBUOO customer service. Refer to your purchase documentation for specific warranty terms and contact details.

Return Policy: 30-day refund/replacement period.

Protection Plans: Optional 2-Year or 3-Year Protection Plans are available for purchase.

© 2025 VBUOO. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question