

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Gabba Goods](#) /
- › [Gabba Goods Glitter Karaoke Mic Instruction Manual](#)

Gabba Goods Glitter Karaoke Mic

Gabba Goods Glitter Karaoke Mic Instruction Manual

Model: Glitter Karaoke Mic (B0FR2LTG16)

1. INTRODUCTION

Thank you for choosing the Gabba Goods Glitter Karaoke Mic. This device combines a microphone and speaker with Bluetooth connectivity, allowing you to sing along to your favorite music from compatible devices. This manual provides essential information for the safe and effective use of your karaoke microphone.

2. PACKAGE CONTENTS

- Gabba Goods Glitter Karaoke Mic
- Carrying case
- Charging cable

3. PRODUCT OVERVIEW



Image: Gabba Goods Glitter Karaoke Microphone, showcasing its integrated controls and sparkling finish.

Control Buttons:

- **PREV:** Press to go to the previous track.
- **SCAN:** Press to play/pause music. Long press to scan for Bluetooth devices.
- **VOL+:** Press to increase the speaker volume.
- **REC:** Press to record your singing (requires compatible app or device).
- **NEXT:** Press to go to the next track.
- **VOL-:** Press to decrease the speaker volume.
- **MIC VOL:** Adjusts the microphone's input volume.
- **REMIX:** Adjusts the echo or reverb effect for the microphone.

4. SETUP

4.1 Initial Charging

Before first use, fully charge the microphone. Connect the provided charging cable to the microphone's charging port and a compatible USB power source. The charging indicator light will typically turn off or change color once fully charged.

4.2 Powering On/Off

To power on the microphone, press and hold the power button (often integrated with the SCAN button or a separate button) until you hear an audible prompt or see an indicator light. Repeat the process to power off the device.

5. OPERATING INSTRUCTIONS

5.1 Bluetooth Pairing

1. Ensure the microphone is powered on and in pairing mode (indicated by a flashing light or audible prompt).
2. On your smartphone, tablet, or other Bluetooth-enabled device, navigate to the Bluetooth settings.
3. Search for available devices. The microphone will typically appear as "Glitter Karaoke Mic" or a similar name.
4. Select the microphone to pair. Once paired, you will hear a confirmation sound.

5.2 Playing Music

After successful Bluetooth pairing, open your preferred music or karaoke application on your connected device. Play your desired audio, and it will stream through the microphone's integrated speaker.

5.3 Adjusting Volume and Echo

- Use the **VOL+** and **VOL-** buttons to adjust the overall speaker volume of the music.
- Use the **MIC VOL** control to adjust the volume of your voice through the microphone.
- Use the **REMIX** button to add or reduce the echo effect on your voice.

5.4 Recording

To record your performance, press the **REC** button. This feature typically works in conjunction with a recording application on your connected smartphone or tablet. Consult your device's recording app for specific instructions.

6. CHARGING

When the battery is low, the microphone may indicate this with a flashing light or an audible alert. Connect the charging cable to the microphone and a USB power source (e.g., computer USB port, wall adapter). A full charge typically takes a few hours. Avoid using the microphone while it is charging to prolong battery life.

7. MAINTENANCE

- **Cleaning:** Wipe the microphone with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the microphone in its carrying case in a cool, dry place when not in use.
- **Battery Care:** To maintain battery health, avoid fully discharging the battery frequently. Charge the device regularly, even if not in use for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Microphone does not power on.	Low battery.	Charge the microphone fully.
Cannot pair via Bluetooth.	Microphone not in pairing mode; device too far; interference.	Ensure microphone is in pairing mode. Move device closer. Turn off other Bluetooth devices.
No sound from speaker.	Volume too low; device not connected; app issue.	Increase speaker volume (VOL+). Ensure Bluetooth is connected. Check volume on connected device and app.
Microphone voice is too low/high.	MIC VOL setting.	Adjust the MIC VOL control.

9. SPECIFICATIONS

- **Brand:** Gabba Goods
- **Model:** Glitter Karaoke Mic
- **ASIN:** B0FR2LTG16
- **UPC:** 840286400534
- **Connectivity Technology:** Bluetooth
- **Power Source:** Battery Powered (Rechargeable)
- **Material:** Plastic with Glitter
- **Microphone Form Factor:** Handheld
- **Compatible Devices:** Smartphone, Tablet, Karaoke Machine
- **Included Components:** Carrying case, Charging cable

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or contact the retailer where the product was acquired. You may also visit the official Gabba Goods website for further assistance.

