

[Manuals.plus](#) /

› [PHILIPS](#) /

› Philips Battery Charger for 2 AAA Batteries, 700 mAh (Model CHARG+LR30 700MAHX2)

PHILIPS CHARG+LR30 700MAHX2

Philips Battery Charger Instruction Manual

Model: CHARG+LR30 700MAHX2

1. INTRODUCTION

Thank you for choosing the Philips Battery Charger. This manual provides important information for the safe and efficient use of your charger. Please read it carefully before use and keep it for future reference.

What's in the Box:

- 1 x Philips Battery Charger (Model CHARG+LR30 700MAHX2)
- 2 x Philips AAA LR03 700 mAh Rechargeable NiMH Batteries
- 1 x Micro USB Cable



This image shows the Philips Battery Charger, model CHARG+LR30 700MAHX2, packaged in a green box. The charger itself is white and compact, designed to hold two AAA batteries. Two Philips-branded AAA rechargeable batteries are visible within the charger slots. The packaging highlights 'Philips Battery Charger' and includes icons related to charging time and power.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent electric shock, injury, or damage to the charger or batteries.

- Use only NiMH rechargeable batteries with this charger. Do not attempt to charge alkaline, carbon-zinc, or any other type of non-rechargeable batteries.
- Do not expose the charger to rain or moisture.
- Do not disassemble or modify the charger.
- Keep the charger away from direct sunlight, heat sources, and flammable materials.
- Ensure proper ventilation during charging.
- Do not use the charger if it is damaged.
- Keep out of reach of children.

For detailed safety instructions, please refer to the official safety document: [Safety Information \(PDF\)](#).

3. SETUP

1. **Unpack the Charger:** Carefully remove the charger, batteries, and micro USB cable from the packaging.
2. **Connect Power:** Insert the micro USB connector into the charging port on the charger. Connect the standard USB-A end of the cable to a compatible USB power source (e.g., a USB wall adapter, computer USB port, or power bank). The power source should provide 5V DC.
3. **Insert Batteries:** Insert the AAA NiMH rechargeable batteries into the charger slots, ensuring the correct polarity (+ and - ends match the markings on the charger). The charger is designed for 2 AAA batteries.

4. OPERATING INSTRUCTIONS

1. **Initiate Charging:** Once the batteries are correctly inserted and the charger is connected to a power source, the charging process will begin automatically.
2. **Charging Indicator:** The charger features LED indicators to show the charging status. Refer to the charger's specific LED behavior for details (e.g., solid light for charging, off for fully charged, blinking for error).
3. **Charging Time:** Charging time varies depending on the battery capacity and the power output of your USB source. For the included 700 mAh AAA batteries, a full charge typically takes several hours.
4. **Remove Batteries:** Once charging is complete, disconnect the charger from the power source and carefully remove the fully charged batteries.

5. MAINTENANCE

- **Cleaning:** Disconnect the charger from the power source before cleaning. Use a soft, dry cloth to wipe the exterior of the charger. Do not use liquid cleaners or solvents.
- **Storage:** Store the charger and batteries in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** For optimal battery life, avoid completely discharging NiMH batteries. It is recommended to recharge them when they are low, rather than waiting for them to be fully depleted.

6. TROUBLESHOOTING

- **Charger not working:** Ensure the micro USB cable is securely connected to both the charger and the power source. Verify that the power source is active.
- **Batteries not charging:** Check that the batteries are inserted with the correct polarity (+ and -). Ensure the batteries are NiMH rechargeable type. If batteries are very old or damaged, they may not accept a charge.

- **Slow charging:** Ensure your USB power source provides sufficient current (e.g., 1A or higher for faster charging). Charging from a computer USB port may be slower than a dedicated wall adapter.
- **Overheating:** It is normal for the charger and batteries to become slightly warm during charging. If they become excessively hot, disconnect the charger immediately and contact support.

7. SPECIFICATIONS

Brand	PHILIPS
Model Number	CHARG+LR30 700MAHX2
Manufacturer Part Number	SCB2070NB/00
Battery Type	NiMH (Nickel-Metal Hydride)
Battery Size Supported	AAA
Included Batteries	2 x AAA LR03 700 mAh
Input	Micro USB (5V DC)
Color	White

8. WARRANTY AND SUPPORT

This Philips product is covered by a limited warranty. For specific warranty terms and conditions, please refer to the documentation provided with your purchase or visit the official Philips website.

For technical support, troubleshooting assistance, or to inquire about replacement parts, please contact Philips customer service through their official support channels. Keep your proof of purchase for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question