

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Rowenta](#) /

› [Rowenta X-Clean 10 Wet & Dry Cordless Electric Mop Vacuum Cleaner Instruction Manual](#)

Rowenta YY5785FE

Rowenta X-Clean 10 Wet & Dry Cordless Electric Mop Vacuum Cleaner

Model: YY5785FE | Brand: Rowenta

1. INTRODUCTION

Thank you for choosing the Rowenta X-Clean 10 Wet & Dry Cordless Electric Mop Vacuum Cleaner. This manual provides essential information for the safe and efficient use, maintenance, and troubleshooting of your appliance. Please read it thoroughly before first use and keep it for future reference.

The Rowenta X-Clean 10 is designed to simplify your cleaning routine with its innovative Wet & Dry technology, allowing you to vacuum and mop simultaneously. Its advanced features include a self-cleaning and automatic drying system, long battery autonomy, and an intuitive LED screen.

Product Overview

Your browser does not support the video tag.

This video provides a general overview of the Rowenta X-Clean 10's features and capabilities, demonstrating its efficiency in handling various cleaning tasks.

2. INCLUDED COMPONENTS

Your Rowenta X-Clean 10 package includes the following items:

- Cordless Wet & Dry Mop Vacuum Cleaner
- Charging Base for Self-Wash and Self-Dry Cycle
- Cleaning Brush
- Charger
- Additional Roller
- Additional Filter



Image: All components included in the Rowenta X-Clean 10 package.

3. SETUP AND INITIAL USE

3.1 Assembly and Charging

1. **Assemble the Handle:** Insert the handle into the main body of the vacuum cleaner until it clicks securely into place. Ensure the lock icon is visible, indicating proper assembly.
2. **Connect the Charging Base:** Place the charging base on a flat surface near a power outlet. Connect the charger cable to the base and then plug it into the wall outlet.
3. **Initial Charge:** Place the assembled vacuum cleaner onto the charging base. Allow it to charge for approximately 3 hours and 30 minutes before the first use to ensure full battery capacity. The LED screen will indicate charging status.

Your browser does not support the video tag.

This video demonstrates the assembly of the handle, connecting the charging base, and placing the unit for charging.

3.2 Filling the Clean Water Tank

1. **Remove the Clean Water Tank:** Locate the clean water tank on the main unit and remove it.
2. **Fill with Water:** Open the tank cap and fill it with clean tap water. The tank can hold water up to 50 degrees Celsius.
3. **Add Detergent (Optional):** If desired, add a small amount of floor cleaning detergent according to the detergent manufacturer's instructions. Do not overfill.
4. **Reinsert the Tank:** Close the tank cap securely and reinsert the clean water tank into the vacuum cleaner until it clicks into place.



Image: Filling the clean water tank with water and adding detergent.

4. OPERATING INSTRUCTIONS

4.1 Powering On and Mode Selection

1. **Power On:** Press the power button on the handle to turn on the appliance.
2. **Select Language:** Follow the voice instructions to select your preferred language.
3. **Choose Cleaning Mode:** Use the mode selection button to cycle through the available cleaning modes:
 - **Auto/AI Mode:** Automatically adjusts water flow and suction power based on detected dirt levels.
 - **Mopping Mode:** For removing surface water.
 - **Silent Mode:** For quiet cleaning of lightly soiled floors.
 - **Turbo Mode:** For ingrained stains requiring higher water flow.
 - **Max Mode:** For the most difficult stains.



Image: The LED screen displaying cleaning modes.

Image: Selecting a cleaning mode on the handle.

4.2 Cleaning Performance

The Rowenta X-Clean 10 is designed for optimal results, vacuuming and mopping in a single pass. It effectively cleans both solids and liquids on various sealed hard floor types, including wood, marble, laminate, and tiles.

- **Wet & Dry Technology:** Experience a comprehensive cleaning solution that saves time and covers every inch of your home.
- **Effortless Cleaning:** The self-propelled roller system makes the cordless mop ultra-light, weighing only 0.8 kg in hand, with a flexible 180-degree design for maximum reach under furniture.
- **Long Autonomy:** Enjoy up to 60 minutes of cleaning on a single charge, suitable for both unexpected spills and thorough cleaning sessions.

- **Anti-Tangle Roller:** The microfiber roller is designed to prevent long hair and pet hair from tangling, ensuring smoother and easier cleaning.
- **Smart Noise Reduction:** Advanced noise dampening technology ensures a quieter cleaning experience.

ASPIRA Y FRIEGA TODOS LOS SUELOS

En una sola pasada



Image: The vacuum cleaner effectively cleaning various spills on a hard floor.

DISEÑO PLANO A 180°



Image: The 180-degree flat design for cleaning under furniture.

HASTA 60 MINUTOS DE AUTONOMÍA

Para limpiar en todas partes con una sola carga



Image: Demonstrating the long battery autonomy for cleaning various areas.

SISTEMA ANTI-ENREDOS DE CABELLO



Image: The anti-tangle brush roll design.

5. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your Rowenta X-Clean 10.

5.1 Self-Cleaning and Automatic Drying System

The exclusive bidirectional self-cleaning and self-drying system makes maintenance effortless:

1. **Initiate Self-Cleaning:** After each use, ensure the charging base is connected. Place the vacuum cleaner on the base and press the dedicated self-cleaning button. The system will automatically clean the roller with fresh water.
2. **Automatic Drying:** Following the self-cleaning cycle, the automatic drying process at 65°C will begin to eliminate water from the roller, preventing bacteria formation and odors.

SISTEMA DE AUTOLIMPIEZA



Image: The self-cleaning and automatic drying system in action.

Your browser does not support the video tag.

This video demonstrates how to initiate the self-cleaning cycle and the automatic drying process.

5.2 Emptying and Cleaning the Dirty Water Tank

1. **Remove Dirty Water Tank:** After each use, remove the dirty water tank from the main unit.
2. **Separate Solids and Liquids:** The tank is designed to separate solids from liquids. Empty the solid debris into a trash bin.
3. **Empty Liquid Waste:** Pour the dirty water down the drain.
4. **Rinse and Clean:** Rinse the tank thoroughly with clean water. You can use the provided cleaning brush to remove any residue.
5. **Reinsert Tank:** Ensure the tank is clean and dry before reinserting it into the vacuum cleaner.

SEPARA SÓLIDOS DE LÍQUIDOS



Image: The dirty water tank separating solids from liquids.

5.3 Weekly Maintenance: Cleaning the Brush Roll and Head

Once a week, perform a deeper clean of the brush roll and vacuum head:

1. **Remove Side Brush Cover:** Carefully remove the side cover of the brush head.
2. **Remove Brush Roll:** Take out the main brush roll.
3. **Clean Brush Head:** Use the cleaning brush to thoroughly clean any hair or debris from the brush head area.
4. **Clean Brush Roll:** Rinse the brush roll under running water, ensuring all dirt and hair are removed.
5. **Dry Components:** Allow the brush roll and side cover to air dry completely for 24 hours before reassembling.
6. **Clean Charging Base:** Wipe down the charging base with a damp cloth to remove any accumulated dirt or water.

Your browser does not support the video tag.

This video demonstrates the weekly cleaning process for the brush roll and vacuum head.

6. TROUBLESHOOTING

If you encounter any issues with your Rowenta X-Clean 10, please refer to the following common problems and solutions before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on	Low battery or not charged	Place the appliance on the charging base and ensure it is fully charged (approx. 3.5 hours).
Poor suction performance	Dirty water tank full, filter clogged, or brush roll obstructed	Empty and clean the dirty water tank. Clean or replace the HEPA filter. Remove any obstructions from the brush roll.
Water leakage	Clean or dirty water tank not properly installed or damaged	Ensure both water tanks are securely closed and correctly inserted. Check for any cracks or damage to the tanks.
Roller not spinning	Hair or debris tangled in the brush roll, or brush roll not properly installed	Remove the brush roll and clean it thoroughly. Ensure it is reinstalled correctly.
Self-cleaning cycle not starting	Charging base not connected to power, or clean water tank empty	Ensure the charging base is plugged in. Fill the clean water tank.

7. SPECIFICATIONS

Technical details for the Rowenta X-Clean 10 (Model YY5785FE):

- **Model Number:** YY5785FE
- **Product Dimensions:** 23 x 27 x 116 cm
- **Product Weight:** 4.15 kg
- **Power Source:** Battery
- **Battery:** 1 x 12V (included)
- **Voltage:** 21.6 Volts
- **Wattage:** 200 watts
- **Special Feature:** Cordless, Lightweight
- **Filter Type:** HEPA Filter
- **Surface Recommendation:** Sealed hard floors
- **Manufacturer:** Groupe Seb
- **Country of Origin:** China

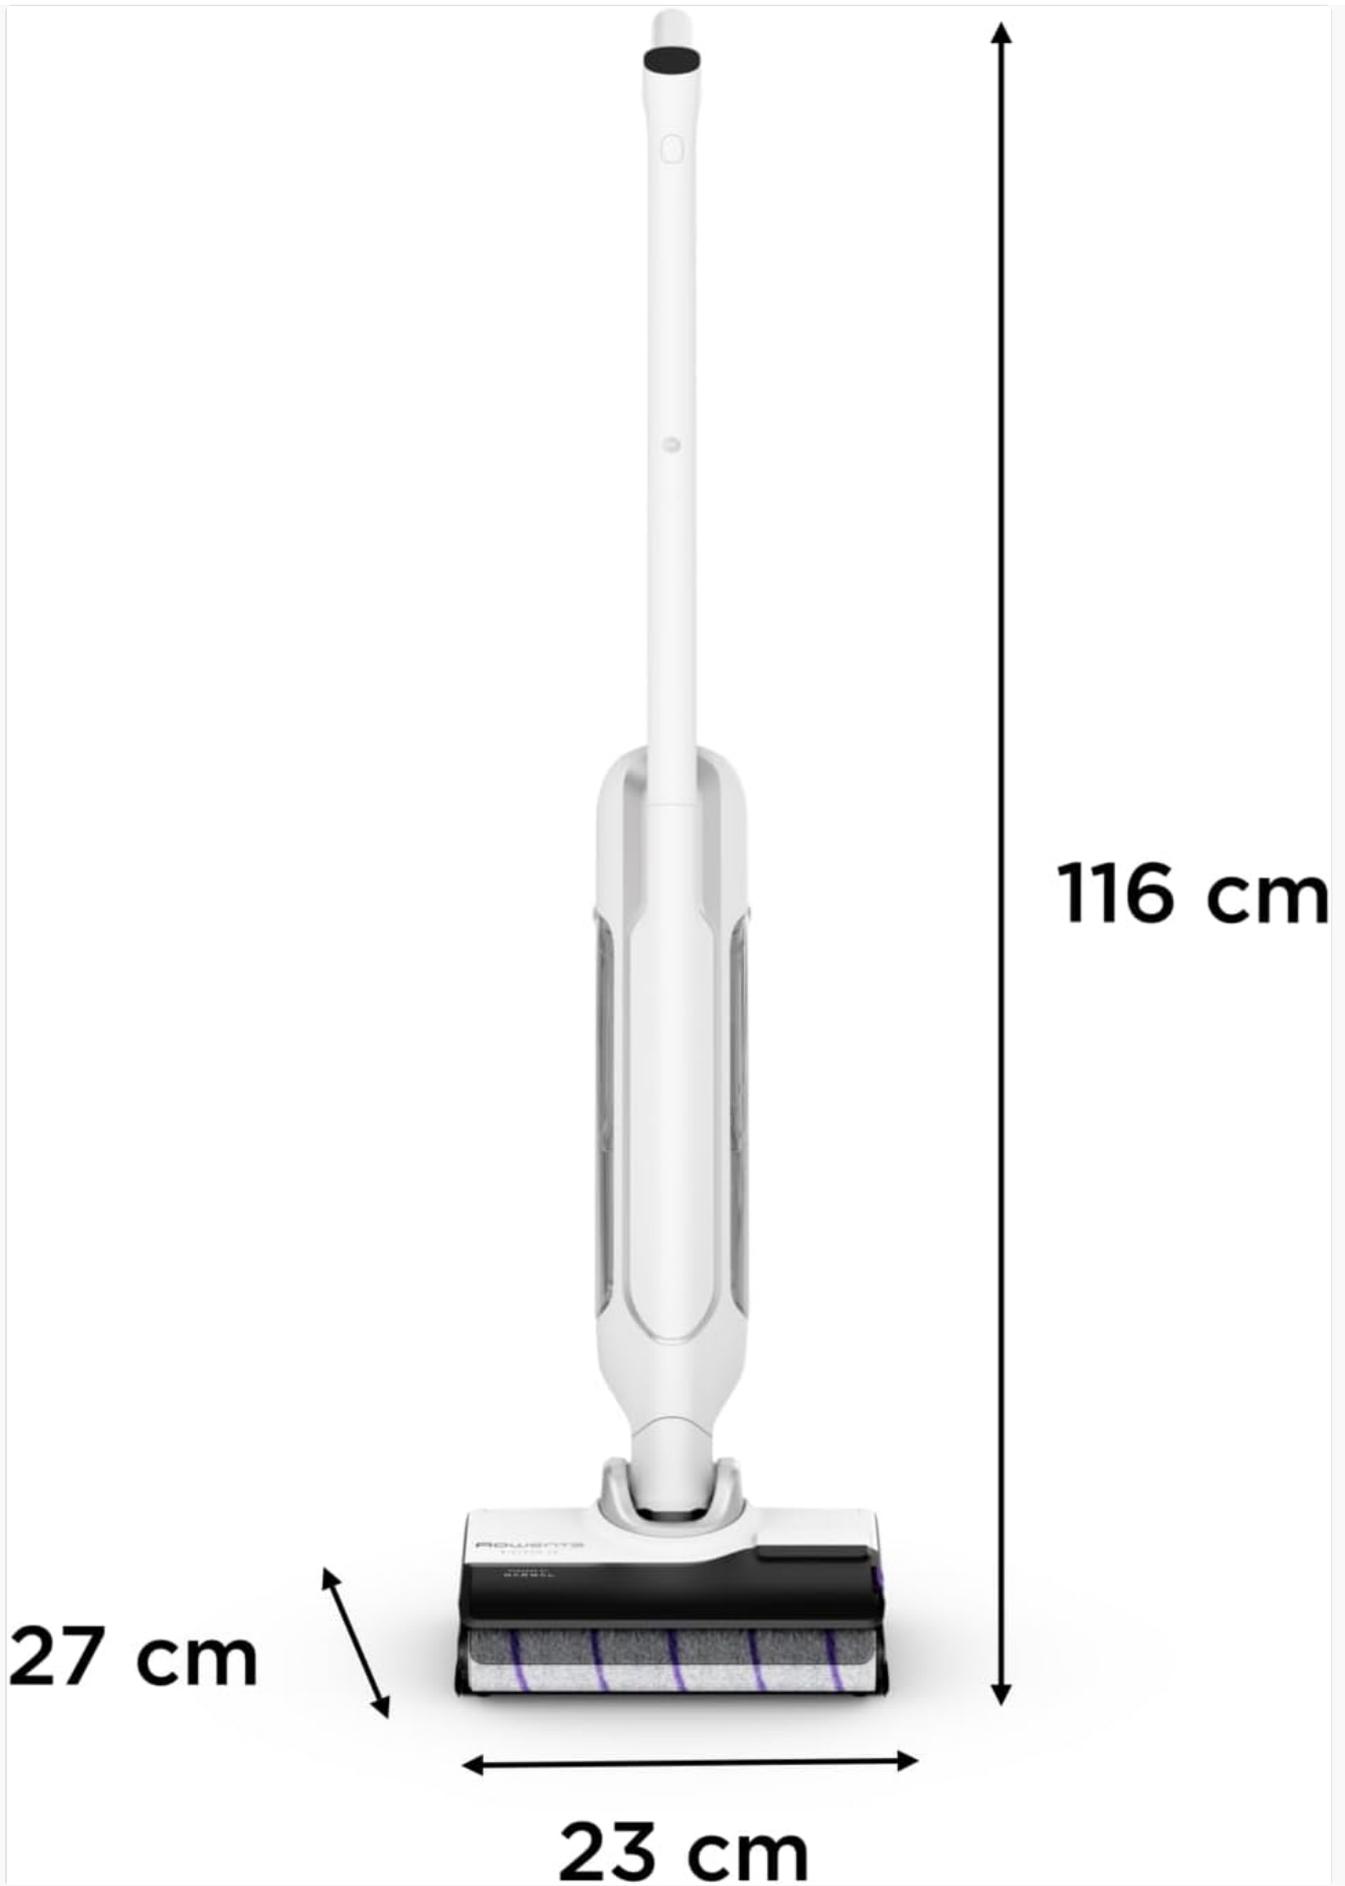


Image: Product dimensions of the Rowenta X-Clean 10.

8. WARRANTY AND SUPPORT

Your Rowenta X-Clean 10 is covered by a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical assistance, spare parts, or any questions not covered in this manual, please contact Rowenta customer support. Contact details can be found on the official Rowenta website or on your product packaging.

Always use genuine Rowenta spare parts and accessories to ensure the continued safe and efficient operation of your appliance.

