

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [saschedross](#) /

> saschedross AC Power Cord User Manual for Morelax M858 Under Desk Elliptical Machine

## saschedross M858

# saschedross AC Power Cord User Manual

For Morelax M858 Under Desk Elliptical Machine

## 1. INTRODUCTION

This manual provides instructions for the safe and effective use of your saschedross AC Power Cord, designed specifically for the Morelax M858 Under Desk Elliptical Machine. This power cord ensures reliable power supply for charging and operating your elliptical machine.



*Image 1: The saschedross AC Power Cord, featuring a standard plug and connector for the Morelax M858 Under Desk Elliptical Machine.*

## 2. SAFETY INFORMATION

Please read all safety instructions carefully before using the power cord. Failure to follow these instructions may result in electric shock, fire, or damage to the product or connected device.

- **Indoor Use Only:** This power cord is designed for indoor use in dry locations. Do not expose to water, rain, or excessive humidity.
- **Proper Voltage:** Ensure the wall outlet voltage matches the input voltage range specified for the power cord (100-240VAC).
- **Avoid Overloading:** Do not overload the power outlet. Connect only devices that are within the power cord's specified capacity.
- **Inspect Before Use:** Before each use, inspect the power cord for any signs of damage, such as

frayed wires, exposed conductors, or cracked insulation. Do not use a damaged cord.

- **Keep Away from Heat:** Do not place the power cord near heat sources, open flames, or in direct sunlight.
- **Unplug When Not in Use:** Always unplug the power cord from the wall outlet and the device when not in use or during electrical storms.
- **Children and Pets:** Keep the power cord out of reach of children and pets to prevent accidental injury or damage.
- **Ventilation:** Ensure adequate ventilation around the power cord and connected device to prevent overheating.

### 3. SETUP INSTRUCTIONS

---

Follow these steps to properly connect your saschedross AC Power Cord to your Morelax M858 Under Desk Elliptical Machine:

1. **Verify Compatibility:** Confirm that this power cord is specifically designed for the Morelax M858 Under Desk Elliptical Machine.
2. **Locate Power Port:** Identify the power input port on your Morelax M858 elliptical machine. Refer to your elliptical machine's manual if unsure.
3. **Connect to Device:** Insert the small connector end of the AC power cord firmly into the power input port of the elliptical machine.
4. **Connect to Wall Outlet:** Plug the larger, two-prong or three-prong end of the AC power cord into a standard, grounded electrical wall outlet.
5. **Power On:** Once connected, the elliptical machine should receive power. Follow the elliptical machine's instructions to power it on.

### 4. OPERATING INSTRUCTIONS

---

The saschedross AC Power Cord functions as a power supply for your Morelax M858 Under Desk Elliptical Machine. Its operation is straightforward:

- Once properly connected as described in the "Setup Instructions" section, the power cord will deliver the necessary electrical current to your elliptical machine.
- Ensure the connection remains secure during use to prevent power interruptions.
- The power cord is designed for continuous use within its specified voltage and current limits.

### 5. MAINTENANCE AND CARE

---

Proper maintenance extends the life of your AC power cord and ensures safe operation:

- **Cleaning:** Disconnect the power cord from both the wall outlet and the device before cleaning. Wipe the cord with a dry, soft cloth. Do not use liquid cleaners or solvents.
- **Storage:** When not in use, coil the power cord loosely. Avoid tight coiling or kinking, which can damage the internal wires. Store in a cool, dry place away from direct sunlight.
- **Avoid Stress:** Do not pull, bend, or twist the cord excessively, especially near the connectors. Always grasp the plug when disconnecting from an outlet or device.

- **Regular Inspection:** Periodically check the entire length of the cord for any signs of wear, cuts, or damage. Replace the cord immediately if any damage is found.

## 6. TROUBLESHOOTING

If you encounter issues with your power cord, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Elliptical machine does not power on.	<ul style="list-style-type: none"> <li>• Power cord not fully plugged in.</li> <li>• Wall outlet is not functioning.</li> <li>• Power cord is damaged.</li> <li>• Elliptical machine issue.</li> </ul>	<ul style="list-style-type: none"> <li>• Ensure both ends of the cord are securely connected.</li> <li>• Test the wall outlet with another device.</li> <li>• Inspect the cord for damage; replace if necessary.</li> <li>• Consult your elliptical machine's manual for troubleshooting.</li> </ul>
Power cord feels warm.	<ul style="list-style-type: none"> <li>• Normal operation (slight warmth).</li> <li>• Overload or poor ventilation.</li> </ul>	<ul style="list-style-type: none"> <li>• Slight warmth is normal. If it's excessively hot, unplug immediately.</li> <li>• Ensure adequate ventilation. Do not cover the cord.</li> <li>• Verify the elliptical machine's power requirements are within the cord's limits.</li> </ul>

If the problem persists after trying these solutions, discontinue use and contact customer support.

## 7. SPECIFICATIONS

<b>Product Name</b>	AC Power Cord for Morelax M858 Under Desk Elliptical Machine
<b>Brand</b>	saschedross
<b>Model Compatibility</b>	Morelax M858 Under Desk Elliptical Machine
<b>Input Voltage</b>	100-240VAC (Worldwide compatible)
<b>Input Frequency</b>	50-60Hz
<b>Cord Length</b>	6 Feet
<b>Color</b>	Black
<b>Safety Features</b>	Over-current, Over-voltage, Over-heat protection
<b>Manufacturer</b>	Shenzhen Waweis Technology Co., Ltd

## 8. WARRANTY AND SUPPORT

For information regarding warranty coverage, returns, or technical support for your saschedross AC Power Cord, please refer to the seller's policies or contact the retailer where the product was purchased. Keep your purchase receipt as proof of purchase.

For general inquiries or further assistance, you may also visit the [saschedross brand page on Amazon](#).

---

© 2024 saschedross. All rights reserved.