

Homirxan 44-O8AC-16SP

Homirxan 6.0 Cub Home Safe Instruction Manual

Model: 44-O8AC-16SP

1. INTRODUCTION

Thank you for choosing the Homirxan 6.0 Cub Home Safe. This manual provides essential information for the proper installation, operation, and maintenance of your new safe. Please read these instructions carefully before use to ensure optimal security and functionality. Keep this manual for future reference.

2. SAFETY INFORMATION

- **Do not store emergency keys inside the safe.** Always keep them in a secure, separate location.
- Ensure the safe is placed on a stable, level surface or securely mounted to a wall or floor to prevent tipping.
- Keep the safe away from excessive moisture or direct heat sources.
- This safe is designed to protect valuables from theft and provide a degree of fire and water resistance. However, no safe is completely impervious to extreme conditions.

3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Homirxan 6.0 Cub Home Safe
- 2 x Spare Keys
- 4 x Expansion Screws (for mounting)
- 1 x User Manual (this document)
- 1 x Felt Mat

4. PRODUCT OVERVIEW

4.1 Key Features

- **Large Capacity:** 6.0 cubic feet for storing documents, electronics, and other valuables.

- **Robust Construction:** Made of solid alloy steel with 4 round 30mm locking bolts and a 60mm reinforced, pry-resistant embedded door.
- **Dual Locking Mechanism:** Programmable digital keypad and emergency key access.
- **Alarm System:** Activates after 3 incorrect password attempts.
- **Mounting Capability:** Pre-drilled holes for wall or floor mounting.
- **Internal Organization:** Includes 3 removable shelves and a soft felt-lined floor mat.
- **Internal LED Light:** Illuminates the interior for visibility.

4.2 Safe Components

Familiarize yourself with the main parts of your safe:

- **Digital Keypad:** For entering your personal password.
- **Emergency Keyhole:** For manual access using the spare keys.
- **Operating Knob:** Used to open and close the safe door.
- **Locking Bolts:** Secure the door when closed.
- **Removable Shelves:** Adjustable for organizing contents.
- **Battery Compartment:** Located on the inside of the door (typically behind the keypad cover).



Image: Overview of the Homirxan 6.0 Cub Home Safe, showing its interior capacity and dimensions (13.8"D x 11.8"W x

5. SETUP

5.1 Initial Access and Battery Installation

1. Locate the emergency keyhole, usually hidden behind a cover on the keypad panel.
2. Insert one of the spare keys into the keyhole and turn it clockwise.
3. While the key is turned, rotate the operating knob clockwise to open the safe door.
4. Open the battery compartment (typically on the inside of the door, behind the keypad cover) and insert 4 AA batteries (not included), ensuring correct polarity.
5. Close the battery compartment.

5.2 Mounting the Safe

For enhanced security, it is recommended to mount the safe to a wall or floor.

1. Choose a suitable location for mounting. Ensure the surface is solid and can support the weight of the safe and its contents.
2. Open the safe door and locate the pre-drilled holes on the back or bottom panel.
3. Position the safe and mark the drilling points on the wall or floor through the pre-drilled holes.
4. Drill pilot holes at the marked points using an appropriate drill bit for your wall/floor material.
5. Align the safe with the drilled holes and secure it using the provided expansion screws. Tighten firmly.

WALL OR FLOOR-MOUNTED INSTALLATION



Image: Step-by-step guide for wall or floor mounting the safe using expansion screws.

6. OPERATING INSTRUCTIONS

6.1 Setting Your Personal Passcode

The safe comes with a factory default code (e.g., 1-2-3-4). It is crucial to change this immediately.

1. With the safe door open, press the red reset button located on the inside of the door (usually near the hinge). You will hear a beep and the indicator lights on the keypad will flash.
2. Within 5 seconds, enter your desired 3-8 digit passcode on the keypad.
3. Press the '#' button to confirm. You will hear a confirmation beep.
4. Test your new passcode with the door open before closing it.

6.2 Opening the Safe

There are two ways to open your Homirxan safe:

Method 1: Using Your Personal Passcode

1. Enter your 3-8 digit personal passcode on the digital keypad.
2. Press the '#' button. If the code is correct, the green light will illuminate.

3. Within 5 seconds, turn the operating knob clockwise to open the door.

Method 2: Using Emergency Keys

This method is for initial access, forgotten passcodes, or dead batteries.

1. Remove the cover over the emergency keyhole on the keypad panel.
2. Insert one of the spare keys into the keyhole and turn it clockwise.
3. While the key is turned, rotate the operating knob clockwise to open the safe door.



Image: Visual guide to opening the safe using either the digital keypad and knob or the emergency key and knob.

6.3 Alarm System

The safe is equipped with a dual alarm system to deter unauthorized access.

- If an incorrect password is entered 3 consecutive times, the alarm will activate, and the safe will lock for 20 seconds.
- To silence the alarm, enter the correct password.
- The safe also features a silence mode, allowing you to open it without audible alerts, useful for not disturbing others. Refer to the specific instructions on your keypad for activating silence mode (usually by pressing a specific key combination before entering the code).

SMART ALARM SYSTEM

After 3 consecutive times wrong passcodes, the safe will activate the alarm system.




Image: Illustration of the smart alarm system, showing an alarm siren and a person attempting unauthorized access.

6.4 Using Removable Shelves and LED Light

- The safe includes 3 removable shelves. These can be adjusted or removed to accommodate items of various sizes. Simply lift and slide them out of their supports.
- The built-in LED light automatically illuminates the interior when the door is opened, providing visibility for your stored items.

HOME SAFE WITH REMOVABLE SHELF

1. With Shelf

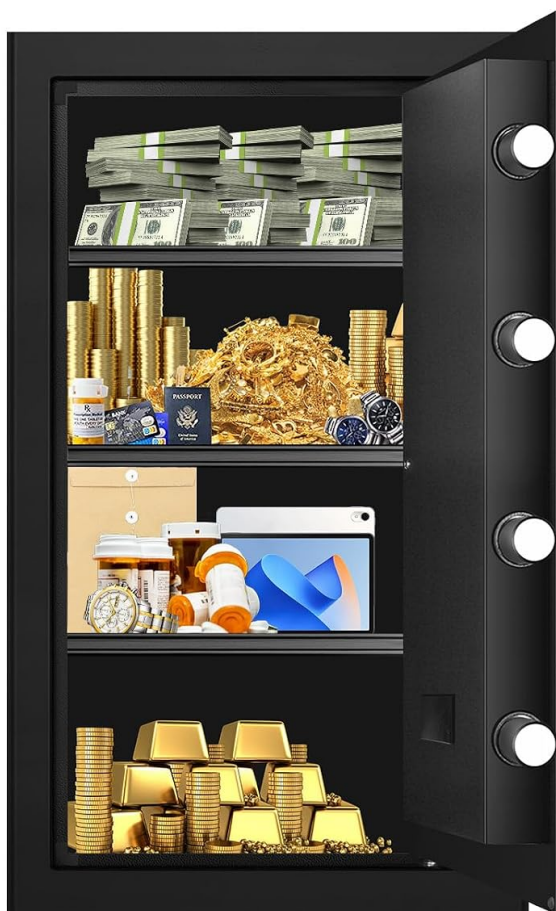

2. Without Shelf

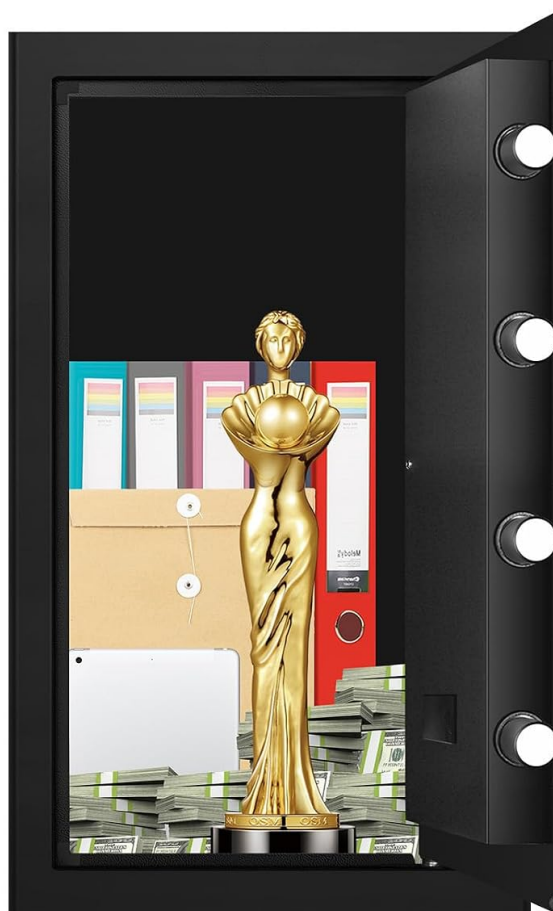


Image: Comparison of the safe's interior with shelves installed for organized storage versus shelves removed for larger items.

7. MAINTENANCE

- **Cleaning:** Wipe the safe's exterior with a soft, damp cloth. Avoid abrasive cleaners or solvents.
- **Battery Replacement:** Replace batteries promptly when the low battery indicator appears (usually a red light or specific beep pattern). Always use 4 new AA batteries.
- **Keypad Care:** Keep the keypad dry and clean. Avoid pressing buttons with excessive force.
- **Door Mechanism:** Periodically check the door hinges and locking bolts for smooth operation. Do not lubricate unless specifically instructed by the manufacturer.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Safe does not open with passcode.	Incorrect passcode entered; Dead batteries; Passcode not set correctly.	Re-enter passcode carefully. Replace batteries. Use emergency key to open and reset passcode.

Problem	Possible Cause	Solution
Keypad does not respond.	Dead batteries; Loose battery connection.	Replace batteries. Ensure batteries are inserted correctly.
Alarm sounds unexpectedly.	Incorrect passcode entered multiple times; Safe moved or tampered with (if equipped with motion sensor).	Enter correct passcode to disarm. Check for tampering.
Door does not close or lock properly.	Obstruction in door frame; Locking bolts misaligned.	Remove any obstructions. Gently push the door to align. If issue persists, contact support.

9. SPECIFICATIONS

Feature	Detail
Brand	Homirxan
Model Number	44-O8AC-16SP
Product Dimensions (D x W x H)	11.8" x 13.8" x 27.56"
Capacity	6.0 Cubic Feet
Lock Type	Electronic Combination Lock
Material	Alloy Steel
Color	Black
Item Weight	44 Pounds
Mounting Type	Floor Mount, Wall Mount
Special Features	Alarm System, Anti-Theft, Removable Shelf, Sensor Light

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided at the point of purchase or visit the Homirxan official website. Please have your model number (44-O8AC-16SP) and purchase details ready when contacting support.