

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [BOOX](#) /
- › [BOOX Note Air5 C ePaper Tablet User Manual](#)

BOOX Note Air5 C

BOOX Note Air5 C ePaper Tablet User Manual

Model: Note Air5 C | Brand: BOOX

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your BOOX Note Air5 C ePaper Tablet. Please read this guide thoroughly to ensure proper use and to maximize the device's capabilities. The BOOX Note Air5 C features a 10.3-inch color E-Ink display, 64GB storage, and runs on Android 15, offering a versatile platform for reading, note-taking, and various applications.

WHAT'S IN THE BOX

Verify that all the following items are included in your product package:

- BOOX Note Air5 C ePaper Tablet
- BOOX Pen3 Stylus
- USB-C Cable
- Warranty Card & Quick Start Guide
- Card Tray Eject Tool

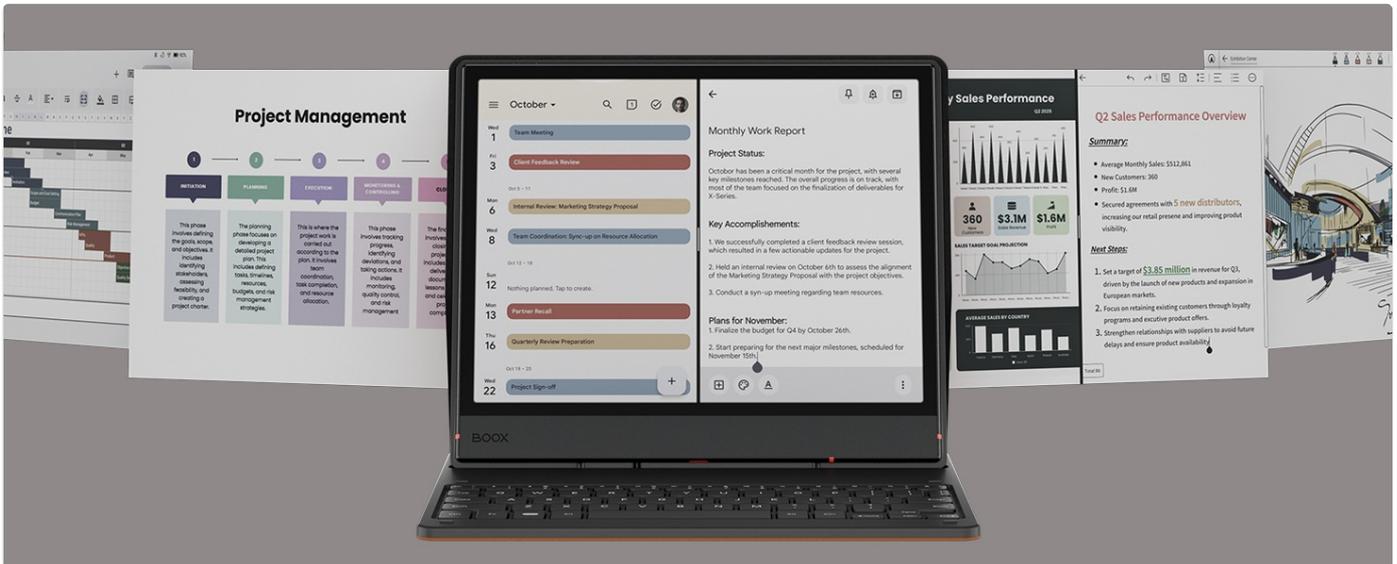


Image: Overview of the BOOX Note Air5 C package contents, showing the tablet, stylus, USB-C cable, and documentation.

DEVICE OVERVIEW

Familiarize yourself with the physical components of your BOOX Note Air5 C tablet.

Here's What You Will Get

10.3" Kaleido 3¹
ePaper Display




App Freedom with
Android 15



Support
Keyboard Input



Feels More Like
Pen on Paper

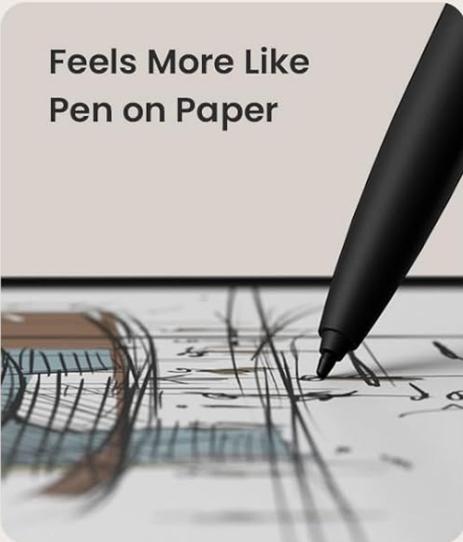


6GB
RAM


64GB
ROM


microSD
Card Slot

Sleek,
Classic
Aesthetic

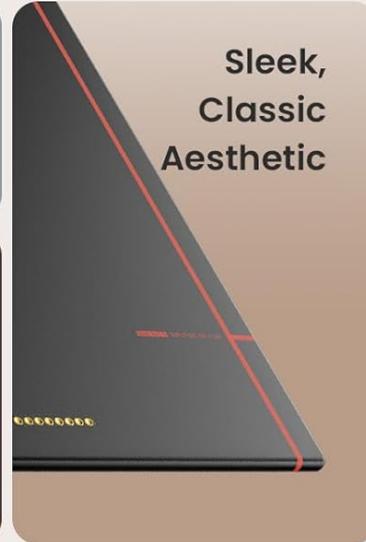


Image: Front view of the BOOX Note Air5 C tablet, highlighting its 10.3-inch Kaleido 3 Color ePaper Screen.



Image: Side view of the tablet, indicating the Power Button which also features Fingerprint Recognition for secure access.



Image: Bottom edge of the tablet, showing the central USB-C Port for charging and data transfer, built-in speakers on both sides, and the microSD Card Slot for expandable storage.



Image: Side view of the tablet, highlighting the Volume/Page-Turn Buttons for adjusting audio or navigating documents.

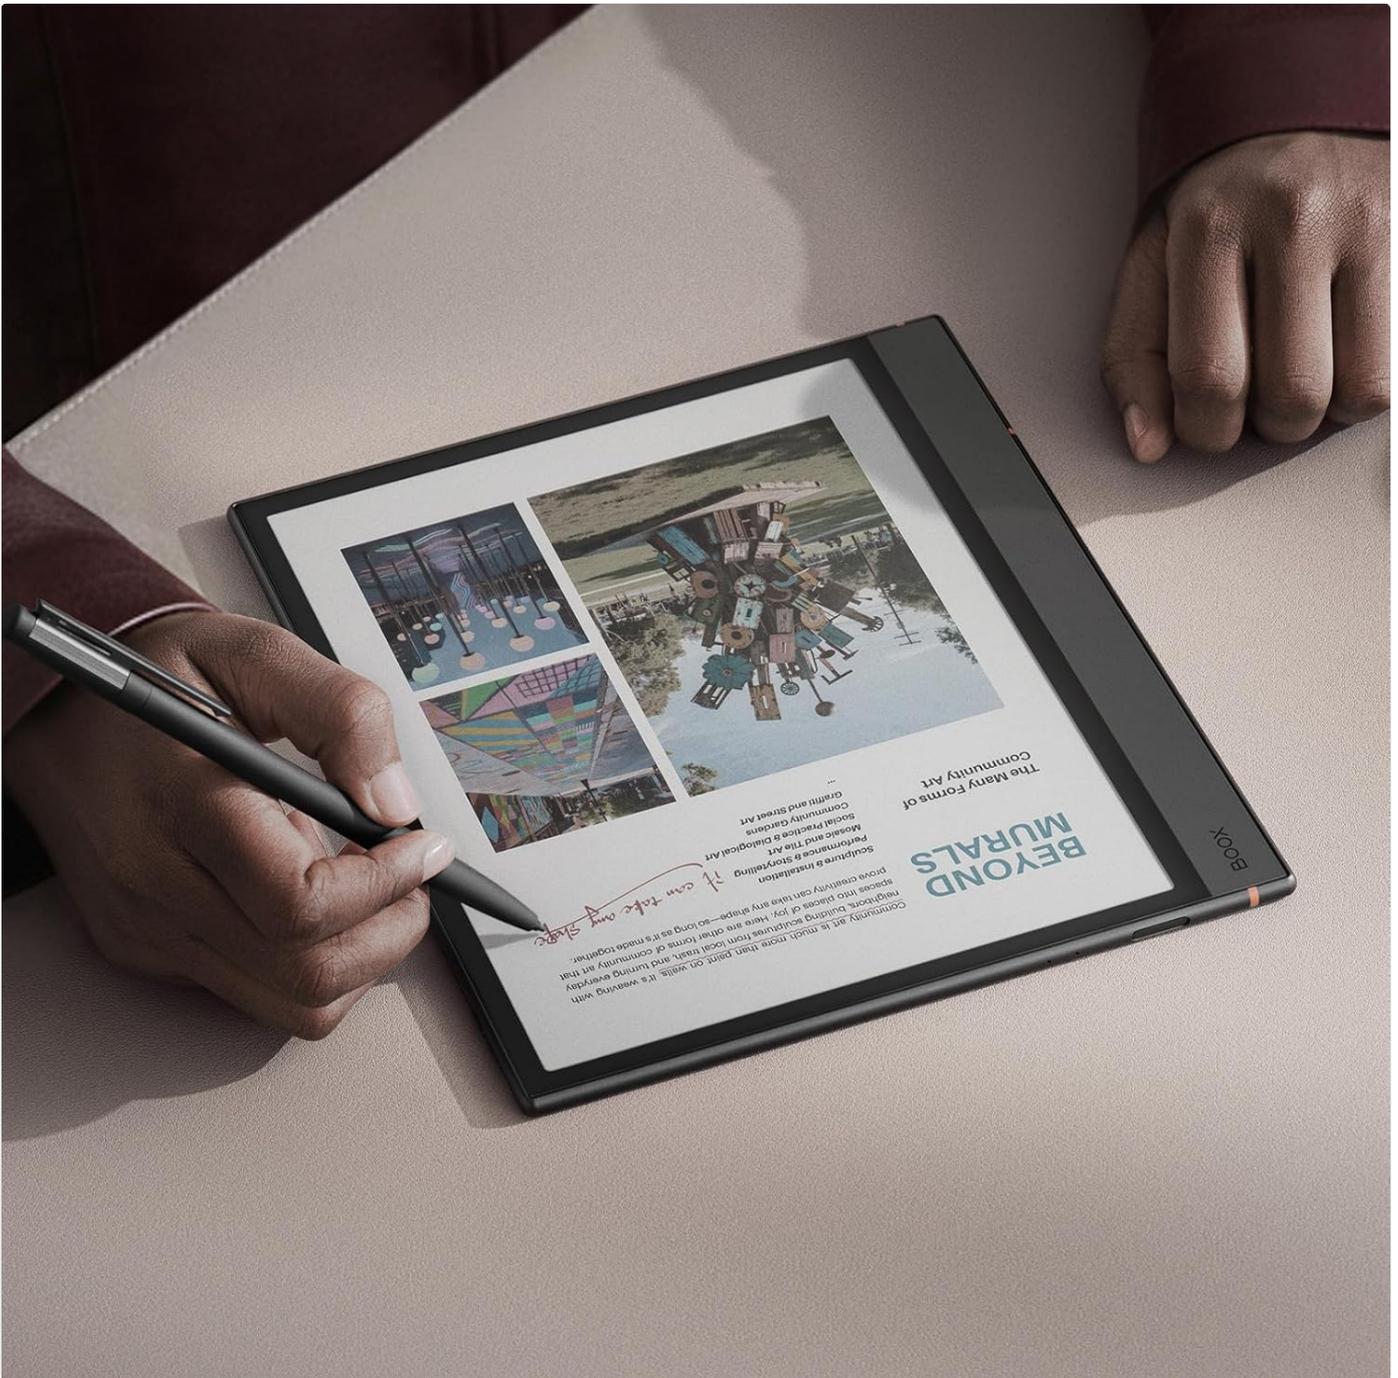


Image: Back view of the tablet, showing the Pogo-Pin Connector, used for connecting compatible accessories like keyboard cases.

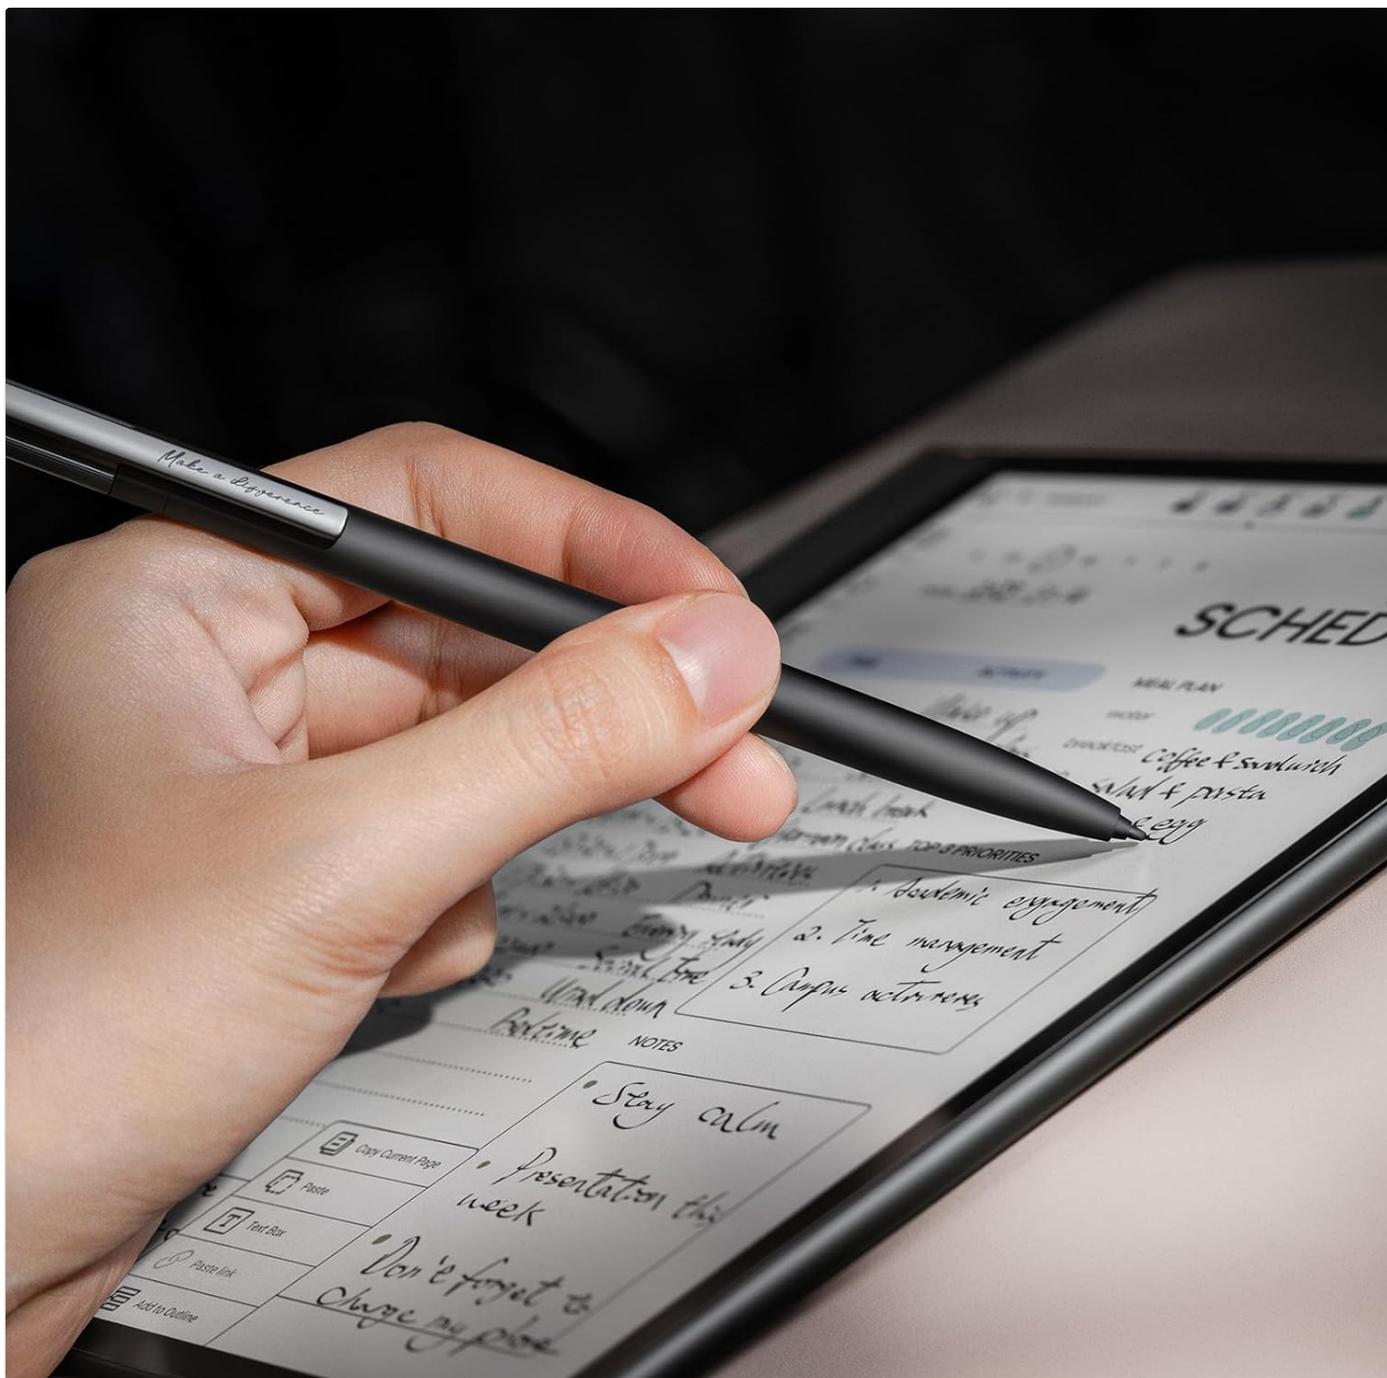


Image: The BOOX Pen3 Stylus, featuring a built-in compartment for storing extra nibs, ensuring you always have replacements on hand.

SETUP

- 1. Charging the Device:** Before first use, fully charge your BOOX Note Air5 C using the provided USB-C cable and a compatible power adapter. The charging port is located on the bottom edge of the device.
- 2. Power On/Off:** Press and hold the power button (located on the side) for a few seconds to turn the device on or off. A short press will put the device to sleep or wake it up.
- 3. Initial Configuration:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your BOOX account.
- 4. Fingerprint Setup:** During initial setup or via settings, configure fingerprint recognition for enhanced security and quick unlocking.
- 5. Insert microSD Card (Optional):** If you wish to expand storage, use the provided card tray eject tool to open the microSD card slot and insert a compatible card.

OPERATING INSTRUCTIONS

Basic Navigation

- **Touchscreen:** Navigate the interface by tapping, swiping, and pinching on the screen.
- **Stylus:** Use the BOOX Pen3 Stylus for precise input, writing, and drawing. The stylus offers a natural writing experience.
- **Home Screen:** Access your applications, library, and settings from the main home screen.



Image: The tablet's home screen displaying a grid of application icons for easy access to features.

Reading and Document Management

- **Opening Documents:** Tap on a document in your library to open it. The device supports various formats including EPUB, MOBI, and PDF.
- **Page Turning:** Swipe left or right on the screen, or use the volume/page-turn buttons on the side of the device.
- **Annotations:** Use the stylus to highlight text, add notes, or draw directly on documents.
- **AI Assistant:** Utilize the built-in AI assistant for text summaries, translations, or definitions within your documents.

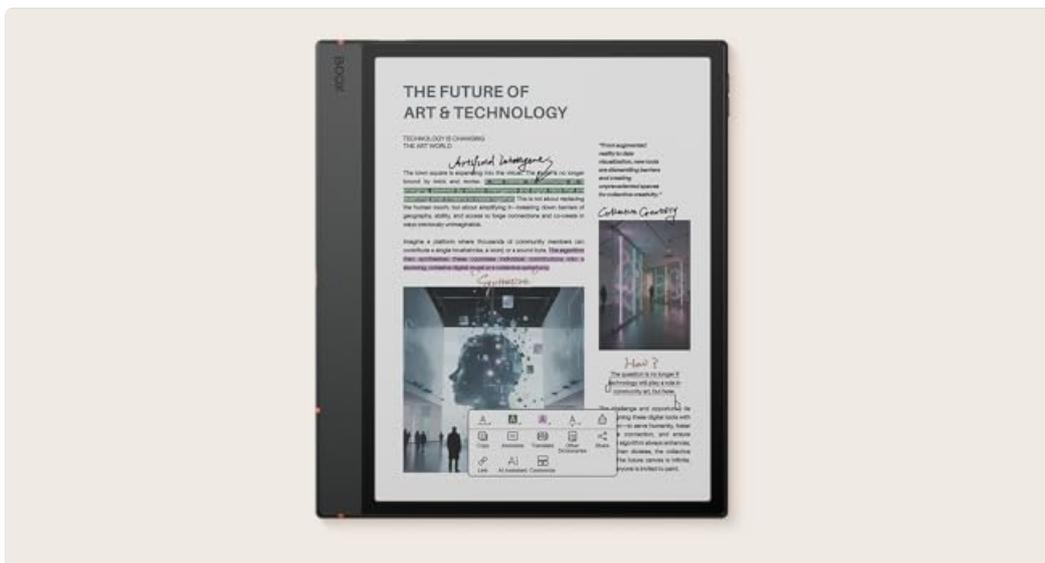


Image: A document open on the BOOX Note Air5 C, with the AI Assistant interface overlaid, demonstrating its contextual assistance capabilities.

Note-Taking and Drawing

- **New Note:** Open the Notes application to create a new notebook.
- **Tools:** Select various pen types, colors (in color mode), and eraser tools from the toolbar.
- **Layers:** Manage different layers for complex drawings or notes.
- **Handwriting Recognition:** The device can convert handwritten notes to text.

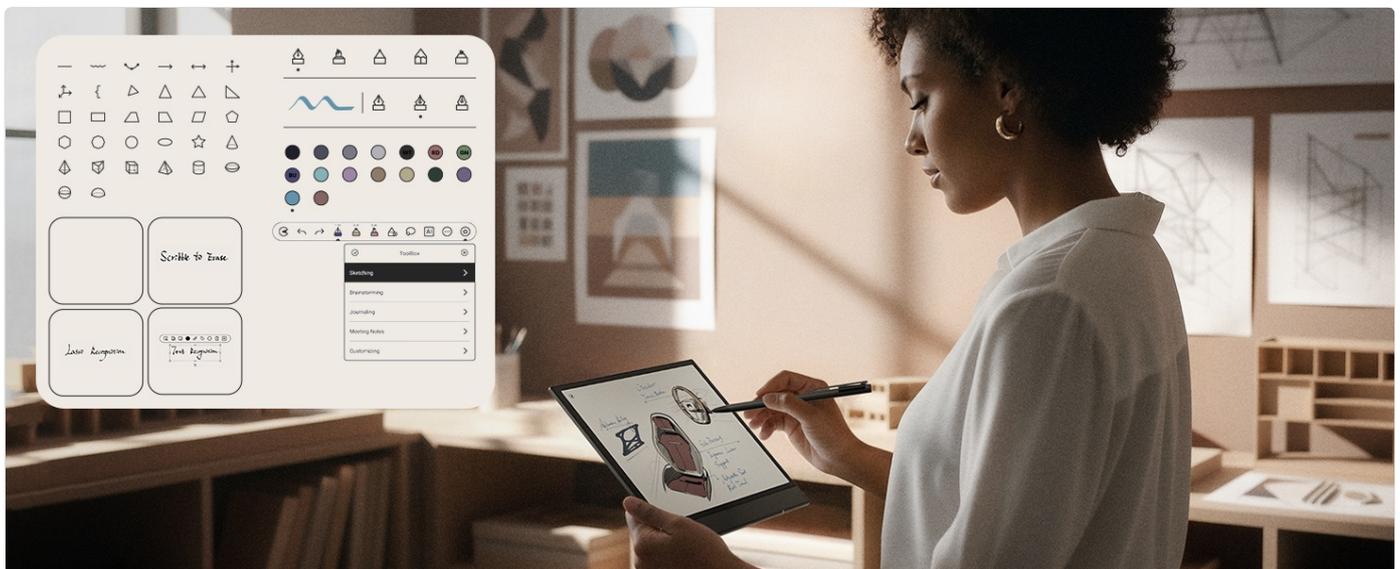


Image: The note-taking interface on the tablet, showcasing a range of tools for writing, drawing, and organizing thoughts.

App Management and Connectivity

- **Android 15:** The device runs on Android 15, allowing installation of various compatible applications from the Google Play Store or other sources.
- **Wi-Fi & Bluetooth:** Connect to Wi-Fi for internet access and download apps. Use Bluetooth for connecting accessories like headphones or external keyboards.
- **Data Sync:** Sync your notes and documents across multiple devices using BOOX cloud services or other compatible cloud storage.



Image: An illustration of content synchronization, showing the BOOX Note Air5 C, a laptop, and a smartphone all displaying the same document, emphasizing cross-device compatibility.

MAINTENANCE

- **Cleaning:** Use a soft, dry, lint-free cloth to clean the screen and body of the device. Avoid using liquid cleaners or abrasive materials.
- **Software Updates:** Regularly check for and install software updates to ensure optimal performance and access to new features. Updates can be found in the device settings.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not let the battery fully discharge frequently. Charge the device when the battery level is low.
- **Storage:** Store the device in a cool, dry place away from direct sunlight and extreme temperatures.

TROUBLESHOOTING

Problem	Possible Solution
Device does not turn on.	Ensure the device is charged. Connect it to a power source and try again after a few minutes. If unresponsive, perform a hard reset by holding the power button for 10-15 seconds.
Screen is unresponsive.	Restart the device. If the issue persists, ensure the screen is clean and free of debris.
Stylus is not writing.	Check if the stylus nib is worn out and replace it if necessary. Ensure the stylus is compatible with the device.
Wi-Fi connection issues.	Restart the device and your Wi-Fi router. Forget the network in settings and reconnect. Ensure you are within range of the Wi-Fi signal.
Applications are slow or crashing.	Close unused applications. Clear app cache in settings. Ensure the device has sufficient free storage. Consider a factory reset as a last resort (back up data first).

SPECIFICATIONS

Feature	Detail
Brand	BOOX
Model Name	Note Air5 C
Screen Size	10.3 Inches
Display Technology	E-Ink (Color)
Display Resolution	1024 x 768
Memory Storage Capacity	64 GB
Connectivity Technology	USB
Compatible Devices	Pen3 Stylus
Special Features	Note-taking capabilities with stylus support and color display
Battery Type	Lithium-ion (Rechargeable)
Supported File Formats	EPUB, MOBI, PDF

WARRANTY AND SUPPORT

Your BOOX Note Air5 C ePaper Tablet comes with a manufacturer's warranty. Please refer to the included Warranty Card for detailed terms and conditions.

- **Manufacturer Warranty:** 2 years.
- **Firmware Updates:** BOOX commits to at least 3 years of firmware updates for each product.
- **Customer Service:** For technical support or service inquiries, visit the official BOOX help center or contact their customer service. Response within 24 hours is typically provided.

UNBOXING VIDEO

Your browser does not support the video tag.

Video: An unboxing video for the BOOX Note Air5 C, demonstrating the contents of the package and a brief overview of the device's physical features.

© 2026 BOOX. All rights reserved.