



Manuals.plus /

› Hoteel /

› HOTEEL 10x30 Party Tent Instruction Manual

Hoteel 10x30 Party Tent

HOTEEL 10x30 Party Tent Instruction Manual

Model: 10x30 Party Tent with Removable Sidewalls

INTRODUCTION

Thank you for choosing the HOTEEL 10x30 Party Tent. This outdoor canopy tent is designed to provide a spacious and protected area for various events such as parties, weddings, BBQs, and other outdoor gatherings. It features an upgraded alloy frame, removable sidewalls, and a waterproof, UV-protective fabric. Please read this manual carefully before assembly and use to ensure proper setup and longevity of your tent.

Important Safety Information:

- The polyethylene fabric is not fireproof. Keep the tent away from all fire sources.
- Avoid using the tent in strong winds, heavy rain, or other severe weather conditions.
- Do not leave the tent erected overnight, especially in unpredictable weather.
- Ensure all components are securely fastened to prevent collapse or damage.

SETUP INSTRUCTIONS

This section outlines the steps for assembling your HOTEEL 10x30 Party Tent. It is recommended that at least two people assist with the assembly process.

1. **Unpack and Identify Components:** Carefully unpack all parts and verify against the packing list (not provided in this manual, refer to your product packaging). Ensure all frame poles, connectors, fabric covers, sidewalls, wind ropes, and ground spikes are present.
2. **Assemble the Frame:** Begin by connecting the alloy steel poles using the innovative plug-in system. No screws are typically required for the main frame assembly. Follow the diagram to build the base, side, and roof frame structures.
3. **Unfold Canopy:** Once the frame is partially assembled, carefully unfold the main canopy roof cover.
4. **Attach Roof Cover:** Drape the roof cover over the assembled roof frame. Ensure it is centered and evenly distributed. Secure the roof cover to the frame using any integrated fasteners or ties.
5. **Raise the Frame:** With the roof cover in place, complete the assembly of the vertical support poles, raising the tent to its full height.
6. **Secure Sidewalls:** Attach the removable sidewalls. These typically feature hook-and-loop fasteners or zippers for easy attachment and removal. Position the sidewalls as desired, utilizing the window panels for natural light.


7. **Anchor the Tent:** For enhanced stability, use the provided wind ropes and ground spikes. Securely fasten the wind ropes to the tent frame and anchor them firmly into the ground. Ensure the foot pads of the tent poles are also stable on the ground.






Figure 1: Visual guide for the four main steps of tent assembly.

Multi-purpose

10x30 Party Tent

 Up to 50 people

- PARTY** 
- BBQ** 
- WEDDING** 

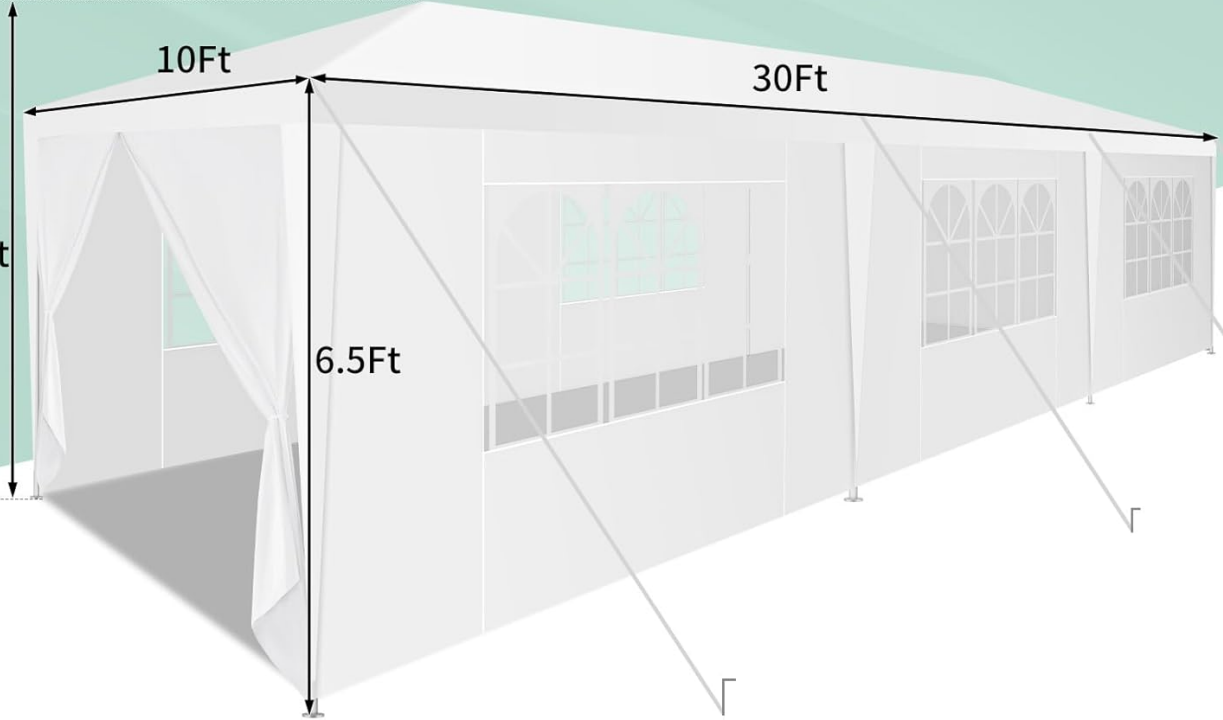 


Figure 2: Overview of the HOTEEL 10x30 Party Tent with key dimensions and suggested capacity.

Sturdy & Stable

Reinforced with nails and wind ropes to make the tent more stable.



Nails



Wind ropes



Cruciform structure



Hook-and-loop fastener



Foot pad

Figure 3: Details of the tent's sturdy and stable components, including anchoring accessories.

OPERATING INSTRUCTIONS


The HOTEEL Party Tent is designed for flexible use in various outdoor settings.

- **Sidewall Configuration:** The tent features removable sidewalls. These can be installed to provide full enclosure and protection from elements or removed for improved ventilation and an open-air feel. The sidewalls with windows allow natural light into the tent.
- **Weather Protection:** The tent fabric offers excellent waterproof and UV protection, blocking up to 99% of ultraviolet rays. This provides shade and keeps the interior dry during light rain.
- **Ventilation:** For optimal airflow, especially on warm days, consider removing some or all of the sidewalls.



Waterproof

High-quality waterproof fabric protects against rainwater

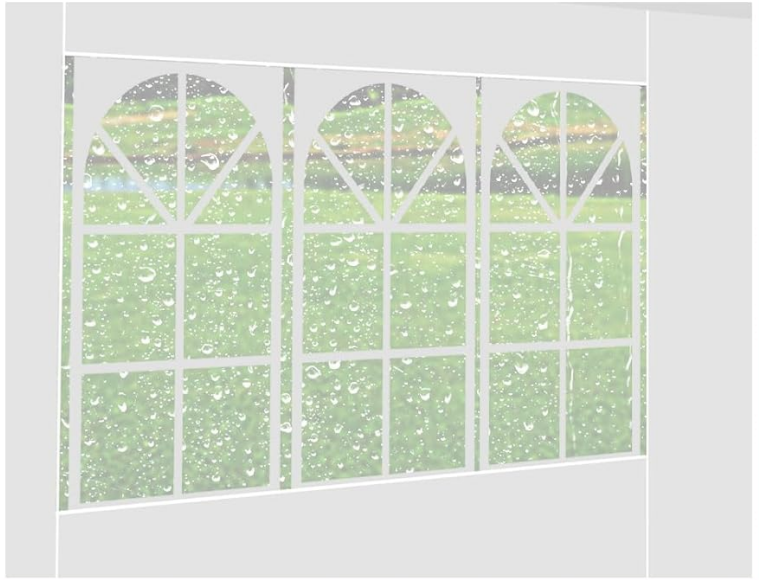

Sun protection

UV-protective fabric protects against the sun's rays

Figure 4: The tent fabric provides both waterproof and UV sun protection.



Well-Ventilated


All sidewalls can be removed to enhanced air flow and provide better ventilation.



Brighter

Transparent church windows on sidewalls offer brighter light and wider views

 Figure 5: The tent is well-ventilated with removable sidewalls and offers a bright interior through its window design.

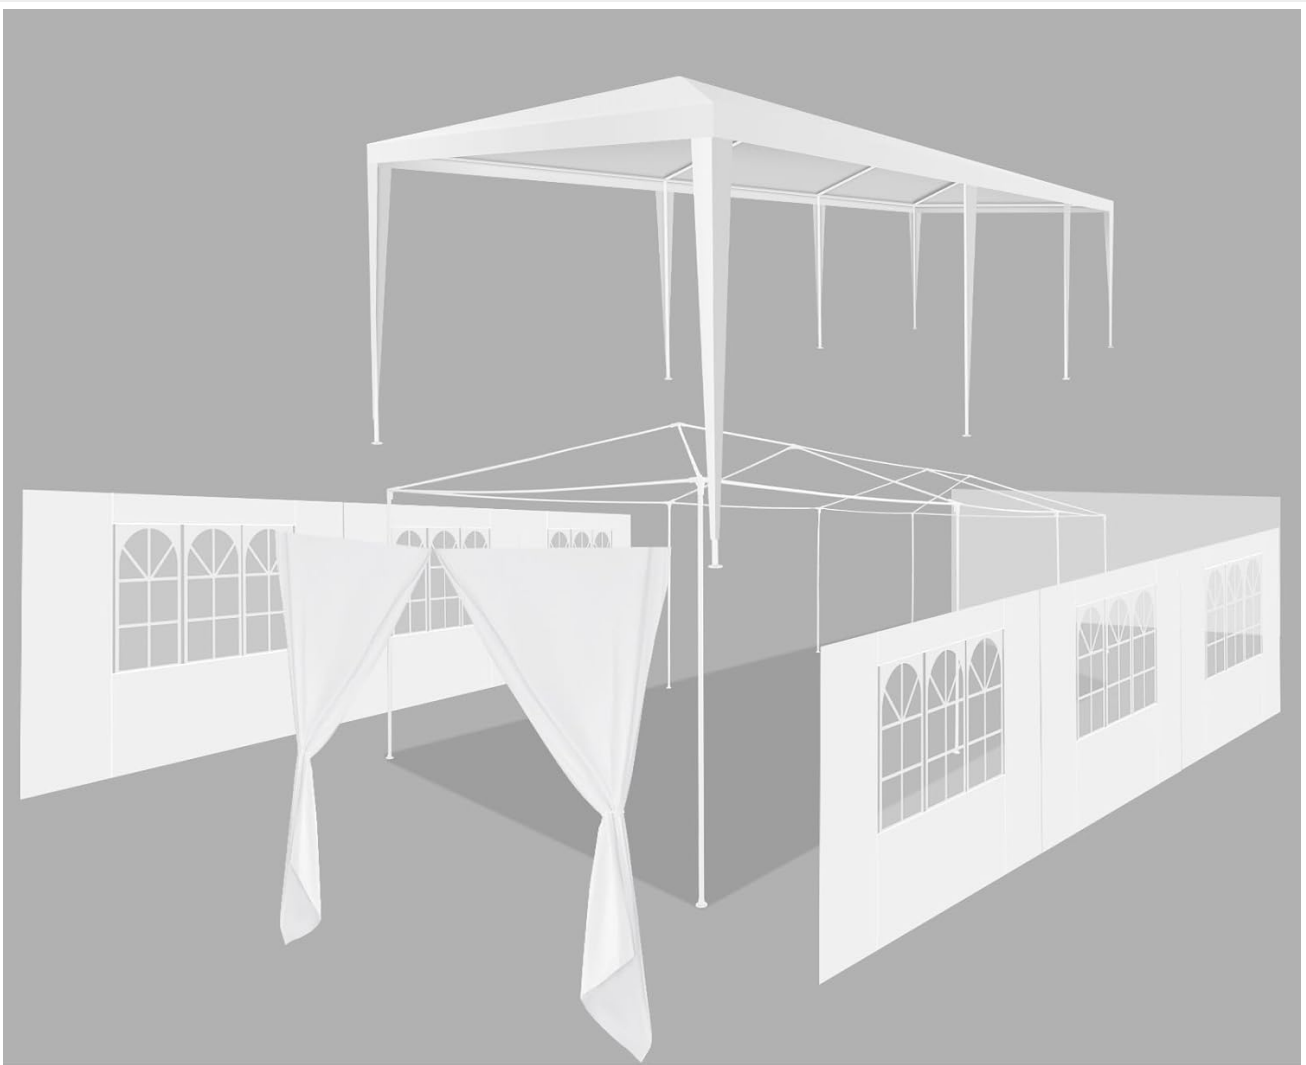

8 Removable Sidewalls



Well-ventilated



Bright



Zippered

Figure 6: The tent features eight removable sidewalls for flexible configuration.

Your browser does not support the video tag.

Video 1: A short preview demonstrating the HOTEEL Party Tent in various event settings, showcasing its versatility for weddings, BBQs, and other gatherings.

MAINTENANCE

Proper maintenance will extend the life of your HOTEEL Party Tent.

- **Cleaning:** Clean the tent fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as these can damage the material and its protective coatings. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the alloy steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the frame. If rust appears, clean it and apply a rust-inhibiting primer and paint.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mildew.
- **Inspection:** Before each use, inspect all poles, connectors, fabric, ropes, and stakes for wear, damage, or missing parts. Replace any damaged components immediately.

TROUBLESHOOTING

This section addresses common issues you might encounter with your party tent.

- **Tent Instability:**

- Ensure all frame poles are fully inserted into their connectors.
- Verify that all wind ropes are securely tied and ground spikes are firmly anchored.
- Check that the tent is erected on level ground.

- **Water Leakage:**

- Confirm the roof cover is properly tensioned and evenly distributed over the frame to prevent water pooling.
- Check for any tears or punctures in the fabric. Small holes can be repaired with a tent repair kit.

- **Difficulty with Assembly:**

- Refer to the assembly diagrams and ensure you are using the correct poles and connectors for each section.
- Ensure you have enough people to assist with the larger sections of the frame and roof cover.

SPECIFICATIONS

| Feature | Detail |
|--------------------------------|--|
| Brand | Hoteel |
| Model | 10x30 Party Tent |
| Product Dimensions (L x W x H) | 360"L x 120"W x 102"H (30 ft L x 10 ft W x 8.5 ft H) |
| Frame Material | Alloy Steel |
| Cover Material | Polyethylene Fabric |
| Water Resistance Level | Waterproof |
| Ultraviolet Light Protection | Yes |
| Shape | Rectangular |
| Color | White |
| Assembly Required | Yes |

WARRANTY INFORMATION

HOTEEL products are manufactured to high-quality standards. For specific warranty details regarding your 10x30 Party Tent, please refer to the warranty card included with your purchase or contact HOTEEL customer support. Typically, warranties cover manufacturing defects under normal use conditions. Damage resulting from improper assembly, misuse, severe weather, or lack of maintenance is generally not covered.

CUSTOMER SUPPORT

If you have any questions, require assistance with assembly, or need to report a missing or damaged part, please contact HOTEEL customer support. Our team is available to provide support and ensure your satisfaction.

Please have your product model number (10x30 Party Tent) and purchase information ready when contacting support. Contact information can typically be found on the product packaging, the HOTEEL official website, or through your retailer.