



Manuals.plus /

- › OKD /
- › OKD RPC52FP36V2 Farmhouse Electric Fireplace with Mantel User Manual

OKD RPC52FP36V2

OKD RPC52FP36V2 Farmhouse Electric Fireplace with Mantel User Manual

Model: RPC52FP36V2 | Brand: OKD

1. INTRODUCTION

This manual provides essential instructions for the safe assembly, operation, and maintenance of your OKD 52-inch Farmhouse Electric Fireplace with Mantel. Please read all instructions carefully before assembly and use to ensure proper function and safety.



Image 1.1: The OKD Farmhouse Electric Fireplace with Mantel, showcasing its design in a living room environment.

2. SAFETY INFORMATION

WARNING: To reduce the risk of fire, electric shock, or injury, read all instructions before using this appliance.

2.1 General Safety

- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- Do not use this fireplace near water, such as in a bathroom, laundry area, or near a swimming pool.
- Always unplug the fireplace when not in use.
- Supervise children and individuals with reduced physical, sensory, or mental capabilities when the fireplace is in operation.

2.2 Electrical Safety

- This fireplace operates on a standard 120V AC, 60Hz electrical outlet. Ensure your outlet meets these requirements.
- Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect the heater, turn controls to off, then remove plug from outlet.

3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts are present and undamaged. The product is typically delivered in two separate packages, which may arrive on different days. Please verify all components against the packing list provided in the box.

- Mantel components (various wood panels and hardware)
- Electric Fireplace Insert
- Remote Control
- Assembly Hardware (screws, dowels, cam locks, etc.)
- Instruction Manual

4. ASSEMBLY INSTRUCTIONS

Assembly typically requires 1-2 people and approximately one hour. Follow the step-by-step instructions provided in the included assembly guide. Pay close attention to the different sizes of dowels and ensure they are used in their correct locations.

4.1 Preparation

- Clear a spacious area for assembly.
- Lay out all components on a soft, clean surface to prevent scratches.
- Identify all hardware and separate them for easy access.

4.2 Assembly Steps (General Overview)

1. Assemble the base and side panels of the mantel.
2. Attach the top panel, ensuring the semi-open cubby mechanism is correctly installed.
3. Insert the electric fireplace unit into the designated opening.
4. Secure all connections and ensure the structure is stable.

PRODUCT DIMENTIONS



Image 4.1: Product dimensions (52"W x 15.6"D x 36"H) and TV size compatibility.

Semi-Open Cubby with Movable Door

Provide easy access for organizing entertainment devices !



Image 4.2: The semi-open cubby with a movable door, designed for storing media devices or other items.

5. OPERATING INSTRUCTIONS

The electric fireplace features adjustable flame effects, heating, and a timer function, controllable via the unit's control panel or the included remote control.

36-inch Large Fireplace with Remote Control

Provides Ample Heating for Your Indoor Space !



 **400 Sq.Ft/
5000BTU**

 **64°F-82°F**
Heating Control

 **Silence embraced**
by warmth (<40db)



The item will be delivered in 2 Packages and may NOT arrived on same day!

Image 5.1: The 36-inch electric fireplace insert, showing the control panel and remote for operation.

5.1 Power On/Off

Press the power button on the control panel or remote to turn the fireplace on or off.

5.2 Flame Effects

The fireplace offers 3D realistic flame effects with 4 adjustable brightness levels (L1-L4). Use the flame button on the control panel or remote to cycle through the brightness settings.

36" Electric Fireplace

Realistic Flame Visual Effect



4 Level Brightness



 400 Sq.Ft/
5000BTU

 **Silence embraced**
by warmth (<40db)

 64°F-82°F
Heating Control

 **UL Listed**

Image 5.2: Visual representation of the four flame brightness levels (L1 to L4).

5.3 Heating Function

The heater provides warmth for areas up to 400 sq. ft. with a heat output of 5000 BTU. The temperature can be adjusted from 62°F to 82°F. Use the temperature control buttons on the remote or control panel to set your desired heat level.

5.4 Timer Function

Set a timer for the heater to automatically turn off after a specified duration, up to 6 hours. Refer to the remote control or control panel section for specific timer setting instructions.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your electric fireplace.

6.1 Cleaning

- Always unplug the fireplace before cleaning.
- **Mantel:** Wipe the wood surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners.
- **Fireplace Insert:** Gently wipe the glass and exterior surfaces with a soft, lint-free cloth. Do not spray cleaners directly onto the unit.
- **Air Intake/Outlet:** Periodically vacuum the air intake and outlet vents to prevent dust buildup, which can affect heating efficiency.

6.2 Storage

If storing the fireplace for an extended period, ensure it is clean and dry. Store in a cool, dry place, protected from dust and moisture.

7. TROUBLESHOOTING

If you encounter issues with your electric fireplace, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Fireplace does not turn on.	No power, tripped circuit breaker, loose plug.	Check power outlet, reset circuit breaker, ensure plug is fully inserted.
No heat output.	Heater function off, temperature setting too low, thermal cut-off activated.	Activate heater, increase temperature setting, unplug for 15 minutes to reset thermal cut-off.
Flames are not visible or dim.	Flame brightness set too low, LED issue.	Increase flame brightness using the control panel or remote.
Remote control not working.	Dead batteries, obstruction, remote out of range.	Replace batteries, remove obstructions, ensure remote is within operating range.

8. SPECIFICATIONS

Feature	Specification
Brand	OKD
Model Name	RPC52FP36V2
Product Dimensions (D x W x H)	15.6" x 52" x 36"
Item Weight	131 Pounds
Material	Engineered Wood
Power Source	Corded Electric
Installation Type	Freestanding
Special Feature	Timer, Adjustable 3D Flame, Remote Control
Heating Area Coverage	Up to 400 Sq.Ft.
Heat Output	5000 BTU
Temperature Range	62°F - 82°F
Flame Brightness Levels	4 Levels

9. WARRANTY AND SUPPORT

For any questions, concerns, or assistance with your OKD electric fireplace, please contact our customer service team. Our support is available 24 hours to assist you.

Please refer to your purchase documentation for specific warranty details. Keep your proof of purchase for warranty claims.

