

[Manuals.plus](#) /

› [KREAFUNK](#) /

› Kreamfunk Ivy Alarm Clock User Manual

KREAFUNK KFEW22

Kreamfunk Ivy Alarm Clock User Manual

INTRODUCTION

The Kreamfunk Ivy is designed to enhance both your mornings and evenings. As an elegant light alarm clock, Ivy seamlessly integrates into your room, fostering a serene and inviting atmosphere. It also functions as a wireless Bluetooth speaker with a water-resistant design, allowing you to enjoy your music and podcasts, even outdoors. Ivy gently wakes you with a softening light before the alarm sounds, preventing sudden, jarring noises and ensuring you wake up feeling refreshed and centered.

FEATURES

- Dimensions: 90 x 46 x 110 mm
- Splash protection (IPX4)
- Weight: 300 g
- Speaker: 3W
- Battery life with display on: up to 60 hours
- Battery life with display off: up to 30 days
- Charging time: 2-3 hours
- Alarm function
- 6 alarm ringtones
- Adjustable snooze function
- Progressive alarm
- Relaxing wake-up and sleep sounds
- Adjustable LED display
- Battery: 3.7 V, 2200 mAh
- Frequency range: 2402-2480 MHz

SETUP

1. Initial Charging

Connect the Ivy alarm clock to a power source using the provided charging cable. The LED display will indicate charging status. A full charge takes approximately 2-3 hours.

2. Power On/Off

Press and hold the power button (located on the top of the device) to turn the device on or off.

3. Bluetooth Pairing

When powered on, the Ivy will automatically enter Bluetooth pairing mode. Search for 'Kreafunk Ivy' on your device's Bluetooth settings and connect. A confirmation sound will indicate successful pairing.

OPERATING INSTRUCTIONS

Setting the Time

Use the control buttons on the top of the device to navigate to the time setting mode. Adjust the hours and minutes using the appropriate buttons, then confirm your selection.

Setting an Alarm

Access the alarm settings via the control buttons. You can choose from 6 different alarm ringtones and set the desired wake-up time. The progressive alarm feature will gently increase the light and sound intensity over a set period before the main alarm time.

Snooze Function

When the alarm sounds, press the snooze button (usually the largest button on top) to temporarily pause the alarm. The snooze duration is adjustable in the settings.

Light Function

The Ivy features a softening light that can be used as a wake-up light or for ambient lighting. Adjust brightness levels using the dedicated light control buttons. The light will gradually brighten before your set alarm time.

Relaxing Sounds

Utilize the built-in relaxing sounds for sleep or relaxation. Select from various soundscapes through the sound mode button. You can set a timer for these sounds to play.

Bluetooth Speaker

Once paired with your device, play audio from your connected smartphone, tablet, or computer through the Ivy's speaker. Adjust volume using the device's controls or your connected device.



The Kreafunk Ivy alarm clock, featuring a sleek black design with a circular speaker grille, positioned on a wooden shelf. It functions as both an alarm clock and a wireless Bluetooth speaker.



A close-up view of the Kreafunk Ivy alarm clock being held in hands, clearly showing its amber LED display with the current time (13:15) and a set alarm time (08:00).

MAINTENANCE

To ensure the longevity and optimal performance of your Kreafunk Ivy, follow these maintenance guidelines:

- **Cleaning:** Clean the device with a soft, dry cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the surface.
- **Water Exposure:** While the device has IPX4 splash protection, do not immerse it in water or expose it to heavy rain. Ensure the charging port cover is securely closed to maintain water resistance.
- **Storage:** Store the Ivy in a cool, dry place when not in use for extended periods. Avoid extreme temperatures.
- **Battery Care:** For best battery life, avoid fully discharging the battery frequently. Charge the device regularly.

TROUBLESHOOTING

- **Device not turning on:** Ensure the device is fully charged. Connect to a power source and try again. If the issue persists, perform a soft reset by holding the power button for 10 seconds.

- **Bluetooth not connecting:** Make sure Bluetooth is enabled on your device and the Ivy is in pairing mode (indicated by a flashing Bluetooth icon). Try unpairing and re-pairing the device. Ensure no other devices are currently connected to the Ivy.
- **Alarm not sounding:** Verify the alarm time is set correctly and the alarm volume is not muted or set too low. Check if the alarm is enabled in the settings.
- **Display not working or dim:** Check the battery level. The display brightness can be adjusted in the settings. If the display remains unresponsive, contact support.
- **Poor sound quality:** Ensure the device is within Bluetooth range of your connected device. Check the audio source for quality issues.

SPECIFICATIONS

Feature	Detail
Model Number	KFEW22
Brand	KREAFUNK
Dimensions (L x W x H)	90 x 46 x 110 mm
Weight	300 Grams
Material	Recycled materials
Power Source	Battery
Battery Type	3.7 V, 2200 mAh
Charging Time	2-3 hours
Battery Life (Display On)	Up to 60 hours
Battery Life (Display Off)	Up to 30 days
Speaker Output	3W
Frequency Range	2402-2480 MHz
Water Resistance	IPX4 (Splash protection)
Alarm Functions	6 ringtones, adjustable snooze, progressive alarm, relaxing sounds
Display Type	Adjustable LED
Clock Movement	Quartz

WARRANTY AND SUPPORT

The Kreamfunk Ivy alarm clock comes with a **Limited Warranty**. For specific details regarding the warranty period and coverage, please refer to the warranty card included with your purchase or visit the official KREAFUNK website.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact KREAFUNK customer service through the contact information provided on their official website or your purchase documentation. Please have your model number (KFEW22) and proof of purchase ready when

contacting support.