

[manuals.plus](#) /

› [PUSOKEI](#) /

› [PUSOKEI Wireless Scrolling Remote \(Model PUSOKElytkni890gg-12\) User Manual](#)

PUSOKEI PUSOKElytkni890gg-12

PUSOKEI Wireless Scrolling Remote User Manual

Model: PUSOKElytkni890gg-12

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your PUSOKEI Wireless Scrolling Remote. This device offers versatile control for your smartphone or tablet, enabling functions such as page turning, video recording, photo capture, and mouse pointer control. Please read this manual thoroughly before using the product to ensure optimal performance and longevity.

PRODUCT OVERVIEW

The PUSOKEI Wireless Scrolling Remote is a compact, wearable device designed for convenient remote control of mobile devices. It features a touch panel for intuitive navigation and physical buttons for various functions. Its ergonomic design allows for comfortable wear on a finger, making it ideal for extended use.

Touch screen remote control



Take pictures/videos

page-turning
Watch video

Slide slowly
up and down

Automatic like
Up/down song

Mobile mouse

Compatible APP:

48-hour battery life

Image: Front view of the PUSOKEI Wireless Scrolling Remote, highlighting its touch screen and various functions like taking pictures/videos, page-turning, watching videos, sliding up and down, automatic liking, and mobile mouse capabilities. It also indicates a 48-hour battery life.

Key Features:

- Touch Panel Control:** Navigate and interact with your device using the integrated touch panel, supporting mouse pointer movement and clicks.
- Multi-functional Operation:** Control page scrolling (up, down, left, right), volume adjustment, media playback (pause/start), photo capture, and video recording.
- Wireless Connectivity:** Utilizes advanced Bluetooth 5.3 for stable and fast connections up to 10 meters (32.8 feet).
- Long Battery Life:** Provides approximately 48 hours of usage on a single charge.
- Compact and Wearable Design:** Designed to be worn on a finger for hands-free operation.

SPECIFICATIONS

Feature	Detail
---------	--------

Model Number	PUSOKElytkni890gg-12
Connectivity	Bluetooth 5.3
Wireless Range	Approx. 10m / 32.8ft
Battery Type	90mAh Li-ion battery
Working Hours	Approximately 48 hours
Charging Time	Approximately 1 hour
Charging Port	Type-C
Product Size	Approx. 36 x 39 x 31mm / 1.42 x 1.54 x 1.22in
Material	ABS
Item Weight	1.83 ounces
Compatible Devices	Mobile phones, Tablets

SETUP

1. Charging the Device

Before first use, fully charge the PUSOKEI Wireless Scrolling Remote. Connect the provided Type-C charging cable to the charging port on the device and to a standard USB power source (e.g., computer, wall adapter).



Image: The white PUSOKEI Wireless Scrolling Remote shown next to its Type-C charging cable, illustrating the charging port location.

- A full charge takes approximately 1 hour.
- The device provides approximately 48 hours of working time on a full charge.
- An indicator light (if present, not specified in JSON) typically shows charging status. Refer to the device for specific light behavior.

2. Bluetooth Pairing

To connect the remote to your mobile phone or tablet:

1. Ensure the remote is sufficiently charged.
2. Turn on the remote control. (Specific power button location not provided, assume standard operation).
3. On your mobile device (phone or tablet), go to the Bluetooth settings.
4. Enable Bluetooth and search for available devices.
5. Select "PUSOKEI Remote" or a similar name from the list of found devices to initiate pairing.
6. Once paired, your device will indicate a successful connection.

The remote can now be used to control your paired device within a 10-meter range.

OPERATING INSTRUCTIONS

The PUSOKEI Wireless Scrolling Remote offers various control methods for different applications.



Image: A close-up view of the PUSOKEI Wireless Scrolling Remote, highlighting its central touch panel and the three control buttons located below it.

Touch Panel Control:

- **Scrolling/Page Turning:** Swipe your finger on the touch panel in the desired direction (up, down, left, right) to scroll content or turn pages in apps like e-readers or social media feeds.
- **Mouse Pointer Control:** Move your finger across the panel to move the mouse pointer on your device screen. Tap to click.

Button Functions:

The remote features additional buttons for specific actions. While the exact mapping may vary slightly depending on the application and device, common functions include:

- **Volume Control:** Buttons may be assigned to increase or decrease media volume.
- **Media Playback:** Buttons can control play/pause functions for videos or music.
- **Photo/Video Capture:** A dedicated button or a combination of presses can trigger the camera shutter or start/stop video recording. This allows for remote selfies and group photos.
- **"Like" Function:** In some social media applications (e.g., TikTok), a button might be configured to automatically "like" content.

Note: The specific functionality of buttons and touch gestures can be influenced by the application you are using. Experiment with different apps to discover the full range of controls.



Image: A person's hand wearing the PUSOKEI Wireless Scrolling Remote, demonstrating its use while interacting with a smartphone in the background.

MAINTENANCE

To ensure the longevity and proper functioning of your PUSOKEI Wireless Scrolling Remote, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the remote. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals, solvents, or abrasive cleaners.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops and Impacts:** Protect the device from physical shocks, as these can damage internal components.
- **Water Exposure:** The remote is not waterproof. Avoid exposing it to water or other liquids.
- **Charging:** Only use the provided Type-C cable or a certified equivalent for charging. Do not overcharge the device.

TROUBLESHOOTING

If you encounter issues with your PUSOKEI Wireless Scrolling Remote, refer to the following common solutions:

- **Remote Not Turning On:**

- Ensure the battery is charged. Connect the remote to a power source using the Type-C cable.
- Press and hold the power button (if applicable) for a few seconds.

- **Unable to Pair with Device:**

- Make sure Bluetooth is enabled on your phone/tablet.
- Ensure the remote is in pairing mode (often indicated by a blinking LED).
- Move the remote closer to your phone/tablet (within 10 meters).
- Turn off and on Bluetooth on your phone/tablet, then try searching again.
- Restart both the remote and your mobile device.
- Forget the device from your phone's Bluetooth settings and try pairing again.

- **Remote Not Responding After Pairing:**

- Check if the remote's battery is low.
- Ensure the remote is still connected via Bluetooth (check your device's Bluetooth settings).
- Some apps may require specific permissions or settings to work with external controllers. Check app settings.
- Try disconnecting and reconnecting the Bluetooth connection.

- **Touch Panel or Buttons Not Working Correctly:**

- Clean the touch panel and buttons to ensure no debris is interfering.
- Restart the remote and your mobile device.

If the problem persists after trying these steps, please contact customer support.

WARRANTY AND SUPPORT

PUSOKEI products are designed for reliability and performance. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official PUSOKEI website. If you require assistance, please have your model number (PUSOKElytkni890gg-12) and purchase details ready when contacting support.