

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Chefman](#) /

› [Chefman 12-in-1 Air Fryer Toaster Oven Combo Instruction Manual \(Model FBACRT2CHERJ50SST2PRB\)](#)

Chefman FBACRT2CHERJ50SST2PRB

Chefman 12-in-1 Air Fryer Toaster Oven Combo Instruction Manual

Model: FBACRT2CHERJ50SST2PRB

INTRODUCTION

Thank you for choosing the Chefman 12-in-1 Air Fryer Toaster Oven Combo. This versatile appliance is designed to simplify your cooking experience with multiple functions and intuitive controls. Please read this manual thoroughly before operation to ensure safe and efficient use of your new appliance.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including:

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is equipped with advanced over-heat protection and automatic shut-off for added safety.

PRODUCT OVERVIEW


The Chefman 12-in-1 Air Fryer Toaster Oven Combo is a versatile countertop appliance offering a wide range of cooking functions. Its stainless steel design ensures durability and a sleek appearance.

Key Features:

- **12-in-1 Functionality:** Air Fry, Toast, Broil, Bake, Dehydrate, Air Roast, Air Broil, Bagel, Air Bake, Reheat, and more.
- **Integrated Probe Thermometer:** Ensures perfectly cooked foods by displaying real-time temperature updates.
- **9 One-Touch Presets:** Includes Air Fry, Air Roast, Toast, Bake, Air Broil, Bagel, Air Bake, Reheat, and Dehydrate.
- **Customizable Temperature Range:** From 95°F to 450°F.
- **Family Size Capacity:** 20-quart interior fits 4 slices of toast, a 10-inch pizza, or a 6-pound chicken.
- **User-Friendly Controls:** Digital display with touch controls for easy operation.
- **Interior Light:** For easy viewing of cooking progress.

Components and Accessories:

- Main Unit (Air Fryer Toaster Oven)
- 2 Dehydrating Racks
- Air Fry Basket
- Baking Rack
- Broil Pan
- Probe Thermometer
- Pull-Out Crumb Tray

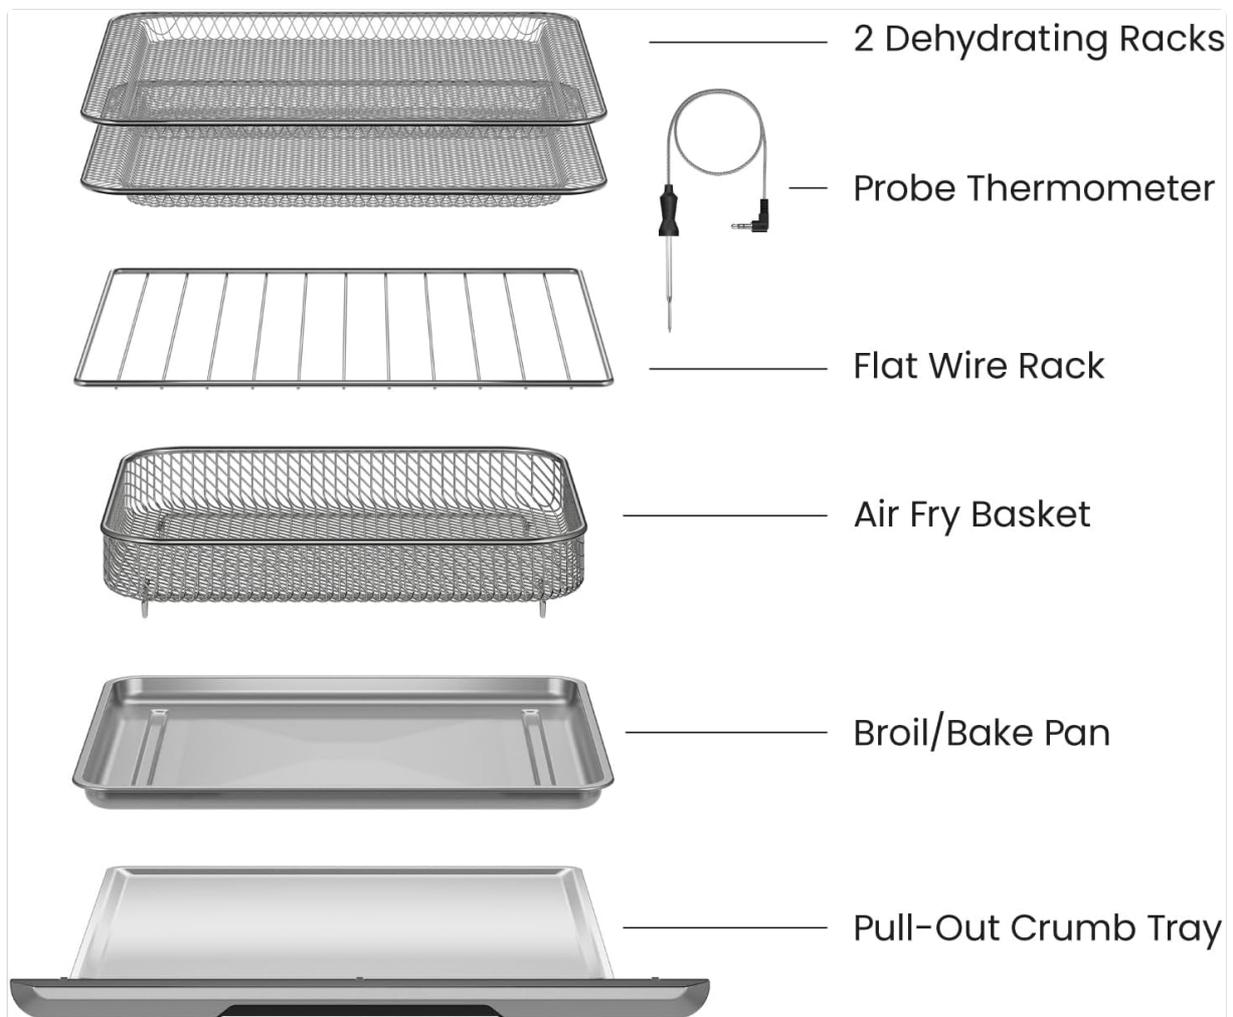

Dishwasher-Safe Accessories

Keep cleanup simple

Image: Included accessories for the Chefman Air Fryer Toaster Oven, showing two dehydrating racks, a probe thermometer, a flat wire rack, an air fry basket, a broil/bake pan, and a pull-out crumb tray.

SETUP

1. **Unpacking:** Carefully remove all packaging materials, including any internal packing and protective films.
2. **Initial Cleaning:** Before first use, wipe the exterior of the appliance with a damp cloth. Wash all removable accessories (dehydrating racks, air fry basket, baking rack, broil pan, crumb tray) in warm, soapy water, then rinse and dry thoroughly.
3. **Placement:** Place the appliance on a stable, level, heat-resistant surface, away from walls or other appliances to allow for proper ventilation. Ensure there is at least 4-6 inches of space on all sides.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

The control panel features a digital display and touch buttons for selecting functions, adjusting settings, and starting/stopping cooking cycles.



Probe
Thermometer



9 Cooking
Presets



95°F–450°F
Range



CHEFMAN ExacTemp™ 20-Quart Air Fryer Oven

Image: Close-up of the Chefman Air Fryer Toaster Oven's digital control panel, showing buttons for Air Fry, Bake, Air Bake, Air Roast, Air Broil, Reheat, Toast, Bagel, and Dehydrate, along with temperature and time displays, and controls for light, power, and probe.

Selecting a Cooking Function:

Press the desired function button on the control panel. The default temperature and time for that function will appear on the display.

- **Air Fry:** For crispy results with little to no oil.
- **Bake:** Ideal for cakes, cookies, and casseroles.
- **Air Bake:** Combines baking with convection for even cooking.
- **Air Roast:** Perfect for roasting meats and vegetables.
- **Air Broil:** For quick cooking and browning.
- **Reheat:** Warms up leftovers efficiently.
- **Toast:** For bread and pastries. Adjust shade settings.
- **Bagel:** Toasts bagels to perfection. Adjust shade settings.
- **Dehydrate:** For drying fruits, vegetables, and making jerky.

Adjusting Temperature and Time:

After selecting a function, use the '+' and '-' buttons next to the temperature and time displays to adjust the

settings to your preference. For Toast and Bagel functions, use the shade selector to choose your desired browning level (Light to Dark).

Using the Probe Thermometer:

The integrated probe thermometer ensures precise cooking. Insert the probe into the thickest part of the food, avoiding bone. Plug the probe into the designated port on the appliance. The display will show the real-time internal temperature. You can set a target temperature, and the oven will automatically stop cooking once reached.



Perfectly cooked food in minutes

Integrated cooking thermometer alerts you when it's time to flip, rest, and enjoy your food

Image: A close-up view of the Chefman Air Fryer Toaster Oven's interior, showing a probe thermometer inserted into a whole roasted chicken, indicating precise temperature monitoring during cooking.

Starting and Stopping:

Press the **START/STOP** button to begin or end a cooking cycle. The interior light can be toggled on/off using the light button for better visibility.



XL Family-Size Capacity

Perfectly sized for family meals or entertaining guests

Image: The spacious interior of the Chefman Air Fryer Toaster Oven, showcasing a large roasted chicken and various vegetables on a baking pan, demonstrating its family-sized capacity.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your Chefman Air Fryer Toaster Oven.

1. **Before Cleaning:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
2. **Exterior:** Wipe the exterior with a damp cloth and mild detergent. Do not use abrasive cleaners or scouring pads, as they may damage the stainless steel finish.
3. **Interior:** The interior can be wiped with a damp cloth. For stubborn food residue, use a non-abrasive sponge with warm, soapy water. Ensure the interior is completely dry before next use.
4. **Removable Parts:** The baking rack, air fry basket, dehydrating racks, broil pan, and pull-out crumb tray are dishwasher-safe for easy cleaning. For best results, hand wash with warm, soapy water.
5. **Crumb Tray:** Regularly pull out and empty the crumb tray to prevent buildup and potential fire hazards.

TROUBLESHOOTING

If you encounter any issues with your appliance, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outage; faulty outlet.	Ensure plug is securely in a working outlet. Check circuit breaker.
Food is not cooking evenly.	Overcrowding; incorrect temperature/time; racks not positioned correctly.	Do not overcrowd the basket/pan. Adjust temperature/time. Ensure racks are in recommended positions. Flip or rotate food halfway through cooking.
Smoke coming from the appliance.	Excess oil/grease; food residue; fatty foods.	Clean the appliance and accessories thoroughly. Use less oil. For fatty foods, place a piece of foil under the food to catch drips.
Probe thermometer not reading correctly.	Probe not fully inserted; probe port dirty.	Ensure probe is fully inserted into the thickest part of the food. Clean the probe and its port.

If the problem persists, please contact Chefman Customer Support.

SPECIFICATIONS

- **Model Name:** FBACRT2CHERJ50SST2PRB
- **Brand:** Chefman
- **Capacity:** 20 Quarts
- **Color:** Stainless Steel
- **Material:** Stainless Steel
- **Product Dimensions (D x W x H):** 15.8"D x 16.59"W x 14.11"H
- **Item Weight:** 17.6 Pounds
- **Output Wattage:** 1800 Watts
- **Voltage:** 120 Volts
- **Control Method:** Touch
- **Min Temperature Setting:** 95 Degrees Fahrenheit
- **Max Temperature Setting:** 450 Degrees Fahrenheit
- **Has Nonstick Coating:** Yes
- **Is the item dishwasher safe?:** Yes (for removable parts)
- **UL Certified:** Yes

WARRANTY AND SUPPORT

Your Chefman 12-in-1 Air Fryer Toaster Oven Combo comes with a 90-day limited warranty, with a 1-year assurance provided by Chefman. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical support, or any questions regarding your product, please contact Chefman Customer Support. Keep your proof of purchase for warranty validation.

For the most up-to-date support information, please visit the official Chefman website or refer to the

contact details provided in your product packaging.