

[Manuals.plus](#) /

> [FoundEast](#) /

> FoundEast Smartwatch Band Instruction Manual for Sunorshop T54, H69, H95

FoundEast Sunorshop T54/H69/H95 Compatible Smartwatch Band

FoundEast Smartwatch Band Instruction Manual

Compatible with Sunorshop T54, H69, H95 Smartwatches

1. INTRODUCTION

Thank you for choosing the FoundEast Smartwatch Band. This replacement strap is designed for compatibility with Sunorshop T54, H69, and H95 smartwatch models. Crafted from premium silicone, it offers a comfortable and durable wearing experience. This manual provides instructions for proper installation, usage, and maintenance to ensure optimal performance and longevity of your new band.

2. PRODUCT FEATURES

- **Compatibility:** Specifically designed for Sunorshop T54, Sunorshop H69, and Sunorshop H95 smartwatches.
- **Material:** Made from premium silicone, ensuring a lightweight, soft, and comfortable feel on the wrist. The material is also durable for daily wear.
- **Clasp:** Features a metal buckle clasp for secure fastening and an elegant appearance.
- **Adjustable Size:** Suitable for wrist sizes ranging from 5.6 inches to 8.5 inches. The strap length is 83 mm + 120 mm.
- **Easy Installation:** Equipped with upgraded quick-release pins for stable, reliable, and tool-free installation and removal.

3. PACKAGE CONTENTS

Upon opening your package, please verify that all items are present:

- 3 x FoundEast Smartwatch Bands (Smartwatch not included)

4. INSTALLATION GUIDE

Follow these steps to attach or detach the smartwatch band:

1. Detaching the Old Band (if applicable):

Locate the quick-release pin on the underside of your current smartwatch band where it connects to the watch lug. Slide the pin inwards to release one side of the band from the watch. Repeat for the other side.

2. Attaching the New Band:

Hold the new band with the quick-release pin facing the watch. Insert one end of the pin into the corresponding hole on the watch lug. Slide the quick-release pin inwards and align the other end with the opposite hole on the watch lug. Release the pin to secure the band. Gently tug on the band to ensure it is firmly attached.



Image: A detached black silicone smartwatch band, illustrating the quick-release pins at each end, ready for installation.

3. Verify Connection:

Once both sides of the band are attached, gently pull on the band to confirm it is securely fastened to

the smartwatch. A proper connection will prevent accidental detachment.



Image: A smartwatch with a black silicone band securely attached, viewed from the front.

5. WEARING AND ADJUSTMENT

To wear your smartwatch with the new band:

1. Place the smartwatch on your wrist.
2. Thread the end of the band through the metal buckle.
3. Adjust the band to a comfortable fit. It should be snug enough to stay in place during activity but not so tight that it restricts circulation or causes discomfort.
4. Secure the buckle pin into one of the adjustment holes on the band.



Image: The back of a smartwatch with a maroon silicone band attached, showing the secure connection points.

6. CARE AND MAINTENANCE

To maintain the quality and appearance of your silicone smartwatch band:

- **Cleaning:** Regularly clean the band with a soft, damp cloth. For deeper cleaning, use mild soap and water, then rinse thoroughly and dry completely before reattaching to your smartwatch.
- **Avoid Harsh Chemicals:** Do not expose the band to strong chemicals, solvents, or abrasive cleaners, as these can damage the silicone material.
- **Storage:** When not in use, store the band in a clean, dry place away from direct sunlight and extreme temperatures.
- **Avoid Overstretching:** While silicone is flexible, avoid excessive stretching or pulling to prevent deformation or damage.

7. TROUBLESHOOTING

Issue	Possible Cause	Solution
Band does not attach securely.	Quick-release pin not fully engaged; incorrect alignment.	Ensure both ends of the quick-release pin are properly seated in the watch lug holes. Gently push the pin inwards and release once aligned.
Band feels uncomfortable or too loose/tight.	Incorrect adjustment.	Adjust the buckle to a different hole on the band until a comfortable and secure fit is achieved.
Band appears dirty or discolored.	Accumulation of sweat, dirt, or oils.	Clean the band as described in the "Care and Maintenance" section.

8. SPECIFICATIONS

- **Product Type:** Smartwatch Replacement Band
- **Brand:** FoundEast
- **Compatible Smartwatch Models:** Sunorshop T54, Sunorshop H69, Sunorshop H95
- **Material:** Premium Silicone with Stainless Steel buckle
- **Strap Length:** 83 mm + 120 mm
- **Wrist Circumference:** 5.6 inches to 8.5 inches
- **Installation:** Quick-release pins

9. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your FoundEast Smartwatch Band, please refer to your purchase documentation or contact the seller directly. Specific warranty details may vary based on the point of purchase.