



Manuals.plus /

› CAMWORLD /

› CAMWORLD 4K 20MP Action Camera V30A-T User Manual

CAMWORLD V30A-T

CAMWORLD 4K 20MP Action Camera V30A-T User Manual

Your guide to setting up, operating, and maintaining your CAMWORLD Action Camera.

1. SETUP

1.1 Unboxing and Initial Inspection

Carefully unpack all items from the box. Ensure all components are present:

- Flat/Curved Helmet Mount Base ×1, Waterproof Case Base ×1, Adapter ×1
- J-Hook Base ×1, Long Arm 90° Adapter ×1, Short Arm 90° Adapter ×1
- Bicycle Holder ×1, Fixation Straps ×4, USB Cable ×1, Anti-Loss Lanyard ×1
- Waterproof Case ×1, User Manual ×1, 3M Adhesive Tape ×2
- Lens Cleaning Cloth ×1, Batteries ×2, Cable Ties ×4, Dock Charger ×1



Image: The complete accessories kit for the CAMWORLD V30A-T Action Camera, including various mounts, cables, and cleaning cloth.

1.2 Battery Installation and Charging

The camera comes with two rechargeable 1350mAh batteries. Insert a battery into the camera's battery compartment. Use the provided dock charger and USB cable to charge the batteries. Ensure batteries are fully charged before first use for optimal performance.



Image: The CAMWORLD Action Camera alongside its dual battery charger, illustrating the charging process.

1.3 Micro SD Card Insertion

Insert a Micro SD card (not included) into the designated slot. The camera supports Micro SD cards for storing your 4K videos and 20MP photos.

1.4 Waterproof Case Usage

For underwater adventures or protection against harsh environments, place the camera inside the durable waterproof case. Ensure the case is securely latched to prevent water ingress. The camera is waterproof up to 30 meters (98 feet) with the case.

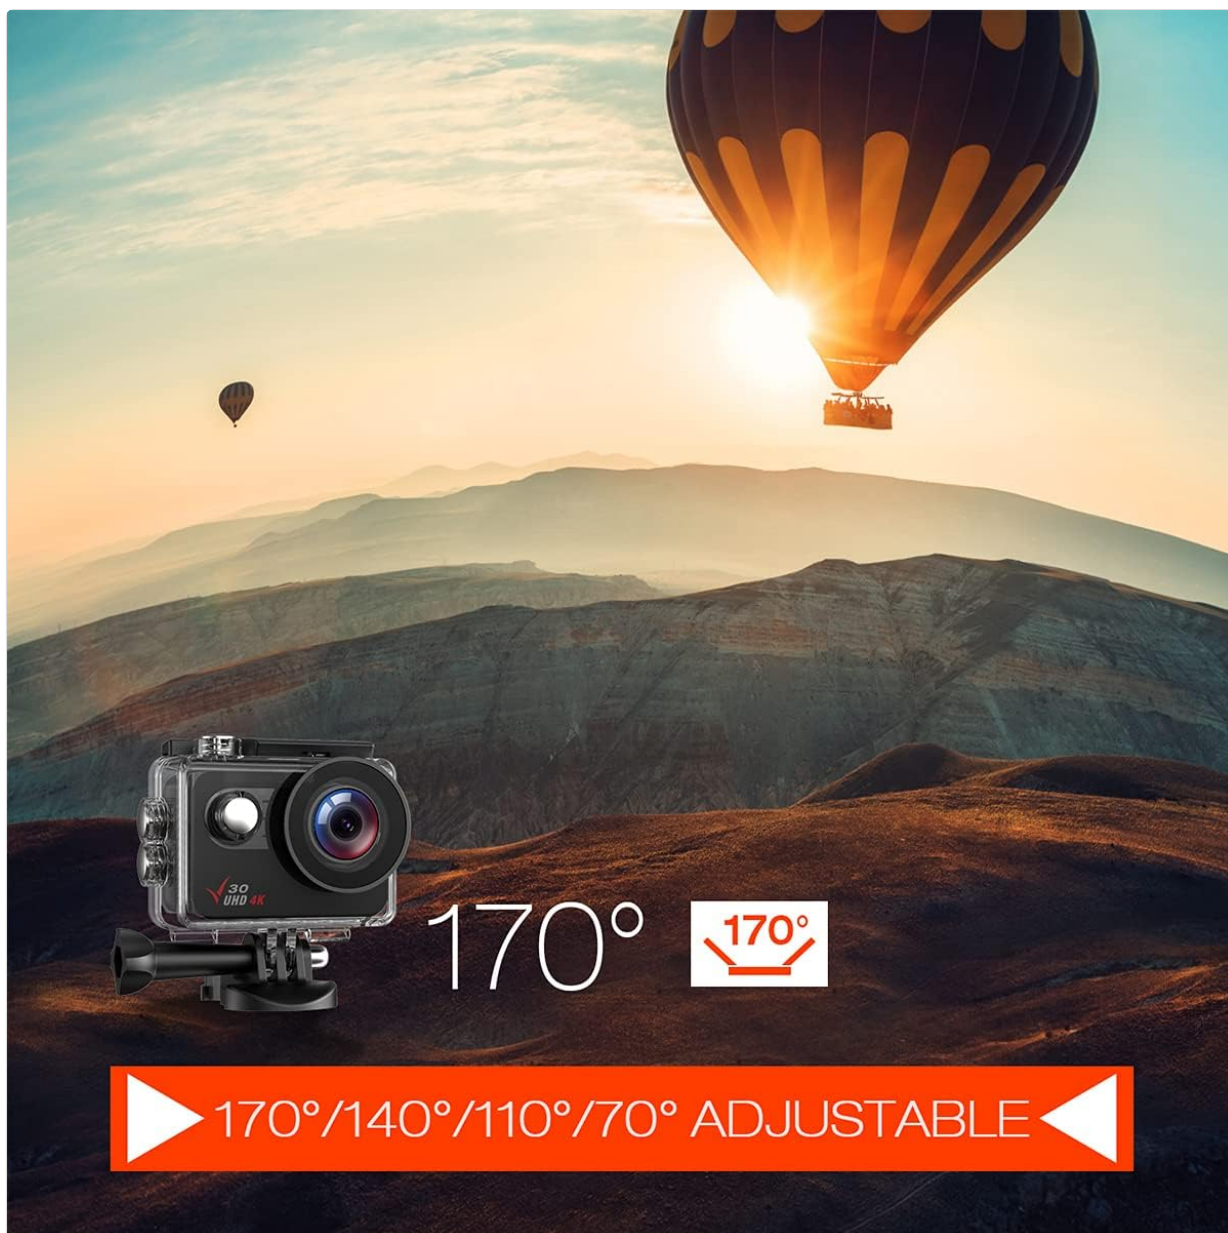


Image: The CAMWORLD Action Camera enclosed within its transparent waterproof housing, ready for underwater use.

Video: A demonstration of the CAMWORLD Action Camera in use, likely within its waterproof case, capturing a motorcycle ride. This video highlights the camera's performance in dynamic environments.

Video: A short clip showcasing the CAMWORLD Action Camera, emphasizing its compact size and the protective waterproof case.

2. OPERATING YOUR CAMERA

2.1 Power On/Off

To power on the camera, press and hold the Power button located on the top. To power off, press and hold the Power button again.

2.2 Basic Controls and Touch Screen

Navigate through menus and settings using the responsive 2-inch IPS touch screen. Swipe to switch modes, tap to select options, and adjust settings directly on the screen. Physical buttons are also available for quick actions.

▶ 2" IPS TOUCH SCREEN ◀



Image: A close-up of the CAMWORLD Action Camera's 2-inch IPS touch screen, demonstrating its interactive interface.

2.3 Video Recording (4K Ultra HD)

The camera records smooth 4K/30FPS video. Select 'Normal Video' mode and press the Shutter/OK button to start recording. Press again to stop. You can adjust video resolution and quality in the settings menu.

▶ NATIVE 4K/30FPS & 20MP ◀



Image: A visual comparison demonstrating the superior clarity of Native 4K/30FPS video compared to lower resolutions captured by the CAMWORLD Action Camera.

2.4 Photo Capture (20MP)

Capture 20MP crystal-clear photos. Switch to 'Normal Photo' mode and press the Shutter/OK button to take a picture.

2.5 Electronic Image Stabilization (EIS)

The advanced EIS feature ensures stable and smooth footage by reducing shakes and bumps. This is particularly useful during high-speed activities. Enable EIS in the camera settings for best results.



Image: A skateboarder in mid-air, with a smaller inset showing the effect of EIS (Electronic Image Stabilization) being off, highlighting the camera's stabilization capabilities.

2.6 Wide-Angle Lens

The 170° wide-angle lens captures a broad field of view, perfect for expansive landscapes or immersive action shots. The angle is adjustable through the camera settings.



Image: The CAMWORLD Action Camera positioned against a scenic mountain backdrop with hot air balloons, illustrating its 170° adjustable wide-angle capability.

2.7 WiFi Connectivity and App Usage

Connect your action camera to your smartphone via built-in WiFi. Download the companion app (refer to the user manual for app details) to instantly share moments, control the camera remotely, and adjust settings from your phone.

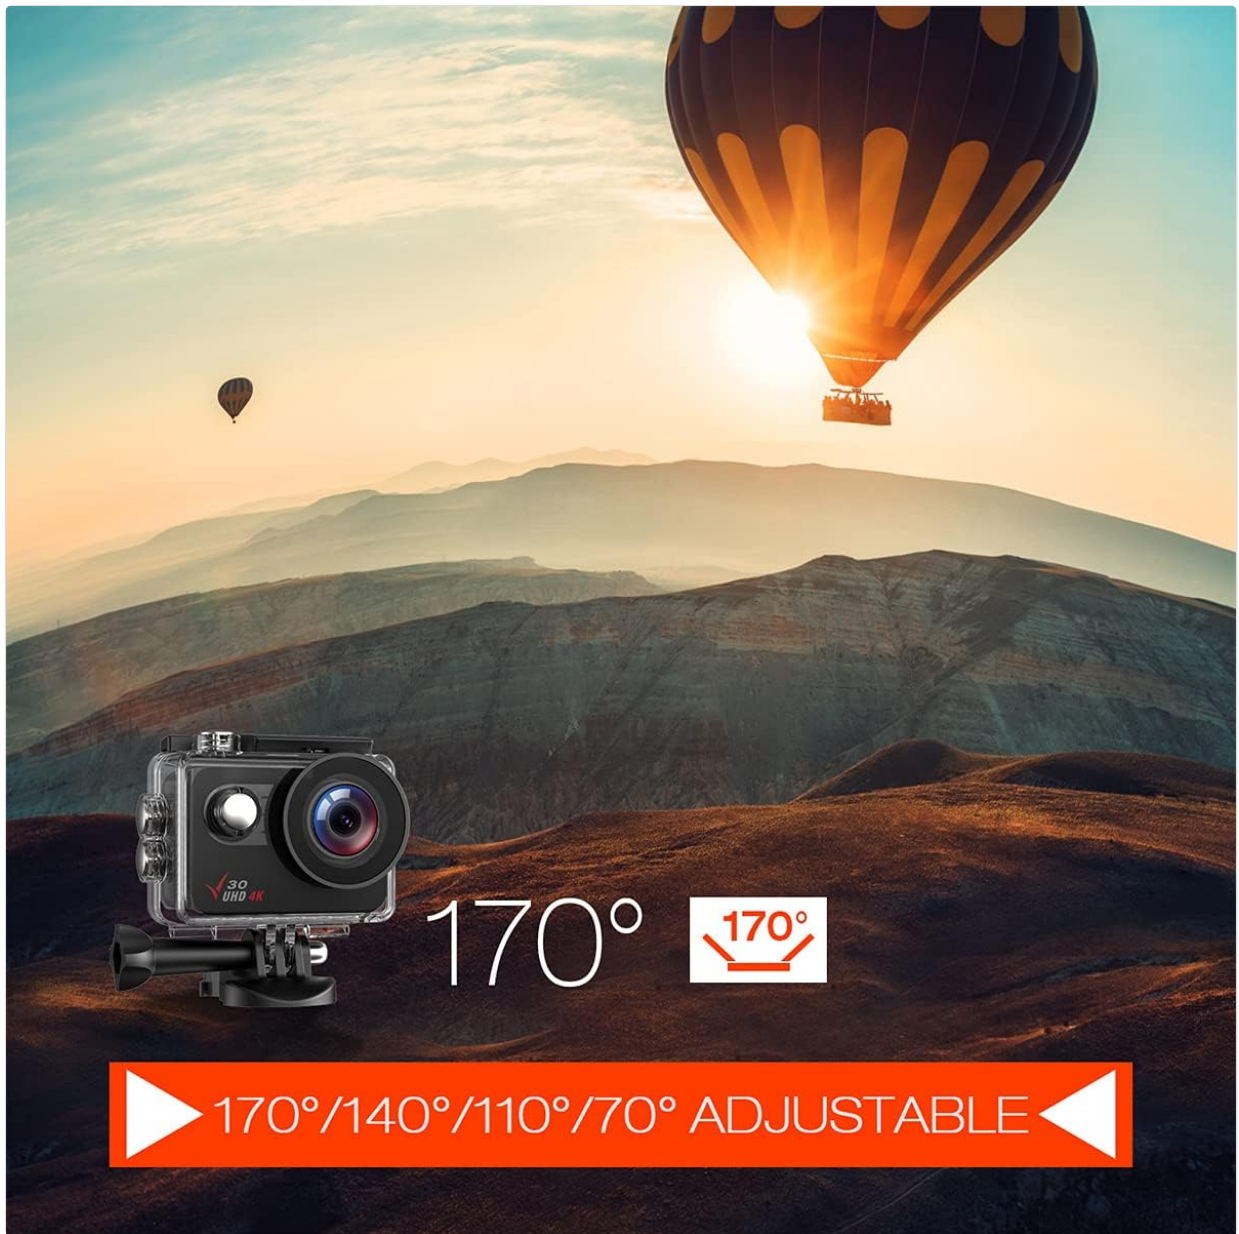


Image: The CAMWORLD Action Camera, its waterproof case, and a smartphone displaying the camera's interface, symbolizing seamless WiFi connectivity for sharing and control.

3. MAINTENANCE

3.1 Cleaning the Camera and Lens

Use the provided lens cleaning cloth to gently wipe the lens and screen. Avoid abrasive materials that could scratch surfaces. For the camera body, a soft, dry cloth is sufficient.

3.2 Battery Care and Storage

Store batteries in a cool, dry place. Avoid extreme temperatures. If not using the camera for an extended period, remove the batteries. Do not expose batteries to fire or water.

3.3 Waterproof Case Care

After each use in water, rinse the waterproof case with fresh water and allow it to air dry. Inspect the O-ring seal for any debris or damage. Replace if necessary to maintain waterproof integrity.

4. TROUBLESHOOTING

4.1 Common Issues and Solutions

- **Screen not visible in bright light:** Adjust the screen brightness in the camera's system settings.
- **No sound in videos:** Check the audio settings in the camera menu to ensure sound recording is enabled.
- **Camera not connecting to phone/computer via WiFi:** Ensure WiFi is enabled on the camera and your smartphone. Verify you have the correct app installed and are following the connection steps outlined in the detailed user manual. Restarting both devices can sometimes resolve connectivity issues.
- **Poor video quality:** Ensure you are recording in 4K/30FPS and EIS is enabled for optimal clarity and stability. Check that the lens is clean.

5. SPECIFICATIONS

Feature	Detail
Brand	CAMWORLD
Model Name	V30A-T
Video Capture Resolution	4K
Photo Sensor Technology	CMOS
Photo Resolution	20MP
Screen Size	2 Inches
Waterproof Depth (with case)	30 Meters
Special Features	Electronic Image Stabilization (EIS), WiFi Connectivity, Touch Screen, Compact Design
Batteries	2 x 1350mAh A batteries (included)

6. WARRANTY AND SUPPORT

6.1 Warranty Information

This product is covered by a standard manufacturer's warranty. For specific details regarding warranty duration and coverage, please refer to the warranty card included in your product packaging or contact CAMWORLD customer service.

6.2 Customer Support

For any questions, technical assistance, or support needs, please visit the official CAMWORLD website or contact our customer service team. Contact details can be found in the full user manual or on the product packaging.