

NC200UD

Generic Replacement Remote Control for Philips NC200UD

Instruction Manual

INTRODUCTION

This document provides instructions for the Generic replacement remote control, designed for use with Philips Home Theater and DVD systems that originally utilized the NC200UD remote control. Please note that this is a replacement unit and may not offer all functions present on the original Philips remote. Its primary purpose is to provide essential control over compatible devices.

SETUP

The remote control operates using infrared (IR) technology and typically does not require programming for compatible Philips devices. Simply insert the batteries to begin use.

Battery Installation

1. Locate the battery compartment cover on the back of the remote control.
2. Slide or lift the cover to open.
3. Insert two AAA batteries (not included), ensuring correct polarity (+ and -) as indicated inside the compartment.
4. Replace the battery compartment cover.

OPERATING INSTRUCTIONS

Point the remote control directly at your Philips Home Theater or DVD system. Ensure there are no obstructions between the remote and the device's IR receiver.

Common Functions

- **Power Button:** Turns the device on or off.
- **Volume Up/Down:** Adjusts the audio volume.
- **Mute Button:** Silences the audio output.

- **Playback Controls (Play, Pause, Stop, Fast Forward, Rewind):** Manages media playback on DVD systems.
- **Navigation Buttons (Up, Down, Left, Right, OK/Enter):** Used for menu navigation and selection.
- **Source/Input Button:** Switches between different input sources on your home theater system.

Note: Specific button functions may vary slightly depending on your Philips device model.

MAINTENANCE

Cleaning

Wipe the remote control with a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

Battery Replacement

Replace batteries when the remote's range decreases or buttons become unresponsive. Always replace both batteries simultaneously with new ones of the same type (AAA).

Storage

If storing the remote for an extended period, remove the batteries to prevent leakage, which can damage the remote.

TROUBLESHOOTING

Remote Not Responding

- Check battery polarity.
- Replace old batteries with new ones.
- Ensure a clear line of sight between the remote and the device's IR receiver.
- Verify that the remote is compatible with your specific Philips model (NC200UD or equivalent).

Limited Range

- Replace batteries.
- Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.

Certain Functions Not Working

- As a replacement remote, some advanced or device-specific functions may not be supported. Refer to your Philips device's original manual for specific function requirements.

SPECIFICATIONS

Feature	Specification
Brand	Generic
Model (Replacement For)	Philips NC200UD
Connectivity Technology	Infrared (IR)
Battery Type	2 x AAA (not included)
Maximum Range	Approximately 5 meters (16 feet)
Compatible Devices	Philips DVD/Blu-ray Player, Home Theater, Stereo System, Television, VCR (specifically those using the NC200UD remote)

WARRANTY AND SUPPORT

Warranty Information

Specific warranty details for this replacement remote control are not provided in this manual. Please refer to your purchase documentation or contact the seller directly for warranty inquiries.

Customer Support

For further assistance or troubleshooting not covered in this manual, please contact the seller or retailer from whom you purchased this product.