

PERFASCIN RC833A FMB2

PERFASCIN RC833A FMB2 Replacement Voice Remote Control User Manual

For TCL C7K Premium QD-Mini LED TV and C7K QLED 55P79K Models

INTRODUCTION

This manual provides instructions for the PERFASCIN RC833A FMB2 Replacement Voice Remote Control. It is designed to operate specific TCL TV models, including the C7K Premium QD-Mini LED TV and C7K QLED 55P79K. Please read this manual thoroughly before use to ensure proper setup and operation.

PACKAGE CONTENTS

- 1 x PERFASCIN RC833A FMB2 Replacement Voice Remote Control

PRODUCT OVERVIEW

The PERFASCIN RC833A FMB2 remote control features a standard layout with dedicated buttons for navigation, volume, channel control, and direct access to streaming services. It also includes a voice control function for enhanced interaction with your television.





Image 1: Front view of the PERFASCIN RC833A FMB2 Replacement Voice Remote Control, showing all buttons including number pad, navigation, volume, channel, and app shortcuts.



22 cm / 8.66 in





Image 2: Side and front view of the remote control, illustrating its physical dimensions (approximately 22 cm / 8.66 inches in length and 4.2 cm / 1.65 inches in width).

 
Button Functions

Button	Function
Power (Red button)	Turns the TV on or off.
Mute (Speaker with cross icon)	Mutes or unmutes the TV audio.
Number Pad (0-9)	Direct channel selection or inputting numbers.
Input Source (Arrow in box icon)	Selects the input source (HDMI, AV, etc.).
Navigation Pad (Up, Down, Left, Right, OK)	Navigates menus and confirms selections.
Back (Left arrow icon)	Returns to the previous screen or menu.
Voice Control (Microphone icon)	Activates the voice assistant for commands and search.
Home (House icon)	Returns to the TV's home screen.
Settings (Gear icon)	Accesses TV settings menu.
Volume Up/Down (VOL +/-)	Adjusts the TV volume.
Channel Up/Down (CH +/-)	Changes TV channels.
Netflix, Prime Video, YouTube, Stan., T Channel, Disney+	Direct access buttons for specified streaming applications.

Setup

1. Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals match the indicators inside the compartment.
4. Slide the battery cover back into place until it clicks securely.

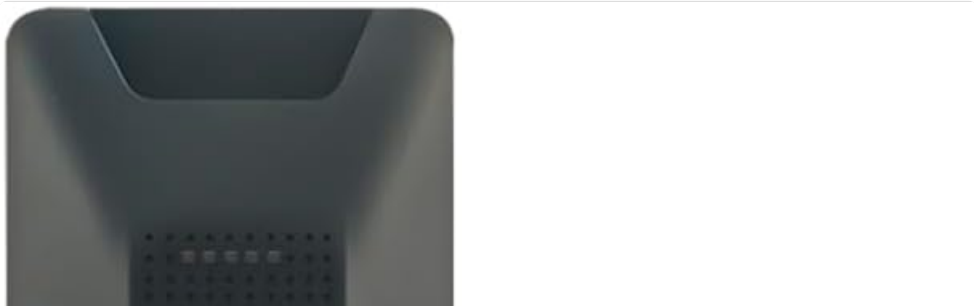

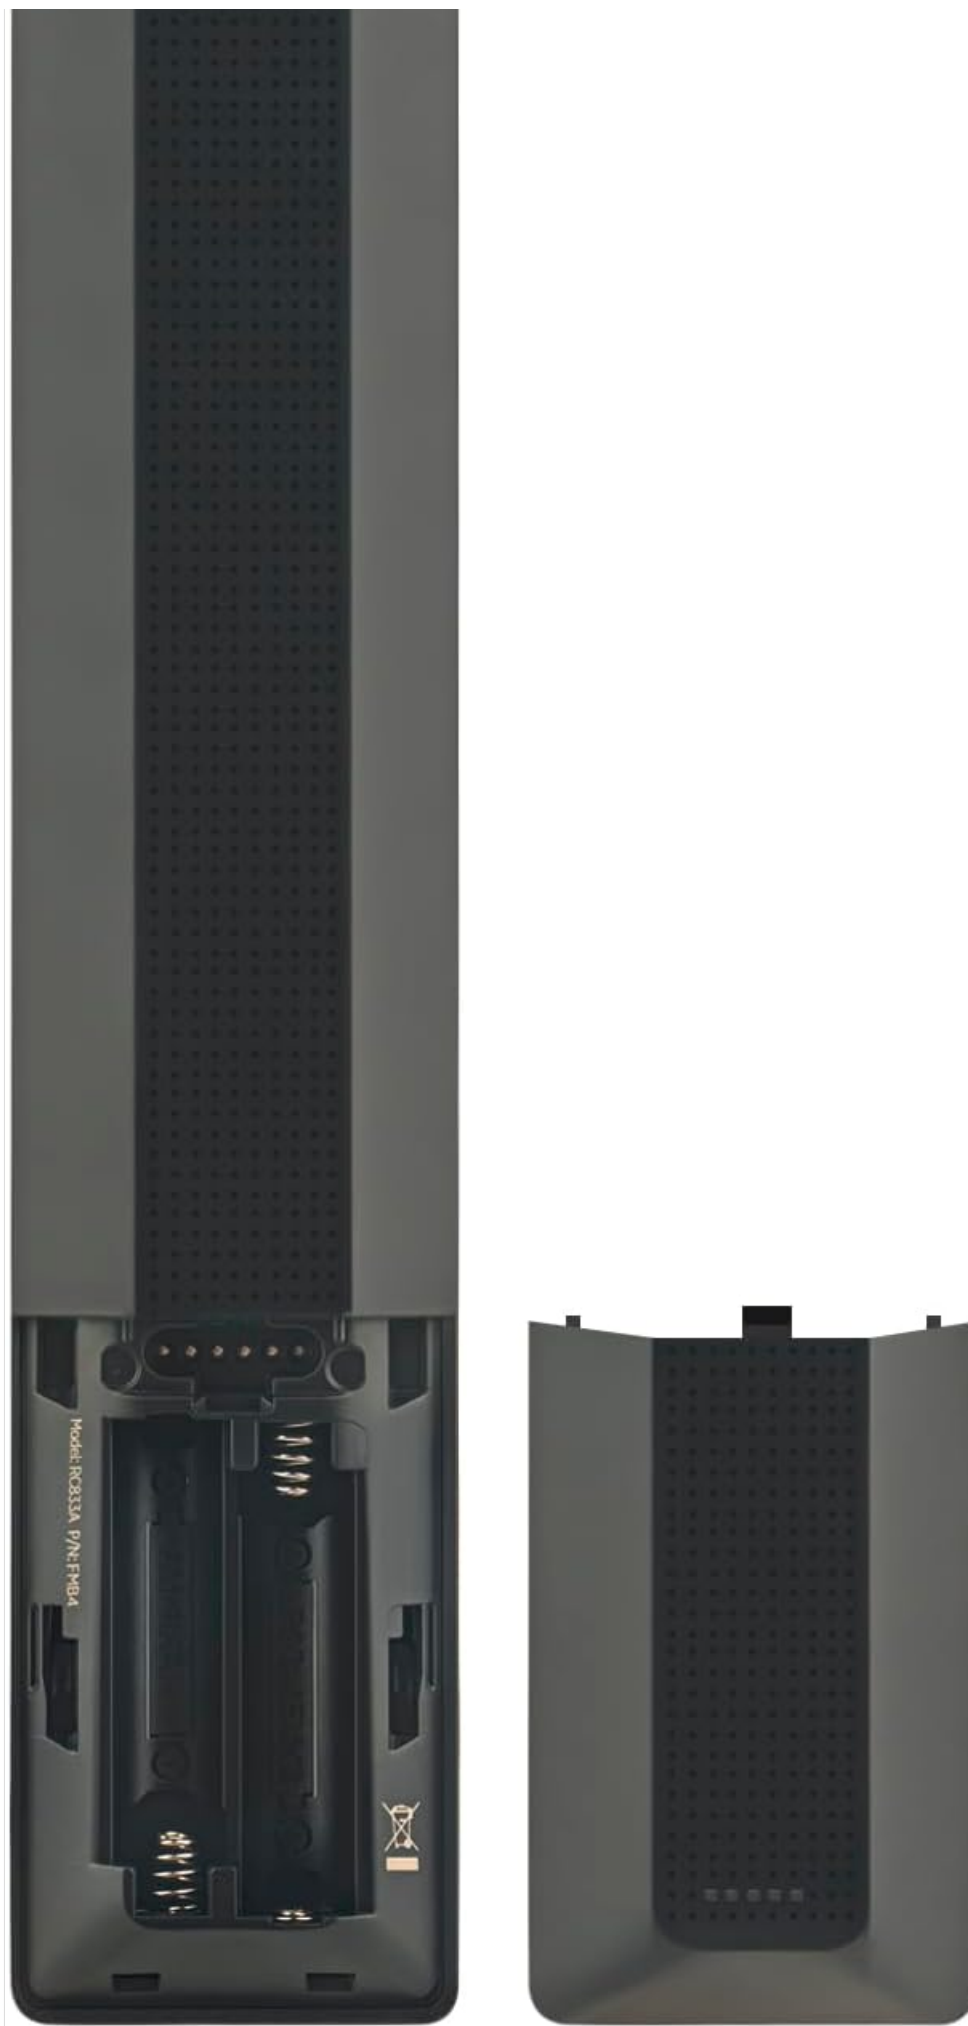


Image 3: Rear view of the remote control with the battery cover removed, showing the battery compartment for AAA

batteries.

2. Pairing the Remote Control (for Voice Functionality)

This remote control is a voice remote and requires pairing with your TCL TV to enable voice commands and full functionality. The pairing process may vary slightly depending on your specific TCL TV model. Refer to your TV's user manual for detailed pairing instructions if these steps do not work.

1. Ensure your TCL TV is powered on.
2. Press the **Home** button on your remote control.
3. Navigate to **Settings** on your TV screen.
4. Select **Remotes & Accessories** or a similar option.
5. Choose **Add Accessory** or **Pair Remote**.
6. Follow the on-screen prompts. You may be instructed to press and hold specific buttons on the new remote (e.g., the **OK** button and **Home** button simultaneously, or the **Voice Control** button) until an indicator light flashes or a message appears on the TV screen confirming successful pairing.
7. Once paired, test the voice control by pressing the **Voice Control** button and speaking a command.



Image 4: Close-up view of the remote control, specifically highlighting the voice control button with its microphone icon.

OPERATING THE REMOTE CONTROL

Basic TV Control

- **Power:** Press the **red power button** to turn the TV on or off.
- **Volume:** Use the **VOL +/-** buttons to adjust the sound level.
- **Channels:** Use the **CH +/-** buttons to change channels.
- **Navigation:** Use the **Up, Down, Left, Right** arrows and the **OK** button to navigate menus and select options.
- **Input Source:** Press the **Input Source** button to switch between connected devices (e.g., HDMI 1, HDMI 2).

Using Voice Control

After successful pairing, you can use voice commands:

1. Press and hold the **Voice Control** button (microphone icon).
2. Speak clearly into the remote control.
3. Release the button when you have finished speaking.
4. Examples of commands: "Open Netflix," "Search for action movies," "What's the weather like?"

App Shortcut Buttons

The remote includes dedicated buttons for quick access to popular streaming services:

- Press the **Netflix** button to launch the Netflix application.
- Press the **Prime Video** button to launch Amazon Prime Video.
- Press the **YouTube** button to launch YouTube.
- Other dedicated buttons (Stan., T Channel, Disney+) will launch their respective applications.

MAINTENANCE

Cleaning

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners or abrasive materials, as these can damage the remote.

Battery Replacement

- Replace batteries when the remote's response becomes sluggish or stops working.
- Always replace both batteries at the same time with new AAA batteries.
- Do not mix old and new batteries, or different types of batteries.
- Remove batteries if the remote will not be used for an extended period to prevent leakage.

TROUBLESHOOTING

Problem	Solution
---------	----------

 
 
Problem	Solution
Remote not responding.	<ul style="list-style-type: none">◦ Check if batteries are inserted correctly and have sufficient charge. Replace if necessary.◦ Ensure there are no obstructions between the remote and the TV's IR receiver.◦ If it's a voice remote, ensure it is properly paired with the TV.
Voice control not working.	<ul style="list-style-type: none">◦ Confirm the remote is successfully paired with your TV. Refer to the "Pairing the Remote Control" section.◦ Ensure you are pressing and holding the Voice Control button while speaking.◦ Check your TV's internet connection, as voice commands often require online processing.
App shortcut buttons not working.	<ul style="list-style-type: none">◦ Ensure the remote is paired correctly.◦ Verify that the respective applications are installed and updated on your TCL TV.◦ Check your TV's internet connection.

SPECIFICATIONS

- **Model:** RC833A FMB2
- **Compatible TV Models:** TCL C7K Premium QD-Mini LED TV, TCL C7K QLED 55P79K (RC833A-FMB2 G0401-000264)
- **Special Feature:** Voice Search
- **Power Source:** 2 x AAA Batteries (not included)
- **Material:** ABS
- **Color:** Black
- **Dimensions:** Approximately 22 cm (8.66 inches) x 4.2 cm (1.65 inches)
- **Weight:** Approximately 1 ounce (without batteries)

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided with your original purchase or contact the seller directly. The manufacturer, PERFASCIN, may also offer support resources. For further assistance, you may visit the [PERFASCIN brand page on Amazon](#).

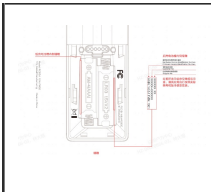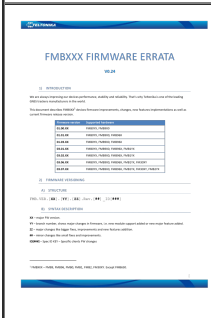	<p>TCL RC813A Remote Control: Battery Compartment and Identification Specs</p> <p>Technical specifications for the TCL RC813A remote control, detailing the battery compartment (AAA, LR03), model number (RC813A, FMB2), FCC ID (W8U-RC813C), IC (25533-RC813C), and versioning information (HVIN, FVIN).</p>
	<p>Teltonika FMBXXX Firmware Errata v0.24 - Release Notes and Updates</p> <p>Comprehensive list of firmware improvements, changes, and new features for Teltonika FMBXXX series GNSS trackers, detailing version updates from v0.24.</p>