

[Manuals.plus](#) /

› [Dikutar](#) /

› Dikutar 2 Person Portable Sauna Box - Model Portable-Sauna-002 User Manual

Dikutar Portable-Sauna-002

Dikutar 2 Person Portable Sauna Box - Model Portable-Sauna-002 User Manual

Your guide to safe and effective use of your portable steam sauna.

1. INTRODUCTION

Thank you for choosing the Dikutar 2 Person Portable Sauna Box. This manual provides essential information for the safe assembly, operation, and maintenance of your sauna. Please read all instructions carefully before use to ensure optimal performance and longevity of your product.



Image: The Dikutar 2 Person Portable Sauna Box, fully assembled and ready for use in a home environment.

2. SAFETY INFORMATION

Your safety is paramount. Adhere to the following guidelines:

- **Electrical Safety:** Ensure the power outlet matches the steamer's voltage requirements. Do not operate with damaged cords or plugs. Keep electrical components away from water.
- **Temperature Control:** The sauna operates at high temperatures. Avoid direct contact with the steam outlet. Allow the tent to cool before disassembling.
- **Environmental Conditions:** Using the sauna in cold environments (below 10°C / 50°F) may prevent it from reaching its ideal maximum temperature. In such conditions, allow 25-30 minutes for the tent to fully warm up.
- **Water Level:** Do not overfill or underfill the steamer's water tank. Ensure the water level is between the MIN and MAX indicators.
- **Ventilation:** Ensure adequate ventilation in the room where the sauna is used. The sauna tent includes a PVC vent window for fresh air.

- **Health Considerations:** Consult a physician before use if you have any medical conditions, are pregnant, or are taking medication. Discontinue use immediately if you feel unwell.
- **Children and Pets:** Keep children and pets away from the sauna during operation and while it is cooling down.
- **Anti-Dry Burn & Overheat Protection:** The steamers are equipped with safety features to prevent dry burning and overheating. If the water level is too low or the temperature exceeds safe limits, the steamer will automatically shut off.

3. PACKAGE CONTENTS

Verify that all components are present before assembly:

- Sauna Tent (1 unit)
- 1500W Steamers (2 units)
- Folding Chairs (2 units)
- Non-Slip Mat (1 unit)
- Remote Control (1 unit)
- Stainless Steel Support Rods (various lengths)
- Connectors (for frame assembly)
- Clear Hoses (for steam delivery)
- Instruction Manual (this document)

Full Set for Two • Share Immediately

Everything for Two: 2x1500W Steamers, 2 Chairs, Mat, Remote



Image: A visual representation of all items included in the Dikutar 2 Person Portable Sauna Box package.

4. SETUP INSTRUCTIONS

Follow these steps for quick and easy assembly:

1. **Unpack Components:** Carefully remove all items from the packaging and ensure no parts are missing.
2. **Assemble the Frame:** Connect the stainless steel support rods using the provided connectors to form the base, sides, and top of the sauna tent frame. The frame is designed for a 4.5'x3'x6' structure. Refer to the diagram for correct rod placement.
3. **Install the Tent:** Drape the 5-layer insulated tent over the assembled frame. Ensure the tent is properly aligned and secured. The tent features a 3-side zipper design for easier installation.
4. **Position Steamers:** Place the two 1500W steamers outside the tent, near the designated steam inlets.
5. **Connect Hoses:** Attach the clear hoses from each steamer's steam outlet to the corresponding inlets on the sauna tent. Ensure connections are secure to prevent steam leakage.

6. **Place Accessories:** Inside the tent, place the two folding chairs and the non-slip mat.



Image: Visual guide for assembling the sauna frame and placing the tent.

4.1. Steamer Preparation

- Open the lid of each steamer and fill the water tank with clean tap water up to the MAX line. Do not exceed the MAX line.
- You may add essential oils or herbs to the designated compartment in the steamer for aromatherapy, if desired.
- Close the steamer lids securely.

5. OPERATING INSTRUCTIONS

To begin your sauna session:

1. **Power On:** Plug both steamers into a suitable power outlet. Turn on the power switch on each steamer.
2. **Pre-heating:** Allow the steamers to heat up. The dual 1500W steamers typically heat the tent to 41-43°C (105-109°F) in 10-20 minutes. In colder conditions, allow 25-30 minutes for full heat.
3. **Adjust Settings:** Use the remote control to adjust the temperature level (9 levels available) and set the timer (up to 40 minutes).
4. **Enter Sauna:** Once the desired temperature is reached, open the tent zipper and enter. Close the zipper behind you.
5. **During Session:** Relax on the folding chairs. You can use the inner storage pockets for personal items and the towel hooks for convenience. The PVC vent window can be opened for additional airflow if needed.
6. **After Session:** When your session is complete or the timer runs out, exit the sauna. Turn off the steamers and unplug them from the power outlet. Allow the tent and steamers to cool down completely before cleaning or storage.

Dual Power • Faster & Hotter

2x1500W! Heats in 10-20 Mins to 41°C, Hotter Than Others (37°C)

2x1500W FAST Heating in 10-20 Mins

Time (Mins)	Our (°C)	Other (°C)
0	0	0
1	~15	~10
5	~30	~20
10	~38	~25
20	~41	~28

TIPS

Usage Tips:

- Avoid use in cold weather, as it prevents ideal heating.
- In cold conditions, allow 25-30 mins to reach full heat.

Image: Heating performance chart and tips for optimal sauna use.

5.1. Using the Remote Control

The remote control allows you to conveniently adjust the steamer settings from inside or outside the tent. Functions typically include power on/off, temperature level adjustment, and timer settings.



Image: Details of the sauna tent's convenience features, including pockets and zippers.

5.2. Video Guide

For a visual demonstration of the product and its features, please watch the video below:

Your browser does not support the video tag.

Video: An overview of the Diutar 2 Person Portable Sauna Box, demonstrating its features and benefits.

6. MAINTENANCE

Proper maintenance ensures the longevity and hygiene of your sauna:

- **Cleaning the Tent:** The 5-layer ultrasonic cotton fabric is waterproof and easy to clean. After each use, wipe down the interior of the tent with a damp cloth. For deeper cleaning, use a mild, non-abrasive cleaner. Ensure the tent is completely dry before folding and storing to prevent mildew.
- **Cleaning Steamers:** Regularly empty any remaining water from the steamer tanks. Clean the interior of the tanks to prevent mineral buildup. Descale the steamers periodically using a vinegar solution or a commercial descaling agent, following the product instructions.
- **Storage:** Once completely dry, disassemble the frame and fold the tent compactly. Store all components in a cool, dry place away from direct sunlight.

5-Layer Waterproof • Better Heat Retention

5-Layer Premium Fabric:
Waterproof & Excellent Heat
Retention (40 Mins)



Image: Detailed view of the 5-layer fabric construction for insulation and waterproofing.

7. TROUBLESHOOTING

If you encounter issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Sauna not heating to desired temperature	• Cold ambient environment • Insufficient pre-heating time • Low water level in steamer • Steamer malfunction	• Ensure room temperature is adequate. • Allow 25-30 minutes for pre-heating in cold conditions. • Check and refill steamer water tanks. • Contact customer support if steamer is faulty.
Steamer not producing steam	• No water in tank • Steamer not powered on • Overheat protection activated • Steamer malfunction	• Fill water tank. • Ensure steamer is plugged in and power switch is on. • Allow steamer to cool down, then restart. • Contact customer support.
Zipper or tent damage	• Wear and tear • Improper handling	• Handle zippers carefully. • For minor tears, use a waterproof repair kit. For significant damage, contact customer support.

8. SPECIFICATIONS

- **Model:** Portable-Sauna-002
- **Capacity:** 2 Person
- **Dimensions (Assembled):** 54 x 36 x 72 inches (4.5 x 3 x 6 feet)
- **Item Weight:** 24.2 pounds
- **Steamer Power:** Dual 1500W (3L capacity each)
- **Heating Time:** 10-20 minutes to 41-43°C (105-109°F)
- **Tent Material:** 5-Layer Ultrasonic Cotton Fabric (PU-Encrypted Satin-Cotton-Polyester Wadding-420D Oxford-PU)
- **Frame Material:** 0.6mm Stainless Steel
- **Safety Features:** Anti-Dry Burn, Overheat Protection

Spacious for Two

Extra Large 4.5'x3'x6' Size, Comfortably Fits Two Adults



Image: Dimensions of the spacious 2-person sauna tent.

9. WARRANTY AND SUPPORT

Information regarding product warranty and customer support was not available in the provided product data. Please refer to the product packaging or the manufacturer's official website for details on warranty coverage and how to contact customer service for assistance.

© 2026 Dikutar. All rights reserved. This manual is for informational purposes only.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FR9JFCVW>

More documents and user manuals: **<https://manuals.plus/>**