



[Manuals.plus](#) /

› [Kitstorack](#) /

› Kitstorack 3-Tier Under Sink Organizer Instruction Manual

Kitstorack Under Sink Organizer

Kitstorack 3-Tier Under Sink Organizer Instruction Manual

Model: Under Sink Organizer

[Product Overview](#) [Safety Information](#) [Package Contents](#) [Specifications](#) [Setup & Assembly](#) [Operating Instructions](#) [Maintenance](#) [Troubleshooting](#) [Warranty & Support](#)

1. PRODUCT OVERVIEW

The Kitstorack 3-Tier Under Sink Organizer is designed to maximize storage space in various areas of your home, including under sinks in kitchens and bathrooms, pantries, and laundry rooms. Its upgraded 3-tier design offers increased vertical storage capacity. The organizer features adjustable heights for flexible storage of items of different sizes, from tall bottles to smaller containers. Smooth-gliding pull-out drawers provide easy access to items, eliminating the need to bend or reach into deep cabinets. Constructed from thickened, heavy-duty metal with a reinforced frame, it ensures stability and durability, capable of holding up to 60 lbs. Enhanced stability is provided by 4 large suction cups and 2 nano adhesive films.



Image 1.1: The Kitstorack 3-Tier Under Sink Organizer shown installed in a kitchen cabinet, demonstrating its space-saving design.

2. SAFETY INFORMATION

- Ensure all components are securely fastened during assembly to prevent instability.
- Do not exceed the maximum weight capacity of 60 lbs (27 kg) to avoid damage or injury.
- Place heavier items on the bottom tier for optimal stability.
- Keep small parts away from children during assembly.
- Avoid placing corrosive or highly flammable liquids directly on the metal surface without a protective liner.
- Always measure your cabinet space, including plumbing and other obstructions, before installation to ensure a proper fit.

Unique Heavy-Duty Design

Ensuring you stronger, more dependable storage for years




Unique design for carry more



Heavier, solid-core construction proves top-tier quality

1 inch

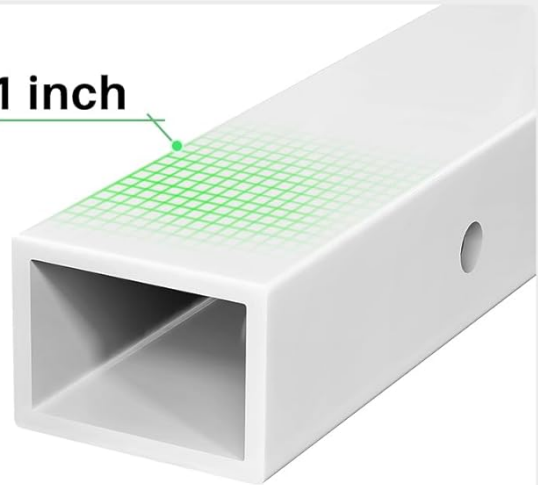

Thicker, reinforced steel guarantees exceptional strength and longevity

Image 2.1: Important measurements for your cabinet space to ensure the organizer fits correctly, considering pipes and other obstructions.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact customer support.

- Main Frame Components (L-shaped supports, connecting rods)
- 3 x Mesh Baskets (1 large, 2 small)
- 3 x Removable Plastic Liners
- Screws and Allen Wrench for Assembly
- 4 x Suction Cups
- 2 x Nano Adhesive Films

- Instruction Manual

4. SPECIFICATIONS

Feature	Detail
Product Dimensions	15.6 x 11.8 x 16.9 inches (39.6 x 30 x 42.9 cm)
Item Weight	10.87 pounds (4.93 kg)
Material	Thickened Metal (Steel)
Tiers	3 (Height Adjustable)
Color	White
Maximum Load Capacity	60 lbs (27 kg)

Upgrade 3-Tier Under Sink Organizer

Fully utilized vertical space of under sink

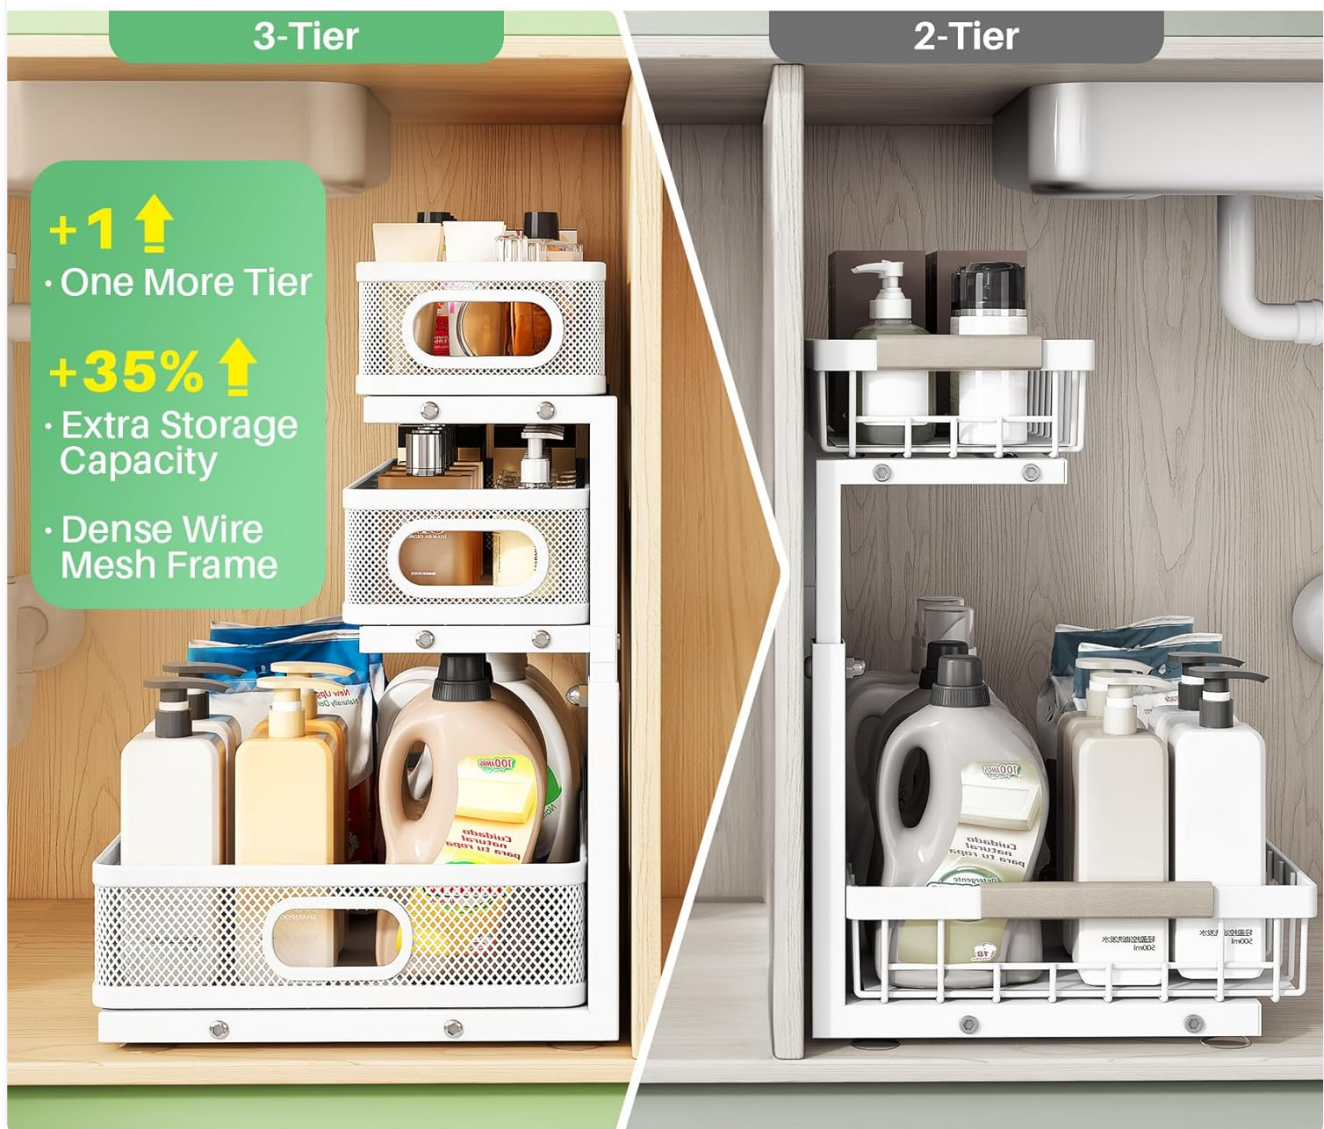


Image 4.1: Detailed dimensions and height adjustment options for the Kitstorack 3-Tier Under Sink Organizer.

5. SETUP & ASSEMBLY

Follow these steps to assemble your Kitstorack 3-Tier Under Sink Organizer:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Assemble Side Frames:** Connect the L-shaped side frames using the provided screws and Allen wrench. Ensure they are securely tightened.
3. **Attach Connecting Rods:** Insert the horizontal connecting rods between the two side frames. These rods will support the baskets.
4. **Install Baskets:** Slide the mesh baskets onto the connecting rods. The baskets are designed to slide smoothly.
5. **Adjust Height:** The middle and top baskets feature multiple height settings. Adjust the height of each basket

by repositioning the screws in the desired holes on the side frames. This allows customization for items of varying sizes.

6. **Insert Liners:** Place the removable plastic liners into the bottom of each mesh basket.
7. **Secure to Surface (Optional):** For enhanced stability, attach the 4 suction cups to the bottom of the organizer's base. Additionally, apply the 2 nano adhesive films to the base for extra grip on smooth surfaces.

Your browser does not support the video tag.

Video 5.1: Official assembly guide for the Kitstorack 3-Tier Under Sink Organizer, demonstrating step-by-step installation.

6. OPERATING INSTRUCTIONS

The Kitstorack 3-Tier Under Sink Organizer is designed for ease of use and efficient storage:

- **Loading Items:** Place your desired items into the mesh baskets. Utilize the adjustable height feature to accommodate taller bottles on the bottom tier and smaller items on the upper tiers.
- **Accessing Items:** Gently pull the desired basket forward to slide it out. The smooth sliding mechanism allows for easy access to items stored at the back without needing to remove other items.
- **Maximizing Space:** The 3-tier design maximizes vertical space. Consider organizing by category (e.g., cleaning supplies, toiletries, pantry items) for optimal efficiency.

3-Tier Under Sink Organizer for Easy Access



Image 6.1: The smooth sliding mechanism of the drawers, allowing easy access to stored items.

Your browser does not support the video tag.

Video 6.2: Product demonstration showing the adjustable tiers and smooth sliding drawers in action, organizing various items.

7. MAINTENANCE

- **Cleaning:** Wipe down the metal frame and mesh baskets with a damp cloth and mild detergent. Avoid abrasive cleaners that could damage the finish.
- **Liner Care:** The removable plastic liners can be easily taken out and washed with soap and water. Ensure they are dry before placing them back into the baskets.
- **Regular Checks:** Periodically check all screws and connections to ensure they remain tight. Re-tighten if necessary.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Organizer is wobbly.	Loose screws or uneven surface.	Ensure all screws are tightened. Apply suction cups and nano adhesive films to the base for added stability on smooth surfaces.
Baskets do not slide smoothly.	Debris on rails or misaligned installation.	Clean the sliding rails. Check that the side frames are assembled correctly and are parallel.
Items do not fit on a tier.	Incorrect height adjustment.	Adjust the height of the baskets using the multiple adjustment holes on the side frames.

9. WARRANTY & SUPPORT

Kitstorack products are designed for durability and performance. For warranty information, product support, or to report any issues, please contact Kitstorack customer service through the retailer's platform or visit the official Kitstorack website. Please retain your proof of purchase for any warranty claims.