

[manuals.plus](#) /

› [Azmsary](#) /

› [Azmsary Slushie and Ice Cream Machine \(Model ASDA1\) User Manual](#)

Azmsary ASDA1

Azmsary Slushie and Ice Cream Machine (Model ASDA1) User Manual

Model: ASDA1

1. INTRODUCTION

Thank you for choosing the Azmsary Slushie and Ice Cream Machine. This appliance is designed to create a variety of frozen beverages and desserts, including slushies, ice cream, frappes, milkshakes, and frozen juices, with ease and efficiency. This manual provides essential information for safe operation, setup, usage, maintenance, and troubleshooting to ensure optimal performance and longevity of your machine.



Image 1: Azmsary Slushie and Ice Cream Machine, showcasing its sleek design and various frozen treats it can produce.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance to prevent injury or damage. Keep this manual for future reference.

- Always ensure the machine is placed on a stable, level surface away from heat sources and direct sunlight.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Unplug the machine from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Keep hands and utensils out of the container during operation to prevent injury and damage to the machine.
- Do not operate the machine with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is not intended for use by persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Use only attachments and accessories recommended by the manufacturer.
- Ensure the lid is securely in place before operating the machine.
- Do not overfill the container. Refer to the MAX FILL line.
- Using unsuitable ingredients (e.g., too low sugar content or too high alcohol content) may cause damage to the machine. Refer to the sugar and alcohol content guidelines in the operating section.

3. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Azmsary Slushie and Ice Cream Machine:

- **Main Unit:** Houses the refrigeration system and control panel.
- **Transparent Container:** Where ingredients are mixed and frozen. Features MAX FILL and MIN FILL indicators.
- **Mixing Paddle:** Continuously stirs the ingredients to achieve the desired consistency.
- **Dispensing Spout:** For serving your frozen treats.
- **Drip Tray:** Collects any drips or spills for easy cleanup.
- **Control Panel with LED Display:** Allows selection of programs, displays temperature, and provides status indicators.
- **Lid:** Covers the transparent container during operation. Includes an opening for adding liquids.



Image 2: Close-up of the control panel, showing the LED display and various program selection buttons.

4. SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging materials for future storage or transport.
2. **Initial Cleaning:** Before first use, clean all removable parts (transparent container, mixing paddle, lid, dispensing spout, drip tray) with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main unit with a damp cloth.
3. **Assembly:**
 - Place the main unit on a clean, dry, and stable surface.
 - Insert the mixing paddle into the transparent container.
 - Attach the transparent container to the main unit, ensuring it is securely locked in place.
 - Place the lid on top of the container.
 - Position the drip tray at the base of the dispensing spout.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet. The LED display will illuminate.

3 Cleaning Options

The self-cleaning function helps you reduce cleaning time and make it easier

RINSE



Dishwasher Safe



Effortless Cleaning

Image 3: Visual guide illustrating the simple 3-step process for using the machine: Add liquids, select a mode, and wait for the frozen treat.

5. OPERATING INSTRUCTIONS

The Azmsary machine features 6 preset programs for various frozen treats. Follow these steps for operation:

1. **Prepare Ingredients:** Ensure your liquid ingredients are pre-chilled for best results, though pre-chilling is not strictly required due to the machine's quick-freezing technology.
2. **Add Ingredients:** Pour your mixed liquid into the transparent container through the lid opening. Do not exceed the MAX FILL line (85oz for slush, 64oz for liquid) and ensure it is above the MIN FILL line (16oz).
3. **Select Program:** On the LED display, choose one of the 6 preset programs by pressing the corresponding button:
 - **Ice Cream:** For creamy soft-serve ice cream.
 - **Slush:** For classic slushie consistency.
 - **Frappe:** Optimized for coffee-based or similar blended drinks.
 - **Spiked Slush:** For alcoholic frozen beverages.
 - **Milkshake:** For thick and smooth milkshakes.
 - **Frozen Juice:** For refreshing frozen fruit juices.
4. **Start Operation:** Press the Start/Pause button. The machine will begin the freezing and mixing process. The preparation time typically ranges from 15 to 45 minutes, depending on the selected program, ingredients, and initial temperature.
5. **Dispense:** Once the program is complete and the desired consistency is reached, place a cup under the dispensing spout and pull the lever to serve.
6. **Night Mode (Keep Cool Function):** If you wish to keep your frozen treat chilled for an extended period (up to 12 hours) after preparation, activate the Night Mode. This function maintains a stable temperature (3-4°C) while reducing energy consumption.

Sugar and Alcohol Content Guidelines:

To ensure proper freezing and prevent damage to the machine, adhere to the following guidelines:

- **Sugar Content:** For slushies, the sugar content should be above 4%. Sugar-free substitutes or artificial sweeteners may not allow for proper freezing.
- **Alcohol Content:** For alcoholic beverages, the alcohol percentage should be below 16%. High alcohol content can prevent freezing.



Image 4: Chart detailing recommended sugar and alcohol percentages for optimal machine performance and drink consistency.

6. MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and extends the life of your machine. The Azmsary machine offers convenient cleaning options:

1. Automatic Cleaning (Rinse Mode):

- After dispensing, pour clean water into the container up to the MIN FILL line.
- Select the "Rinse" mode on the control panel. The machine will automatically stir and clean the interior.
- Once complete, drain the water through the dispensing spout. Repeat if necessary.

2. Manual Cleaning:

- Unplug the machine.
- Disassemble all removable parts: transparent container, mixing paddle, lid, dispensing spout, and drip tray.
- Wash these parts with warm, soapy water. The removable parts are dishwasher-safe for added convenience.
- Rinse thoroughly and allow all parts to air dry completely before reassembling or storing.
- Wipe the exterior of the main unit with a damp cloth. Do not use abrasive cleaners or scourers.



Our Ice Cream+Slush Machine *One Machine Does It All*



Dual Copper Tubing+Brushless Motor
Industrial-Grade Refrigeration System



**Temperature Display+
10 Adjustable Levels**
Industrial-Grade Refrigeration System



Night Mode+RINSE Mode
Keeps slush cold and makes cleaning easy



85oz Slush Capacity
Supports 8 cups at a time



**Food-Grade Transparent
MBS Water Tank**
Keeps slush cold and makes cleaning easy



Automatic Screen Lock During Operation
Prevents accidental touches and reduces operating errors



Removable Parts for Easy Cleaning
Dishwasher-safe or hand-washable to help prevent odors.

Other Single Slush machine



Normal Brushed Motor
Short service life



No Temperature Display
Unable to control temperature



No Night Mode+RINSE Mode
Cumbersome to use



64oz Basic capacity
Needs to be made multiple times



Ordinary Water Tank
Prone to Odors • Hard-to-Clean • Opaque



No Screen Lock
Prone to Accidental Touches



Non-Removable Parts
Difficult to Clean • Prone to Odors

Image 5: Illustration of the three cleaning options: automatic rinse mode, dishwasher-safe removable parts, and effortless manual cleaning.

7. TROUBLESHOOTING

If you encounter issues with your machine, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine does not turn on.	Not plugged in; power outlet issue.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Ingredients are not freezing.	Incorrect sugar/alcohol content; machine not running long enough; ambient temperature too high.	Verify sugar and alcohol content according to guidelines. Allow more time for freezing. Ensure machine is in a cool, well-ventilated area.
Slush is too thin or too thick.	Incorrect ingredient ratio; program selection.	Adjust ingredient ratios. Experiment with different program settings or adjust freezing time.
Machine is making unusual noise.	Parts not assembled correctly; foreign object in container.	Unplug and check that all parts are correctly assembled. Ensure no foreign objects are in the container.
Dispensing spout is blocked.	Frozen residue; thick consistency.	Unplug and carefully clear any blockage. Ensure ingredients are not excessively thick.

If the problem persists after attempting these solutions, please contact Azmsary customer support.

8. SPECIFICATIONS

- **Brand:** Azmsary
- **Model Name:** FS306-US
- **Item Model Number:** ASDA1
- **Color:** Black
- **Capacity:** 85oz (Slush), 64oz (Liquid)
- **Material:** Stainless Steel
- **Item Weight:** 29.5 pounds (13.4 Kilograms)
- **Product Dimensions:** 11.02 x 20.08 x 21.26 inches
- **Operation Mode:** Automatic
- **Special Features:** Automatic Clean, Digital Display, Keep Cool Function, Low Noise, Touchpad Control
- **Included Components:** Ice cream machine, Slushie machine

9. WARRANTY AND SUPPORT

Azmsary is committed to providing high-quality products and customer satisfaction. Your Azmsary Slushie and Ice Cream Machine comes with the following:

- **1-Year Warranty:** Covers manufacturing defects and malfunctions under normal use.
- **30-Day Money-Back Guarantee:** For returns within 30 days of purchase.
- **Lifetime Technical Support:** Access to technical assistance for the lifespan of your product.

For warranty claims, technical assistance, or any product-related inquiries, please contact Azmsary customer service through the official website or your purchase platform.

